ORDER NO.PHAMOS0603017A2

Service Manual

Microwave Oven

Simplified

NN-GD566M
NN-GD556W
NN-GD546W
NN-SD466M
NN-SD456W
NN-SD446W

BPQ(U.K.)
EPG(France, Italy, Finland, Spain, Portugal, Greece, Poland, Holland)
WPG(Switzerland)
SPG(Norway, Finland, Sweden, Denmark)

Please file and use this specified manual together with the service manual for Model NN-V653WF (ORDER NO. SIMMC0303012C2).

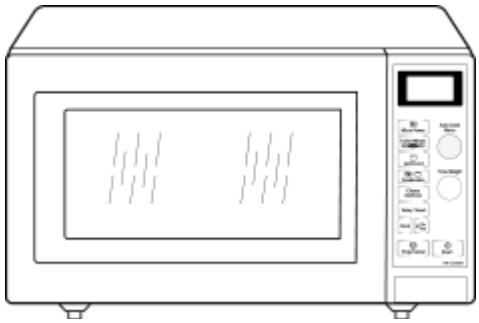

Specifications:

Specifications \ Models		GD566M BPQ GD556W BPQ	GD546W BPQ	GD566M EPG GD556W EPG	GD566M WPG GD556W SPG	SD466M BPQ SD456W BPQ	SD446W BPQ	SD456W EPG
Power Source:		230V AC Single Phase,50Hz ..... For EPG,SPG,WPG models 230V-240V AC Single Phase,50Hz ..... For BPQ models						
Power Requirement:	Microwave	1260W	1160W	1260W	1260W	1260W	1160W	1260W
	Heater	1350W	1150W	1350W	1350W	——	——	——
Output:	Microwave	1000W	1000W	1000W	1000W	1000W	1000W	1000W
	Heater	1300W	1100W	1300W	1300W	——	——	——
Microwave Frequency:		2450MHz						
Timer:		30min.(High Power)/99min.						
Outside Dimensions:		510mm(W) x 380mm(D) x 304mm(H)						
Oven Cavity Dimensions:		359mm(W) x 352mm(D) x 217mm(H)						
Weight:		12.5kg				11.5kg		
PbF		This product with PbF						
Specifications subject to change without notice.								

© 2006 Panasonic Home Appliances Microwave Oven (Shanghai) Co., Ltd.
All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

WARNING

1. This product should be serviced only by trained, qualified personnel.
2. Check for radiation leakage before and after every servicing according to the "procedure for measuring radiation leakage."
3. If the unit cannot be repaired on site, advise the customer not to use until unit is repaired.
4. There are special components used in the microwave oven which are important for safety. These parts are marked with a ⚠ on the replacement parts list. It is essential that these critical parts be replaced only with the manufacture's specified parts to prevent microwave leakage, shock, fire, or other hazards. Do not modify the orginal design.

This service manual covers products for following markets.
When troubleshooting or replacing parts, please refer to the country/area identifications shown below for your applicable product specification.

BPQ ..... For U.K.

EPG ..... For France, Italy, Finland, Spain, Portugal, Greece, Poland, Holland

WPG ..... For Switzerland

SPG ..... For Norway, Finland, Sweden, Denmark

CAUTION

About lead free solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

Caution:
- Pb free solder has a higher melting point than standard solder; Typically the melting point is 30 - 40˚C higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 370 ± 10˚C.
- Pb free solder will tend to splash when heated too high (about 600˚C).

Panasonic®

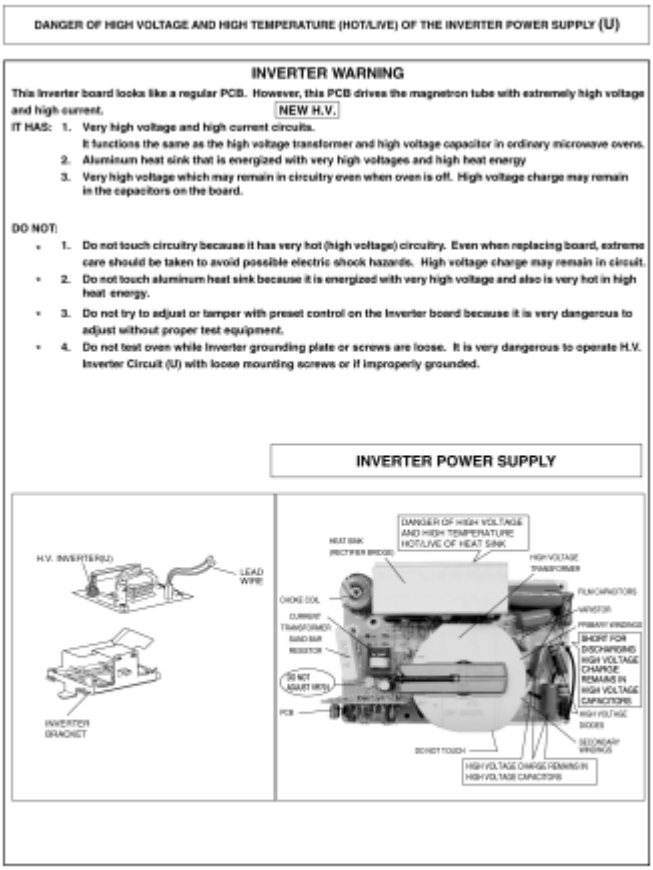

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

INVERTER WARNING

This Inverter board looks like a regular PCB. However, this PCB drives the magnetron tube with extremely high voltage and high current. NEW H.V.

IT HAS: 1. Very high voltage and high current circuits.
It functions the same as the high voltage transformer and high voltage capacitor in ordinary microwave ovens.
2. Aluminum heat sink that is energized with very high voltages and high heat energy
3. Very high voltage which may remain in circuitry even when oven is off. High voltage charge may remain in the capacitors on the board.

DO NOT:

- 1. Do not touch circuitry because it has very hot (high voltage) circuitry. Even when replacing board, extreme care should be taken to avoid possible electric shock hazards. High voltage charge may remain in circuit.
- 2. Do not touch aluminum heat sink because it is energized with very high voltage and also is very hot in high heat energy.
- 3. Do not try to adjust or tamper with preset control on the Inverter board because it is very dangerous to adjust without proper test equipment.
- 4. Do not test oven while Inverter grounding plate or screws are loose. It is very dangerous to operate H.V. Inverter Circuit (U) with loose mounting screws or if improperly grounded.

INVERTER POWER SUPPLY

H.V. INVERTER(U)
LEAD WIRE
INVERTER BRACKET
DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE HOT/LIVE OF HEAT SINK
HEAT SINK (RECTIFIER BRIDGE)
HIGH VOLTAGE TRANSFORMER
CHOKE COIL
CURRENT TRANSFORMER
SHUNT BAR RESISTOR
DO NOT ADJUST (VOL)
PCB
SHORT FOR DISCHARGING HIGH VOLTAGE CHARGE REMAINS IN HIGH VOLTAGE CAPACITORS
DO NOT TOUCH
HIGH VOLTAGE CHARGE REMAINS IN HIGH VOLTAGE CAPACITORS

1 SCHEMATIC DIAGRAM (FOR GRILL MODELS)

2 SCHEMATIC DIAGRAM (FOR SOLO MODELS)

3 CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING

NOTE: Door is closed.
Unit is not operating.
⏚ Ground
⏚ Chassis

CAUTION:
HIGH VOLTAGE AREA

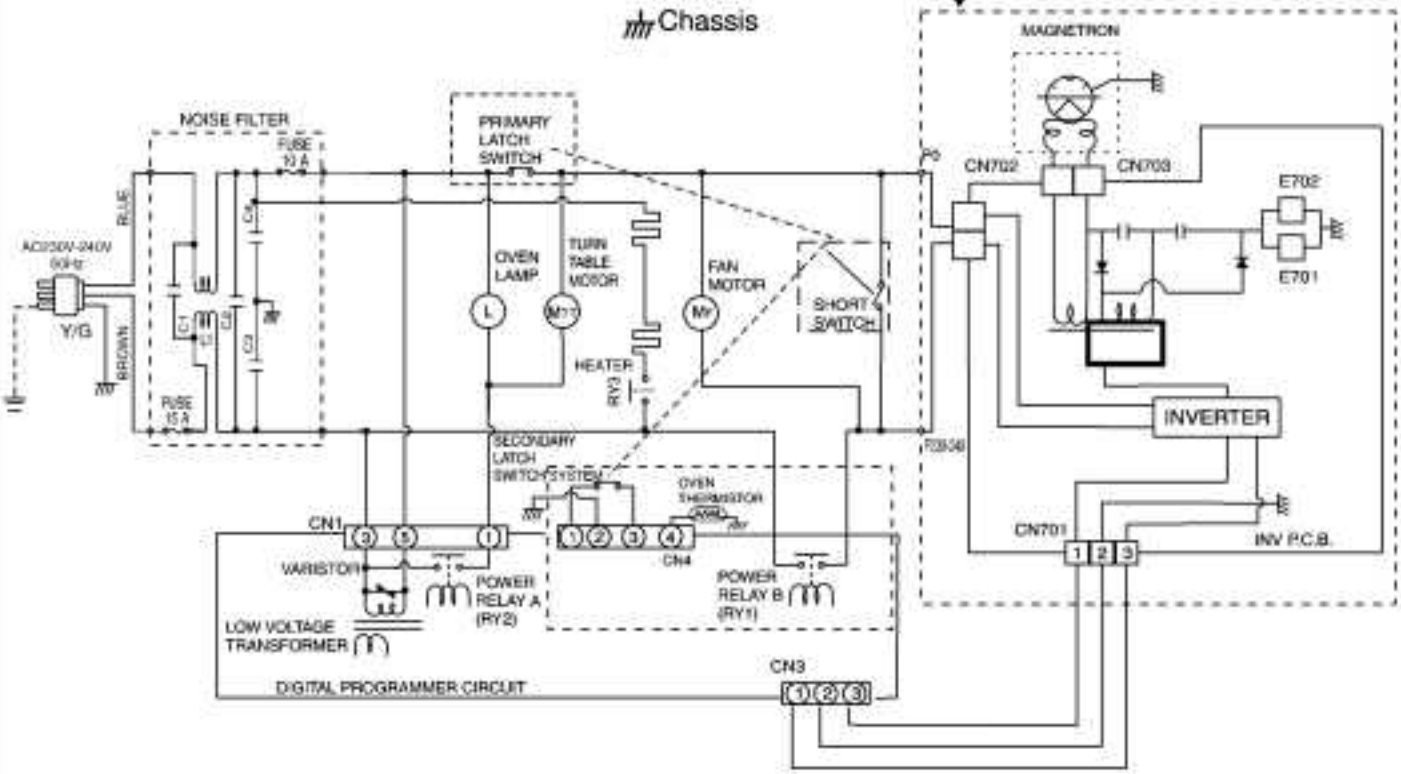

WIRING DIAGRAM

NOTE: * When replacing, check the lead wire color as shown.
***Colors shown by ( ) indicate colors of lead wire connector housing.**

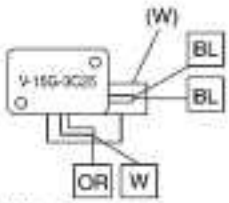

PRIMARY LATCH SWITCH TOP

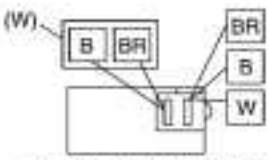

POWER RELAY B(RY1)

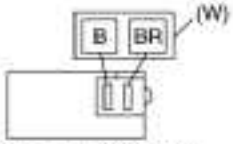

POWER RELAY (RY3)

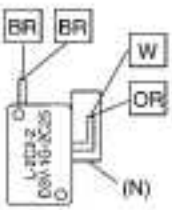

SHORT SWITCH MIDDLE

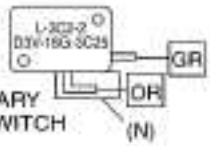

SECONDARY LATCH SWITCH BOTTOM

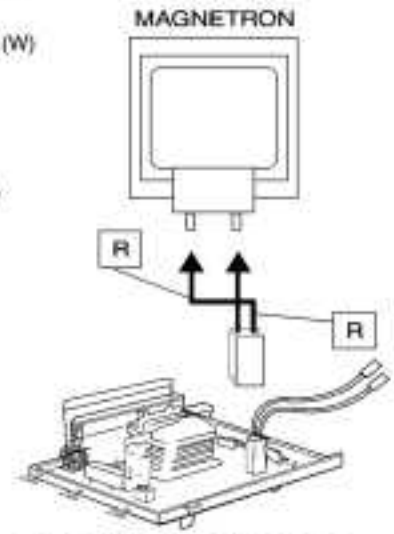

HIGH VOLTAGE INVERTER

SYMBOL	COLOR
OR	ORANGE
BL	BLUE
BR	BROWN
W	WHITE
Y	YELLOW
R	RED
GR	GRAY
B	BLACK
N	NATURAL
G	GREEN

(S-8G0)
(S-8G1)
(S-8G2)

NOTE: Door is closed.
Unit is not operating.
Ground
Chassis

CAUTION:
HIGH VOLTAGE AREA

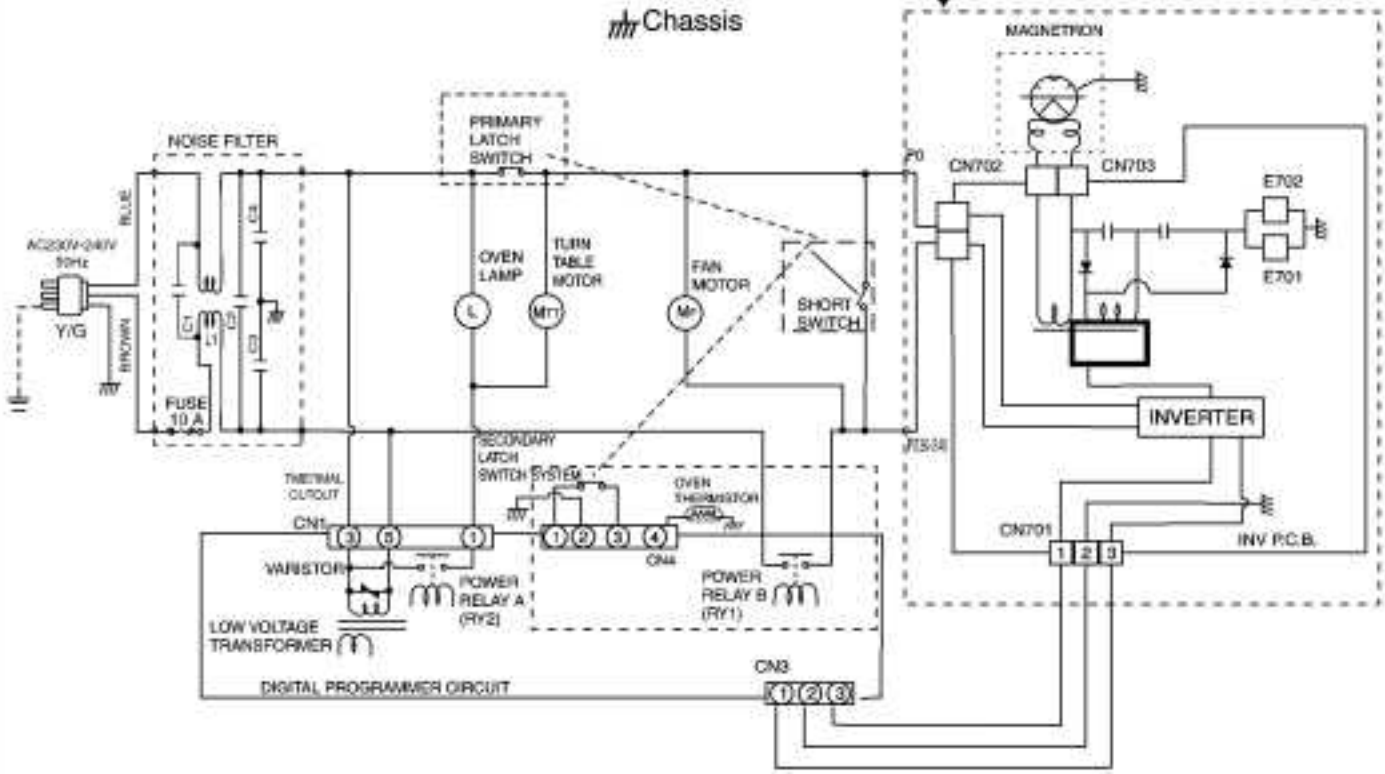

WIRING DIAGRAM

NOTE: * When replacing, check the lead wire color as shown.
***Colors shown by ( ) indicate colors of lead wire connector housing.**

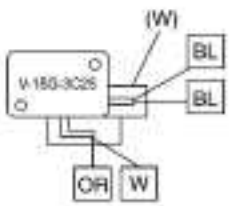

PRIMARY LATCH SWITCH
TOP

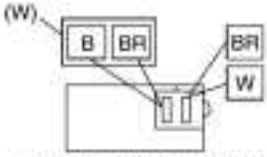

POWER RELAY B(RY1)

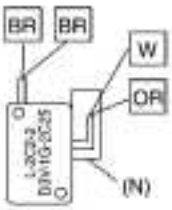

SHORT SWITCH
MIDDLE

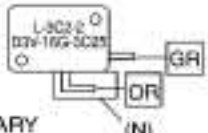

SECONDARY LATCH SWITCH
BOTTOM

MAGNETRON

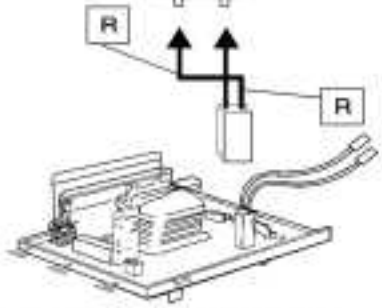

HIGH VOLTAGE INVERTER

SYMBOL	COLOR
OR	ORANGE
BL	BLUE
BR	BROWN
W	WHITE
Y	YELLOW
R	RED
GR	GRAY
B	BLACK
N	NATURAL
G	GREEN

(S-8G3)
(S-8G4)
(S-8G5)

Unlike many other appliances, the microwave oven is a high voltage, high current device. It is free from danger in ordinary use, though extreme care should be taken during repair.

Caution

Servicemen should remove their watches whenever working close to or replacing the magnetron.

3.1 Check the grounding

Do not operate on a two wire extension cord. The microwave oven is designed to be grounded when used. It is imperative, therefore, to ensure the appliance is properly grounded before beginning repair work.

3.2 Inverter warnings

DANGER, HIGH VOLTAGE AND HIGHTEMPERATURE (HOT/LIVE) OF THE INVERTERPOWER SUPPLY (U)

The High Voltage Inverter Power Supply handles very high voltage and current for the magnetron tube. Though it is free from danger in ordinary use, extreme care should be taken during repair.

The aluminum heat sink is also energized with high voltage (HOT), do not touch when the AC input terminals are energized. The power device Collector is directly connected to the aluminum heat sink.

The aluminum heat sink may be HOT due to heat energy, therefore, extreme care should be taken during servicing.

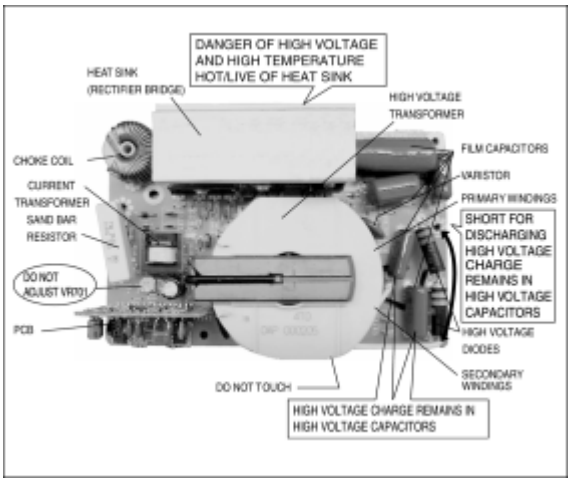

H.V. Inverter warning

WARNING FOR INVERTER POWER SUPPLY (U) GROUNDING

Check the High Voltage Inverter Power Supply circuit grounding. The high voltage inverter power supply circuit board must have a proper chassis ground. The inverter grounding bracket must be connected to the chassis. If the inverter board is not grounded it will expose the user to very high voltages and cause extreme DANGER! Be sure that the inverter circuit is properly grounded via the inverter grounding bracket.

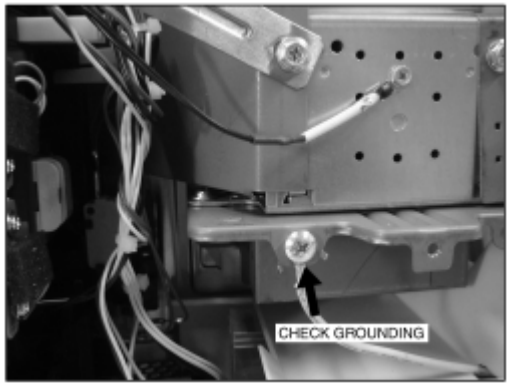

Grounding of the inverter circuit board

WARNING! DISCHARGE THE HIGH VOLATGE CAPACITORS

For about 30 seconds after the oven is turned off, an electric charge remains in the high voltage capacitors in the Inverter Power Supply circuit board.

When replacing or checking parts, remove the power plug from the outlet and short the inverter output terminal of the magnetron filament terminals to the chassis ground with an insulated handle screwdriver to discharge. Please be sure

to touch the chassis ground side first and then short to the output terminals.

MAGNETRON FILAMENT TERMINAL
INSULATED HANDLE SCREWDRIVER
Touch chassis side first then short to the terminal of the magnetron filament terminal.

Discharging the high voltage capacitors

WARNING

There is high voltage present with high current capabilities in the circuits of the primary and secondary windings, choke coil and heat sinkof the inverter. It is extremely dangerous to work on or near these circuits with the oven energized. DO NOT measure the voltage in the high voltage circuit including the filament voltage of the magnetron.

WARNING

Never touch any circuit wiring with your hand or with an insulated tool during operation.

3.3 Part replacement.

When any part or component is to be replaced, always ensure that the power cord is removed from the wall outlet.

3.4 When the 10A fuse is blown due to the operation of the short switch:

WARNING

When the 10A 250V fuse is blown due to the operation of the interlock monitor switch, replace all of the components (primary latch switch, short switch and power relay B (RY1)).

1. This is mandatory. Refer to “adjustments and measurements” for the location of these switches.
2. When replacing the fuse, confirm that it has the appropriate rating for these models.
3. When replacing faulty switches, be sure the mounting tabs are not bent, broken or deficient in their ability to hold the switches.

3.5 Avoid inserting nails, wire etc. through any holes in the unit during operation.

Never insert a wire, nail or any other metal object through the lamp holes on the cavity or any holes or gaps, because such objects may work as an antennaand cause microwave leakage.

3.6 Confirm after repair

1. After repair or replacement of parts, make sure that the screws of the oven, etc. are neither loosen or missing. Microwave might leak if screws are not properly tightened.
2. Make sure that all electrical connections are tight before inserting the plug into the wall outlet.
3. Check for microwave energy leakage. (Refer to procedure for measuring microwave energy leakage).

CAUTION MICROWAVE RADIATION

USE CAUTION NOT TO BECOME EXPOSED TO RADIATION FROM THE MICROWAVE MAGNETRON OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

IMPORTANT NOTICE

The following components have potentials above 2000V while the appliance is operated.

- Magnetron
- High voltage transformer (Located on inverter (U))
- High voltage diodes (Located on inverter (U))
- High voltage capacitors (Located on inverter (U))

Pay special attention to these areas.

When the appliance is operated with the door hinges or magnetron installed incorrectly, the microwave leakage can exceed more than 5mW/cm ^{2} . After repair or exchange, it is very important to check if the magnetron and the door hinges are correctly installed.

3.7 Sharp edges

Caution

Please use caution when unpacking, installing or moving the unit, as some exposed edges may be sharp to the touch and cause injury if not handled with care.

4 MEASUREMENTS AND ADJUSTMENTS

4.1 Adjustment of primary latch switch, secondary latch switch and short switch.

1. Mount the Primary latch switch, the Secondary latch switch and the short switch to the door hook assembly as shown in ILL.

   NOTE:

   No specific individual adjustments during installation of the Primary latch switch, Secondary latch switch or Short switch to the door hook are required.

2. When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of the arrows in the illustration so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.

3. Reconnect the short switch and check the continuity of the monitor circuit and all latch switches again by following the component test procedures.

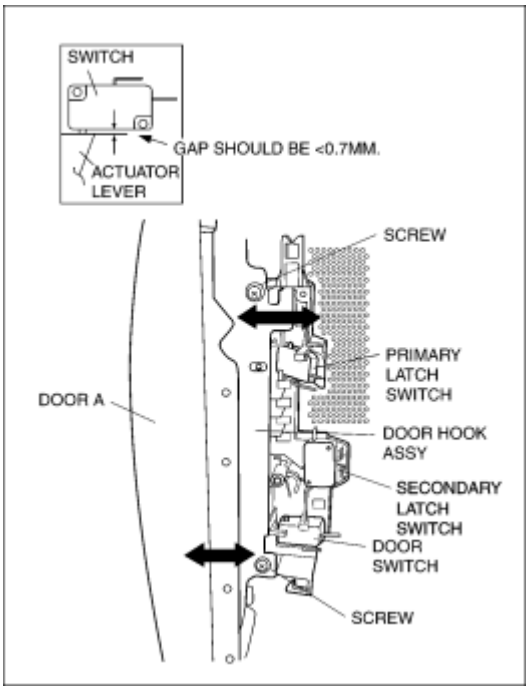

4.2 Measurement of microwave output

The output power of the magnetron can be determined by performing IEC standard test procedures. However,due to the complexity of IEC test procedures, it is recommended to test the magnetron using the simple method outlined below.

Necessary Equipment:

*1 liter beaker *Glass thermometer

*Wrist watch or stopwatch

NOTE:

Check the line voltage under load.Low voltage will lower the magnetron output. Take the temperature readings and heating time as accurately as possible.

1. Fill the beaker with exactly one liter of tap water.Stir the water using the thermometer and record the water's temperature. (recorded as T1).
2. Place the beaker on the center of glass tray.

   Set the oven for High power and heat it for exactly one minute.
3. Stir the water again and read the temperature of the water. (recorded as T2).
4. The normal temperature rise at High power level for each model, is as shown in table.

TABLE (1L-1min.test)

RATED OUTPUT	TEMPERATURE RISE
1000W	Min.8.6°C

5 EXPLODED VIEW AND PARTS LIST

6 PARTS LIST

NOTE:

1. When ordering replacement part(s), please use part number(s) shown in this part list.
   Do not use description of the part.
2. Important safety notice:
   Components identified by ⚠ mark have special characteristics important for safety.
   When replacing any of these components, use only manufacture's specified parts.

NOTE:

Please order all parts from MELUK in U.K.

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
1		F00064080BP	CAUTION LABEL	1	BPQ
1		F00069000EP	CAUTION LABEL	1	EPG,WPG,SPG
3		F04905R80SEP	ENERGY LABEL	1	GD566M EPG
3		F04905R80HEP	ENERGY LABEL	1	GD556W EPG
3		F04906A00HEP	ENERGY LABEL	1	SD456W EPG
6		F10015Q00APG	BASE	1	
7		F10084T00AP	RUBBER FOOT	4	
8		F110D6W70SXP	CABINET BODY	1	GD566M
8		F110D6W70HXP	CABINET BODY	1	GD556W,GD546W
8		F110D6W80SXP	CABINET BODY	1	SD466M
8		F110D6W80HXP	CABINET BODY	1	SD456W,SD446W
9	⚠	F200A5R60BP	OVEN	1	GD566M,GD556W
9	⚠	F200A8G20BP	OVEN	1	GD546W
9	⚠	F200A5Q70BP	OVEN	1	SD466M,SD456W
9	⚠	F200A6D60SXP	OVEN	1	SD446W
10		F20555Q00BP	COVER	1	
11		F21315G10XN	PULLY SHAFT	1	
12		F290D5Q00AP	ROLLER RING (U)	1	
13	⚠	F30205Q00AP	DOOR HOOK	1	
14		F31365Q00AP	HOOK LEVER A	1	
15		F400A5U00XN	FAN MOTOR	1	
16		F40085G10XN	FAN BLADE	1	
17		F40255Q00AP	AIR GUIDE A	1	
18		F40425Q00APG	AIR GUIDE F	1	
19		F612E5G10XN	INCANDESCENT LAMP (U)	1	
21		F41445Q00AP	UPPER ORIFICE	1	
22		F42095Q00AP	LOWER ORIFICE	1	
26	⚠	J61415G10XN	MICRO SWITCH	1	V-15G-3C25 (PRIMARY LATCH SWITCH)
27	⚠	J61414T00AP	MICRO SWITCH	1	D3V-16G-3C25 (SECONDARY LATCH SWITCH)
28	⚠	F61785U30XN	MICRO SWITCH	1	D3V-1G-2C25 (SHORT SWITCH)
29	⚠	2M236-M42J	MAGNETRON	1	
31	⚠	A62304210BP	FUSE	1	BPQ,EPG
31	⚠	F62306V60BP	FUSE	1	WPG,SPG
32	⚠	A6331-1T50	FUSE	1	GD566M,GD556W,GD546W (15A)
33		F607X8B00BP	NOISE FILTER (U)	1	GD566M,GD556W,GD546W
33		F607X8A00BP	NOISE FILTER (U)	1	SD466M,SD456W,SD446W
34		F63265U30XN	TURNTABLE MOTOR	1	

35	⚠	F900C5G50BP	AC CORD W/PLUG	1	SD466M BPQ,SD456W BPQ,SD446W BPQ
35	⚠	F900C5G10TN	AC CORD W/PLUG	1	SD456W EPG
35	⚠	F900C8G00BP	AC CORD W/PLUG	1	GD566M BPQ,GD556W BPQ,GD546W BPQ
35	⚠	F900C5R00EP	AC CORD W/PLUG	1	GD566M EPG,GD556W EPG/SPG
35	⚠	F900C5R80WP	AC CORD W/PLUG	1	GD566M WPG
36		F606Y4V00BP	H.V.INVERTER (U)	1	
37		F65855R00BP	INVERTER BRACKET	1	
41		XTWFA4+12T	SCREW	4	FOR MAGNETRON
44		XTWFA4+12D	SCREW	4	FOR CABINET BODY
45		XTCAFA4+12AFS	SCREW	1	GD566M,GD466M (FOR CABINET BODY SIDE)
45		XTCAFA4+12AFW	SCREW	1	GD556W,GD546W,SD456W,SD446W (FOR CABINET BODY SIDE)
51		F630G5R20BP	HEATER (AU)	2	GD566M BPQ,GD556W BPQ (650W,120V)
51		F630G5R20GP	HEATER (AU)	2	GD566M EPG/WPG,GD556W EPG/SPG (650W,120V)
51		F630G5R00BP	HEATER (AU)	2	GD546W BPQ (550W,120V)
52		F64605R00BP	HEATER MOUNTING PLATE	2	GD566M,GD556W,GD546W
55		F40245R00BPG	EXHAUST GUIDE A	1	GD566M,GD556W,GD546W
56		F01505R00BP	NO TOUCHING LABEL	1	GD566M BPQ,GD556W BPQ,GD546W BPQ
57		F01505R00EP	NO TOUCHING LABEL	1	GD566M EPG/WPG,GD556W EPG/SPG
58		F02395G50BP	AC CORD CAUTION LABEL	1	BPQ
59		F62865Q00BP	HEAT SHIELD	1	GD566M,GD556W,GD546W
60		F11404J60XN	STOPPER	2	
61		F03348G00BP	MENU LABEL	1	GD566M BPQ,GD556W BPQ
61		F03348G00EP	MENU LABEL	1	GD566M EPG,GD556W EPG
61		F03348G00WP	MENU LABEL	1	GD566M WPG,GD556W SPG
61		F03348G20BP	MENU LABEL	1	GD546W BPQ
61		F03348G40BP	MENU LABEL	1	SD466M BPQ,SD456W BPQ
61		F03348G40EP	MENU LABEL	1	SD456W EPG
61		F03348G50BP	MENU LABEL	1	SD446W BPQ
62		F22175R00APG	INSULATION PLATE	1	GD566M,GD556W,GD546W
63		F20345Q00CP	REINFORCE BRACKET	1	

6.1 H.V. Inverter main parts list

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
Q701		A691EM300GP	IGBT	1	
Q702			IGBT	1	
C701		ECWF5184N300	FILM CAPACITOR	1	
C702		ECQE2505T869	FILM CAPACITOR	1	
C703		ECWF2395N632	FILM CAPACITOR	1	
DB701		B0FBBS000001	RECTIFIER BRIDGE	1	
L701		F5020M300GP	CHOKE COIL	1	
R702		D0CM352JA002	SAND BAR RESISTOR	1	
T701		A609AM300GP	TRANSFORMER	1	(INCLUDING D701, D702, C706, C707)
D701, D702	⚠	B0FBAZ000001	DIODE	2	
C706		ECWH30562U03	FILM CAPACITOR	1	
C707		ECWH30432U04	FILM CAPACITOR	1	

7 DOOR ASSEMBLY

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
D1		F30185Q00AP	DOOR KEY A	1	
D2	⚠	F30015Q00SBP	DOOR A	1	GD566M,SD466M
D2	⚠	F30015Q00HBP	DOOR A	1	GD556W,GD546W,SD456W,SD446W
D3	⚠	F301P5R00AP	DOOR E (U)	1	GD566M,GD556W,GD546W
D3	⚠	F302K5Q00AP	DOOR E (U)	1	SD466M,SD456W,SD446W
D4		F30215G10XN	DOOR KEY SPRING	1	
D5	⚠	F30855Q00AP	DOOR C	1	
D6		F31454T00AP	DOOR SCREEN A	1	SD466M,SD456W,SD446W
D7		F31468G00BP	DOOR SCREEN B	1	GD566M BPQ,GD556W BPQ,GD546W BPQ
D7		F31468G00EP	DOOR SCREEN B	1	GD566M EPG/WPG,GD556W EPG/SPG
D7		F31468G40BP	DOOR SCREEN B	1	SD466M BPQ,SD456W BPQ,SD446W BPQ
D7		F31465Q00EP	DOOR SCREEN B	1	SD456W EPG

8 WIRING MATERIALS

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
W1	F030A8G00BP	LEAD WIRE HARNESS	1	GD566M,GD556W,GD546W
W1	F030A8G30BP	LEAD WIRE HARNESS	1	SD466M,SD456W,SD446W
W2	F030E5Q00AP	H.V.LEAD WIRE	1	
W3	F03535Q00AP	LEAD WIRE HARNESS U	1	EXCEPT WPG & SPG (INCLUDING THERMISTOR)

9 ESCUTCHEON BASE ASSEMBLY

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
E1	F603L8G00BP	D.P.CIRCUIT(AU)	1	GD566M BPQ,GD556W BPQ
E1	F603L8G00EP	D.P.CIRCUIT(AU)	1	GD566M EPG,GD556W EPG
E1	F603L8G10SP	D.P.CIRCUIT(AU)	1	GD566M WPG,GD556W SPG
E1	F603L8G20BP	D.P.CIRCUIT(AU)	1	GD546W BPQ
E1	F603L8G40BP	D.P.CIRCUIT(AU)	1	SD466M BPQ,SD456W BPQ
E1	F603L8G40EP	D.P.CIRCUIT(AU)	1	SD456W EPG
E1	F603L8G50BP	D.P.CIRCUIT(AU)	1	SD446W BPQ
E3	F603Y8G00EP	D.P.CIRCUIT(DU)	1	GD566M,GD556W,GD546W
E3	F603Y8G40EP	D.P.CIRCUIT(DU)	1	SD466M,SD456W,SD446W
E4	F630Y8G00SBP	MEMBRANE SWITCH(U)	1	GD566M BPQ
E4	F630Y8G00SEP	MEMBRANE SWITCH(U)	1	GD566M EPG/WPG
E4	F630Y8G10HBP	MEMBRANE SWITCH(U)	1	GD556W BPQ
E4	F630Y8G10HEP	MEMBRANE SWITCH(U)	1	GD556W EPG/SPG
E4	F630Y8G20HBP	MEMBRANE SWITCH(U)	1	GD546W BPQ
E4	F630Y8G30SBP	MEMBRANE SWITCH(U)	1	SD466M BPQ
E4	F630Y8G40HBP	MEMBRANE SWITCH(U)	1	SD456W BPQ
E4	F630Y8G40HEP	MEMBRANE SWITCH(U)	1	SD456W EPG
E4	F630Y8G50HBP	MEMBRANE SWITCH(U)	1	SD446W BPQ

E5	F80348G00SBP	ESCUTCHEON BASE	1	GD566M,SD466M
E5	F80348G00HBP	ESCUTCHEON BASE	1	GD556W,GD546W,SD456W,SD446W
E6	F80725Q00SAP	DOOR OPENING BUTTON	1	GD566M,SD466M
E6	F80725Q00HAP	DOOR OPENING BUTTON	1	GD556W,GD546W,SD456W,SD446W
E7	F80375K00AP	COOK BUTTON SPRING	1	
E8	F82565Q00AP	DOOR OPENING LEVEL	1	
E9	F803G8G00SBP	POP-UP DIAL (U)	2	GD566M,SD466M
E9	F803G8G00HBP	POP-UP DIAL (U)	2	GD556W,GD546W,SD456W,SD446W
E10	F66168G00BP	FLAT CABLE	1	
E11	F80188G00BP	BACKSTOP	2	
E12	F00078G00SBP	NAME PLATE	1	GD566M BPQ
E12	F00078G00SEP	NAME PLATE	1	GD566M EPG
E12	F00078G00SWP	NAME PLATE	1	GD566M WPG
E12	F00078G10HBP	NAME PLATE	1	GD556W BPQ
E12	F00078G10HEP	NAME PLATE	1	GD556W EPG
E12	F00078G10HSP	NAME PLATE	1	GD556W SPG
E12	F00078G20HBP	NAME PLATE	1	GD546W BPQ
E12	F00078G30SBP	NAME PLATE	1	SD466M BPQ
E12	F00078G40HBP	NAME PLATE	1	SD456W BPQ
E12	F00078G40HEP	NAME PLATE	1	SD456W EPG
E12	F00078G50HBP	NAME PLATE	1	SD446W BPQ

10 PACKING AND ACCESORIES

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
P1	F00038G00BP	INSTRUCTION MANUAL	1	GD566M BPQ,GD556W BPQ,GD546W BPQ
P1	F00038G00EP	INSTRUCTION MANUAL	1	GD566M EPG,GD556W EPG
P1	F00038G00WP	INSTRUCTION MANUAL	1	GD566M WPG
P1	F00038G10SP	INSTRUCTION MANUAL	1	GD556W SPG
P1	F00038G30BP	INSTRUCTION MANUAL	1	SD466M BPQ,SD456W BPQ,SD446W BPQ
P1	F00038G40SP	INSTRUCTION MANUAL	1	SD456W EPG
P2	F01028G00SBP	PACKING CASE,PAPER	1	GD566M BPQ
P2	F01028G00SEP	PACKING CASE,PAPER	1	GD566M EPG/WPG
P2	F01028G10HBP	PACKING CASE,PAPER	1	GD556W BPQ
P2	F01028G10HEP	PACKING CASE,PAPER	1	GD556W EPG,GD556W SPG
P2	F01028G20HBP	PACKING CASE,PAPER	1	GD546W BPQ
P2	F01028G30SBP	PACKING CASE,PAPER	1	SD466M BPQ
P2	F01028G40HBP	PACKING CASE,PAPER	1	SD456W BPQ
P2	F01028G40HEP	PACKING CASE,PAPER	1	SD456W EPG
P2	F01028G50HBP	PACKING CASE,PAPER	1	SD446W BPQ
P3	F01045Q00AP	UPPER FILLER	1	
P4	F01055Q00AP	LOWER FILLER	1	
P5	F01068100XN	P.E.BAG	1	
P6	F01078100XN	DOOR SHEET	1	
P7	F06015Q00AP	COOKING TRAY	1	
P8	F01924T00AP	SHEET	1	GD566M,SD466M
P9	F01085R00BP	RACK PACKING	1	GD566M,GD556W,GD546W
P11	F10855R00BP	PIZZA PAN HANDLE	1	GD566M,GD556W,GD546W
P12	F060V5R00BP	OVEN RACK	1	GD566M BPQ,GD556W BPQ,GD546W BPQ
P12	F060V5U00XN	OVEN RACK	1	GD566M EPG/WPG,GD556W EPG/SPG
P13	F46065R00BP	PIZZA PAN	1	GD566M,GD556W,GD546W
P14	F000B5Q50EP	COOKING GUIDE	1	EPG

P15	F01135R00AP	PIZZA PAN FOAM	1	GD566M,GD556W,GD546W

11 DIGITAL PROGRAMMER CIRCUIT

SCHEMATIC DIAGRAM



12 DIGITAL PROGRAMMER CIRCUIT

PARTS LIST

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
BZ310	L0DDEA000014	BUZZER	1	2.0KHz
C80-C83,C221	F1H1H103A220	CHIP CAPACITOR	5	0.01µF/50V
C12,C222,C340,C440	F1H1E104A030	CHIP CAPACITOR	4	0.1µF/25V
C223,C224	F1H1A105A019	CHIP CAPACITOR	2	1µF/10V
C40-C44,C47,C48,C330,C331	F1H1H102A219	CHIP CAPACITOR	9	1000PF/50V
C343	F1H1H1010005	CHIP CAPACITOR	1	100PF/50V
C10	AECETK1V561B	AL CHEM CAPACITOR	1	560µF/35V
C13	AECETS1C220B	AL CHEM CAPACITOR	1	22µF/16V
CN1	K1KA03AA0115	CONNECTOR	1	
CN3	F03526P40AG	INVERTER HARNESS (U)	1	
CN4	K1KA04AA0086	CONNECTOR	1	4 Pin
CN5	K1MN19B00043	CONNECTOR	1	19 Pin
CN6	K1MN19A00024	CONNECTOR	1	19 Pin
CN7	K1MN07BA0072	CONNECTOR	1	
CN8,CN9	F03547B40AP	LEAD WIRE		3 Pin
CN10	F03546Z20AP	LEAD WIRE (U)	1	
CN11	K1KA03AA0086	CONNECTOR	1	
CX320	EFOEC8004A4	CERAMIC RESONATOR	1	8.0MHz
DISP110	L5AAAFD00021	LCD	1	
DISP1 HOLDER	F66175E40XN	LCD HOLDER	1	
	F67525E40XN	DIFFUSION SHEET	1	
D10-D13	B0EAKT000025	DIODE	4	
D40,D220-D223,D226,D227	B0AACK000004	DIODE	7	
D224,D228	B0AACK000004	DIODE	2	(GD566M,GD556W,GD546W)
D25	D4EAY511A036	VARSITOR	1	
D26,D27	D4EAY112A036	VARSITOR	2	
D180-D189	B3ACB0000065	CHIP-LED	10	

IC1	MN101C54CGX	L.S.I.	1	BPQ
IC1	MN101C54CGY	L.S.I.	1	EPG,SPG,WPG
Q226	UNR211100L	CHIP DIGI-TRANSISTOR	1	
Q181,Q220,Q225	2SD0601A0L	CHIP TRANSISTOR	3	
Q222	2SD0601A0L	CHIP TRANSISTOR	1	(GD566M,GD556W,GD546W)
Q223,Q224	UNR221M00L	CHIP TRANSISTOR	2	
Q182	UNR221M00L	CHIP TRANSISTOR	1	(GD566M,GD556W,GD546W)
Q227	2SB709A0L	CHIP TRANSISTOR	1	
Q10,Q180	B1BAAJ000003	TRANSISTOR	2	
RE80,RE81	EVEJ1HF2224B	REVOLVING ENCODER	2	
R181,R320	D0GB220JA072	CHIP RESISTOR	2	22Ω,1/10W,5%
R182,R183	D0GB101JA069	CHIP RESISTOR	2	100Ω,1/10W,5%
R80,R81,R84,R85	D0GB102JA071	CHIP RESISTOR	4	1K,1/10W,5%
R220,R222,R223,R231	D0GB222JA072	CHIP RESISTOR	4	2.2K,1/10W,5%
R226	D0GB222JA072	CHIP RESISTOR	1	2.2K,1/10W,5% (GD566M,GD556W,GD546W)
R310	D0GB332JA072	CHIP RESISTOR	1	3.3K,1/10W,5%
R440	D0GB512JA072	CHIP RESISTOR	1	5.1K,1/10W,5%
R82,R83,R86,R87,R224,R230	D0GB103JA072	CHIP RESISTOR	6	10K,1/10W,5%
R330	D0GB333JA070	CHIP RESISTOR	1	33K,1/10W,5%
R232	D0GB363JA072	CHIP RESISTOR	1	36K,1/10W,5%
R13,R221,R228,R233,R342,R343	D0GB104JA068	CHIP RESISTOR	6	100K,1/10W,5%
R227	D0GB104JA068	CHIP RESISTOR	1	100K,1/10W,5% (GD566M,GD556W,GD546W)
R225,R331,R441	D0GB471JA069	CHIP RESISTOR	3	470Ω,1/10W,5%
R360	D0GB472JA072	CHIP RESISTOR	1	4.7K,1/10W,5%
R10,R11,R211	D0AE102JA155	CARBON RESISTOR	3	1K,1/4W,5%
R12,R180	D0AE103JA155	CARBON RESISTOR	2	10K,1/4W,5%
R290	D0AE104JA155	CARBON RESISTOR	1	100K,1/4W,5%
RY1	AEBGJQC25F18	POWER RELAY	1	
RY3	AEBGJQC25F18	POWER RELAY	1	GD566M,GD556W,GD546W
RY2	K6B1AZA00011	POWER RELAY	1	
T10	G4C3AAH00008	LOW VOLTAGE TRANSFORMER	1	
ZD10	B0BA5R600016	ZENER DIODE	1	

03/06

S-8G0, S-8G1

S-8G2, S-8G3

S-8G4, S-8G5

iPress0363

Printed in China

NOTE: Door is closed.
Unit is not operating.
Ground
Chassis

CAUTION:
HIGH VOLTAGE AREA

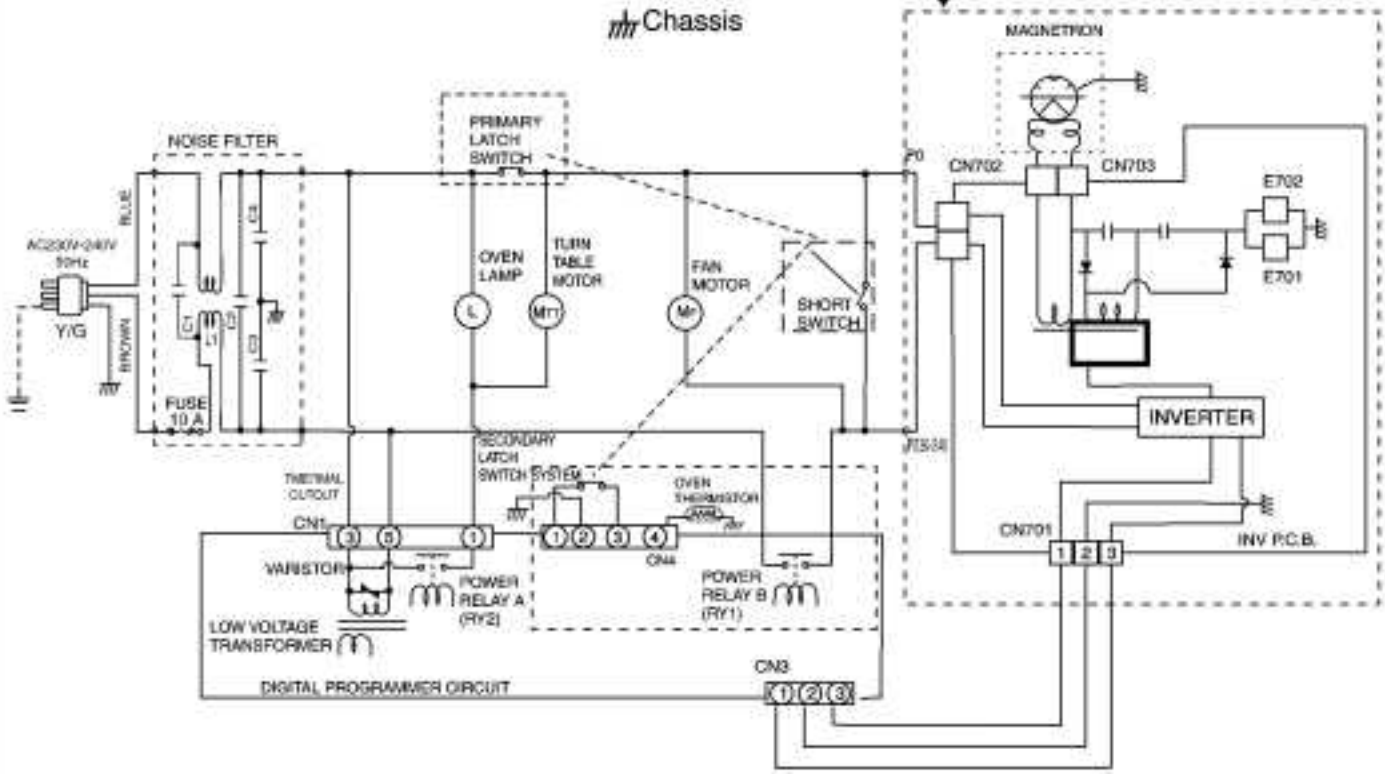

WIRING DIAGRAM

NOTE: * When replacing, check the lead wire color as shown.
***Colors shown by ( ) indicate colors of lead wire connector housing.**

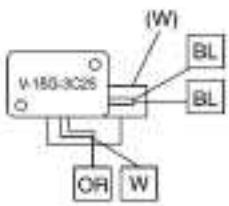

PRIMARY LATCH SWITCH
TOP

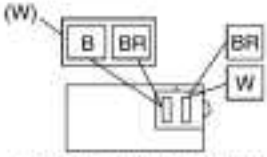

POWER RELAY B(RY1)

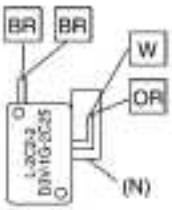

SHORT SWITCH
MIDDLE

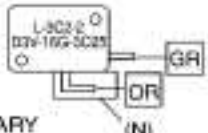

SECONDARY LATCH SWITCH
BOTTOM

MAGNETRON

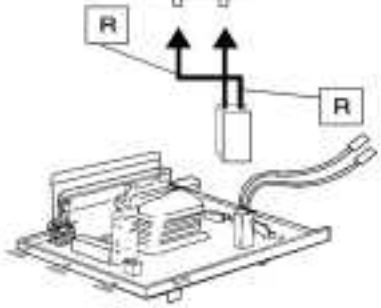

HIGH VOLTAGE INVERTER

SYMBOL	COLOR
OR	ORANGE
BL	BLUE
BR	BROWN
W	WHITE
Y	YELLOW
R	RED
GR	GRAY
B	BLACK
N	NATURAL
G	GREEN

(S-8G3)
(S-8G4)
(S-8G5)

Specifications:

Specifications \ Models		GD566M BPQ GD566W BPQ	GD546W BPQ	GD566M EPG GD556W EPG	GD566M WPG GD556W SPG	SD466M BPQ SD456W BPQ	SD446W BPQ	SD456W EPG
Power Source:		230V AC Single Phase,50Hz ---------- For EPG,SPG,WPG models 230V-240V AC Single Phase,50Hz ---------- For BPQ models						
Power Requirement:	Microwave	1260W	1160W	1260W	1260W	1260W	1160W	1260W
	Heater	1350W	1150W	1350W	1350W	——	——	——
Output:	Microwave	1000W	1000W	1000W	1000W	1000W	1000W	1000W
	Heater	1300W	1100W	1300W	1300W	——	——	——
Microwave Frequency:		2450MHz						
Timer:		30min.(High Power)/99min.						
Outside Dimensions:		510mm(W) x 380mm(D) x 304mm(H)						
Oven Cavity Dimensions:		359mm(W) x 352mm(D) x 217mm(H)						
Weight:		12.5kg				11.5kg		
PbF		This product with PbF						
Specifications subject to change without notice.								

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

INVERTER WARNING

This Inverter board looks like a regular PCB. However, this PCB drives the magnetron tube with extremely high voltage and high current. NEW H.V.

IT HAS: 1. Very high voltage and high current circuits.
It functions the same as the high voltage transformer and high voltage capacitor in ordinary microwave ovens.
2. Aluminum heat sink that is energized with very high voltages and high heat energy
3. Very high voltage which may remain in circuitry even when oven is off. High voltage charge may remain in the capacitors on the board.

DO NOT:

- 1. Do not touch circuitry because it has very hot (high voltage) circuitry. Even when replacing board, extreme care should be taken to avoid possible electric shock hazards. High voltage charge may remain in circuit.
- 2. Do not touch aluminum heat sink because it is energized with very high voltage and also is very hot in high heat energy.
- 3. Do not try to adjust or tamper with preset control on the Inverter board because it is very dangerous to adjust without proper test equipment.
- 4. Do not test oven while Inverter grounding plate or screws are loose. It is very dangerous to operate H.V. Inverter Circuit (U) with loose mounting screws or if improperly grounded.

INVERTER POWER SUPPLY

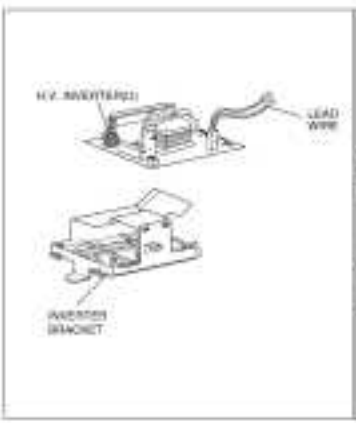

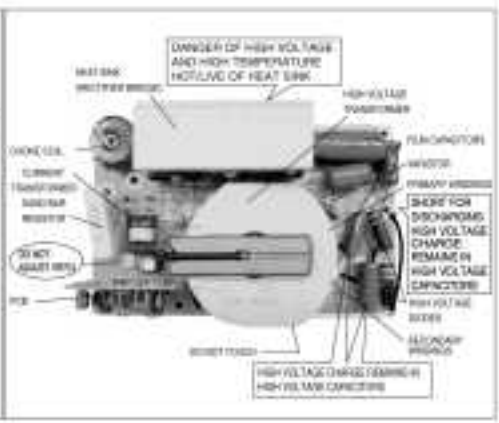

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

WARNING

1. This product should be serviced only by trained, qualified personnel.
2. Check for radiation leakage before and after every servicing according to the "procedure for measuring radiation leakage."
3. If the unit cannot be repaired on site, advise the customer not to use until unit is repaired.
4. There are special components used in the microwave oven which are important for safety. These parts are marked with a ⚠ on the replacement parts list. It is essential that these critical parts be replaced only with the manufacture's specified parts to prevent microwave leakage, shock, fire, or other hazards. Do not modify the orginal design.

This service manual covers products for following markets.
When troubleshooting or replacing parts, please refer to the country/area identifications shown below for your applicable product specification.

BPQ ..... For U.K.

EPG ..... For France, Italy, Finland, Spain, Portugal, Greece, Poland, Holland

WPG ..... For Switzerland

SPG ..... For Norway, Finland, Sweden, Denmark

CAUTION

About lead free solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

Caution:
- Pb free solder has a higher melting point than standard solder; Typically the melting point is 30 - 40˚C higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 370 ± 10˚C.
- Pb free solder will tend to splash when heated too high (about 600˚C).

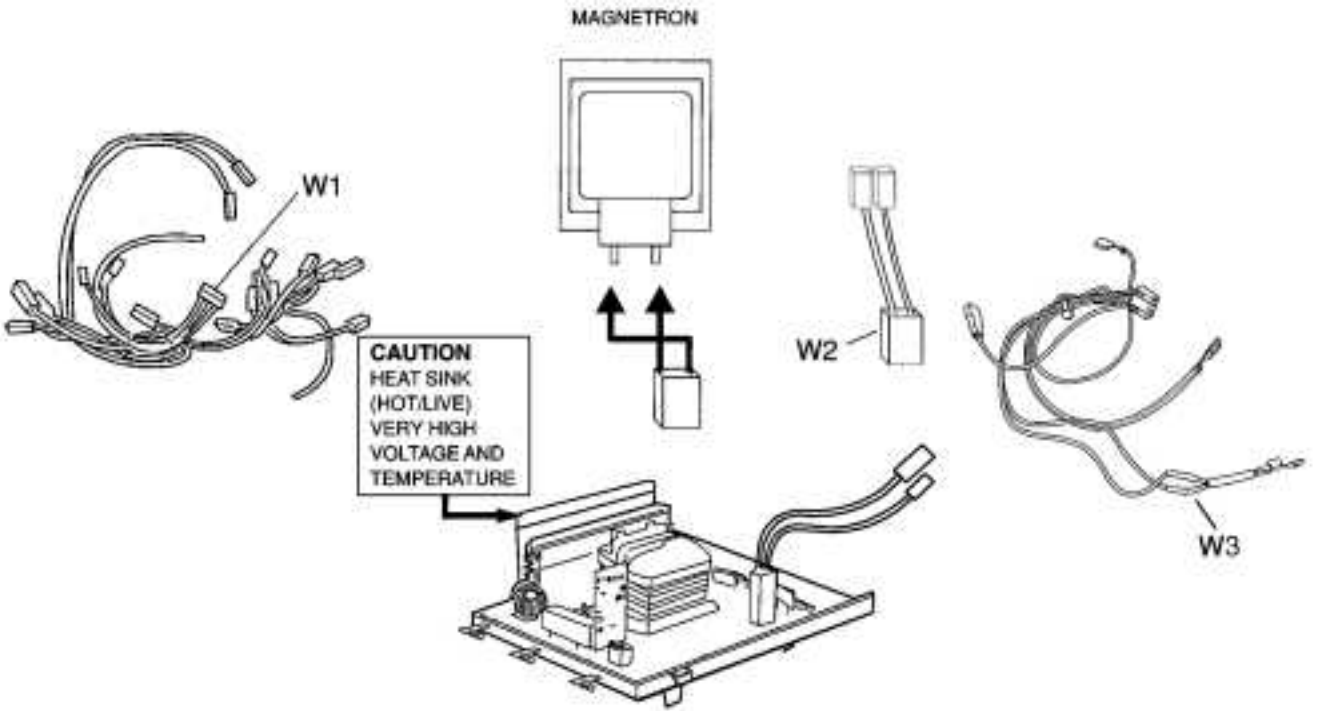
MAGNETRON
W1
W2
W3
CAUTION
HEAT SINK
(HOT/LIVE)
VERY HIGH
VOLTAGE AND
TEMPERATURE

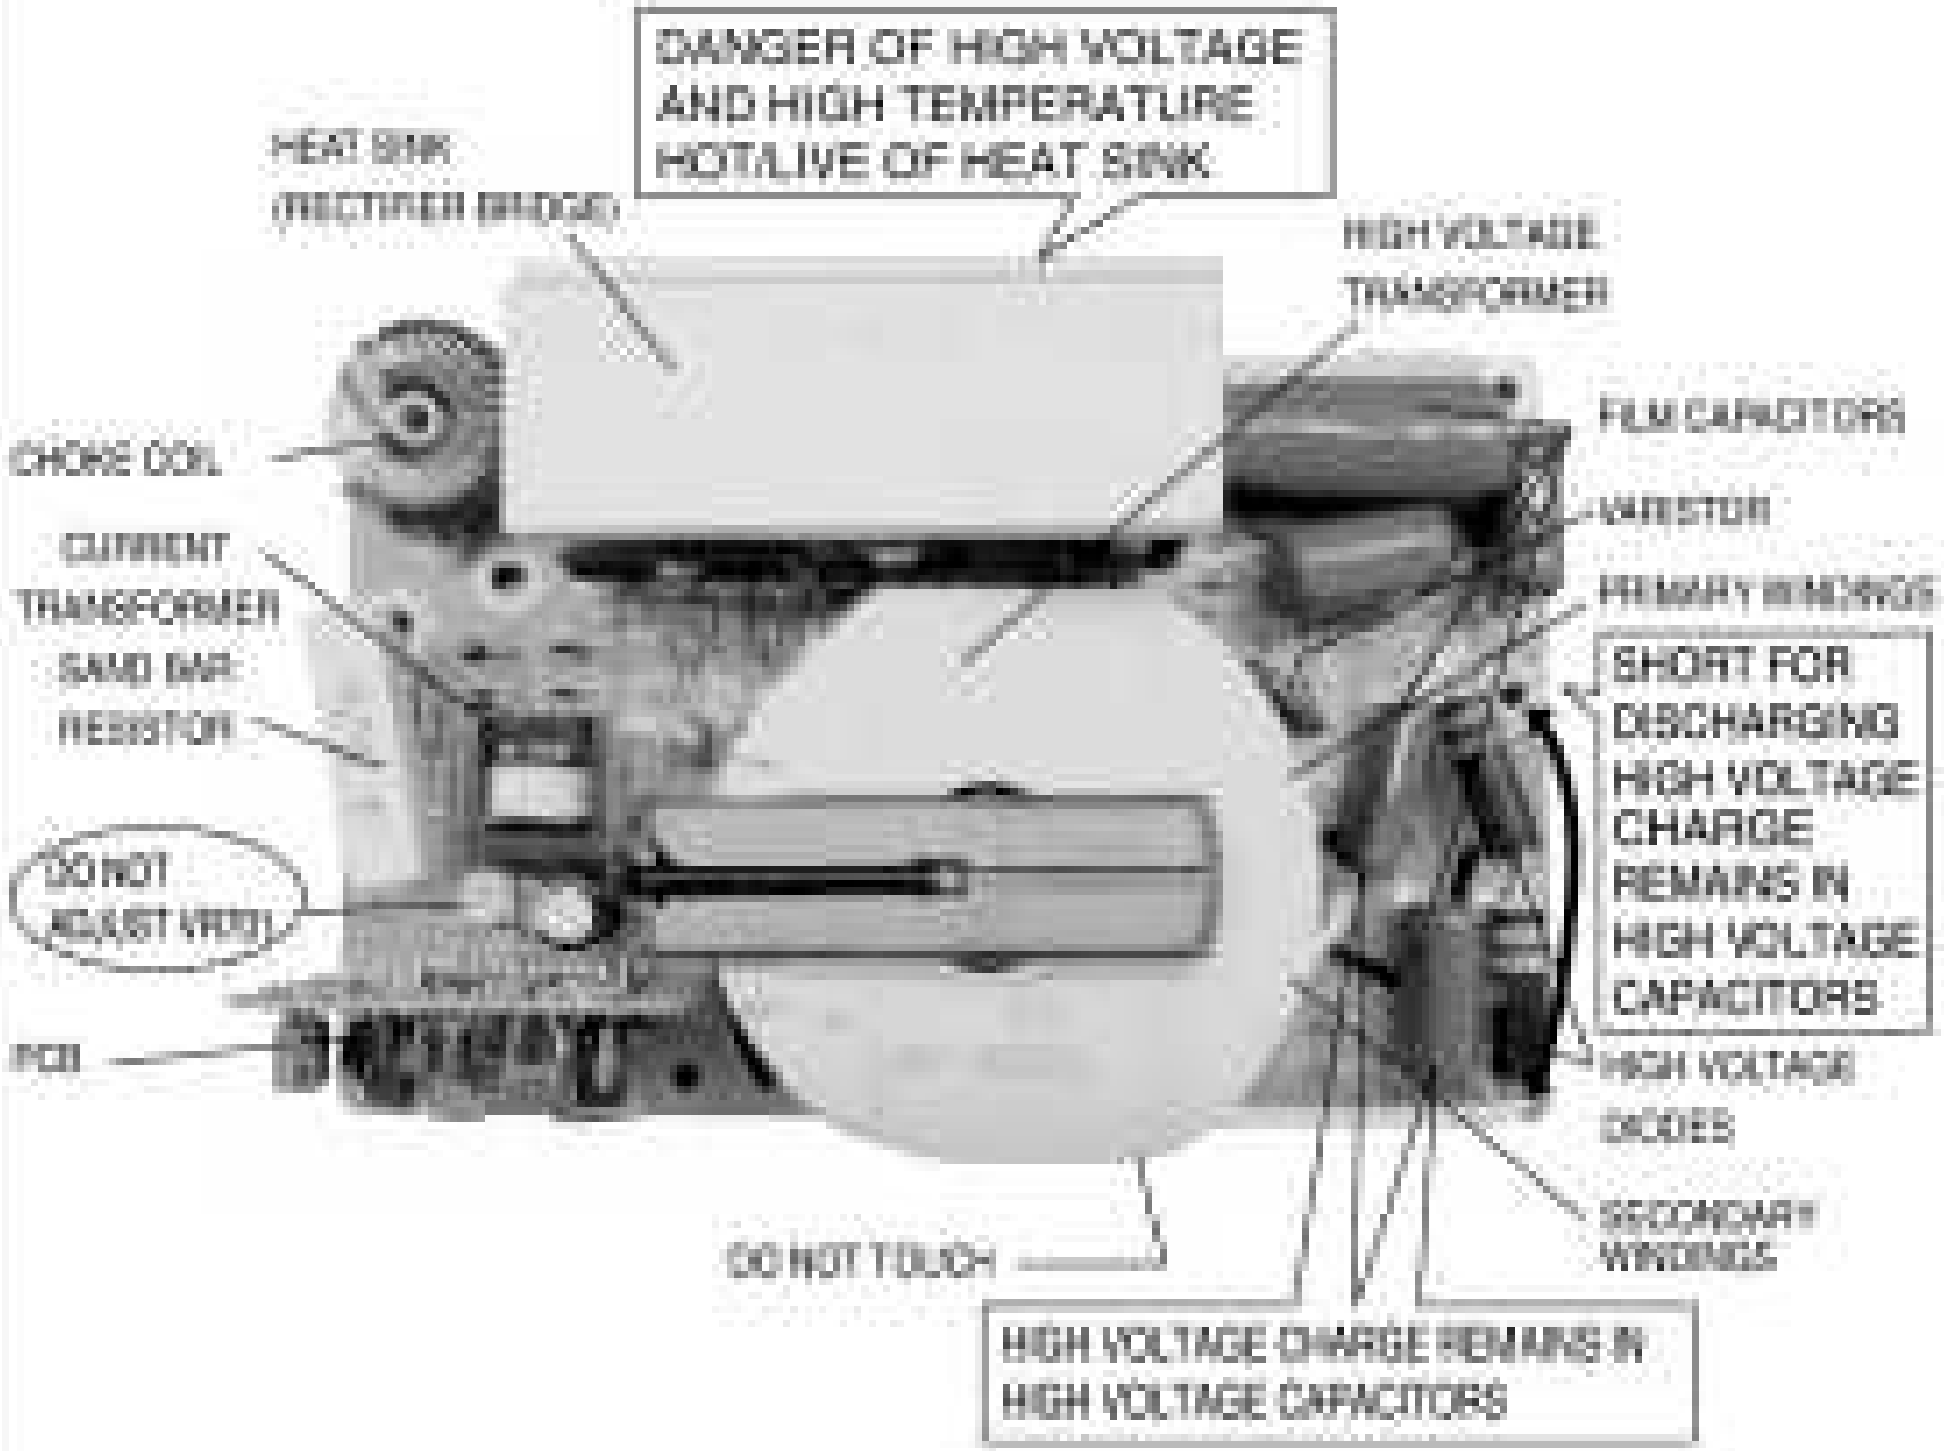
DANGER OF HIGH VOLTAGE
AND HIGH TEMPERATURE
HOT/LIVE OF HEAT SINK
HEAT SINK
(RECTIFIER BRIDGE)
HIGH VOLTAGE
TRANSFORMER
FILM CAPACITORS
CHOKE COIL
VARISTOR
CURRENT
TRANSFORMER
SAND BAR
RESISTOR
PRIMARY WINDINGS
SHORT FOR
DISCHARGING
HIGH VOLTAGE
CHARGE
REMAINS IN
HIGH VOLTAGE
CAPACITORS
DO NOT
ADJUST VR(1)
PCB
HIGH VOLTAGE
DIODES
SECONDARY
WINDINGS
DO NOT TOUCH
HIGH VOLTAGE CHARGE REMAINS IN
HIGH VOLTAGE CAPACITORS

CHECK GROUNDING

Touch chassis side first then short to the terminal of the magnetron filament terminal.

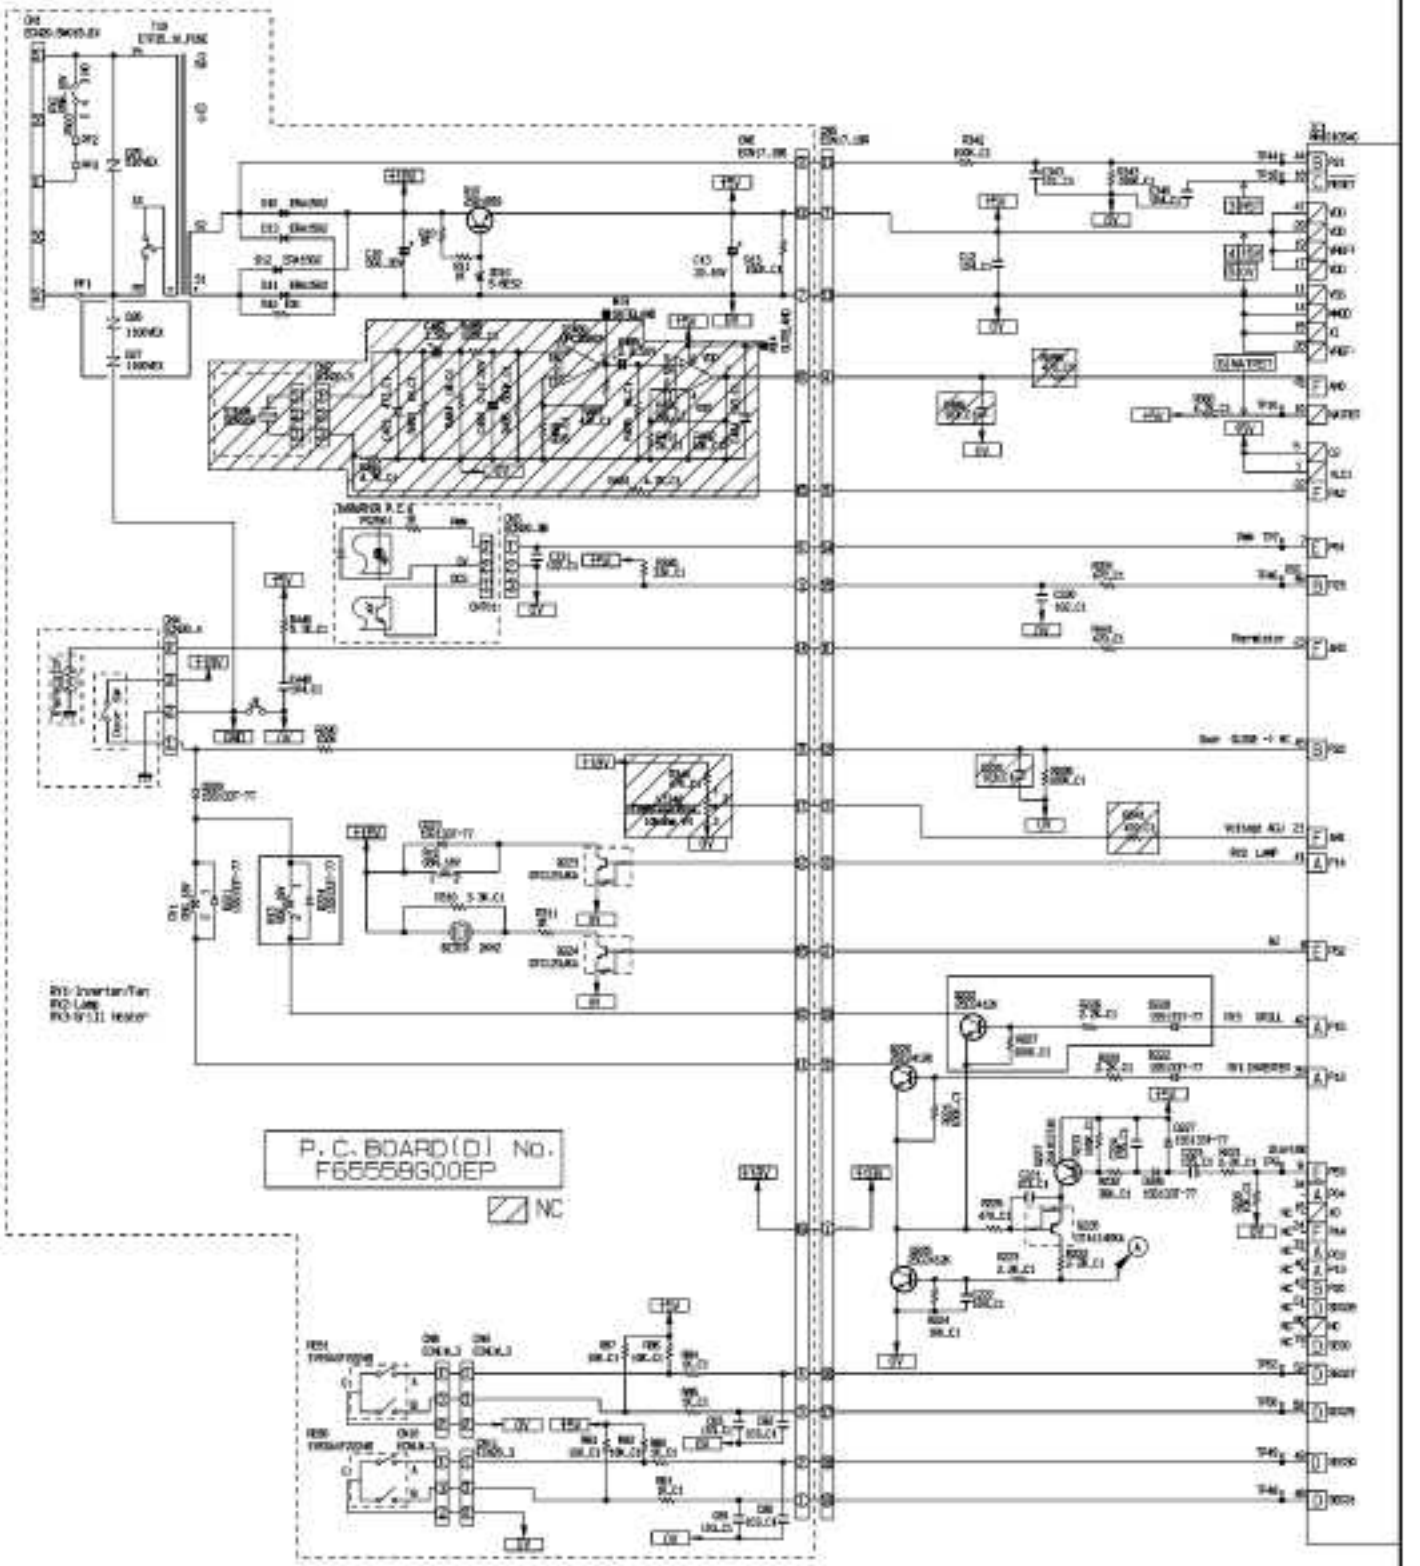
P.C.BOARD(D) No.
F65559G00EP
NC

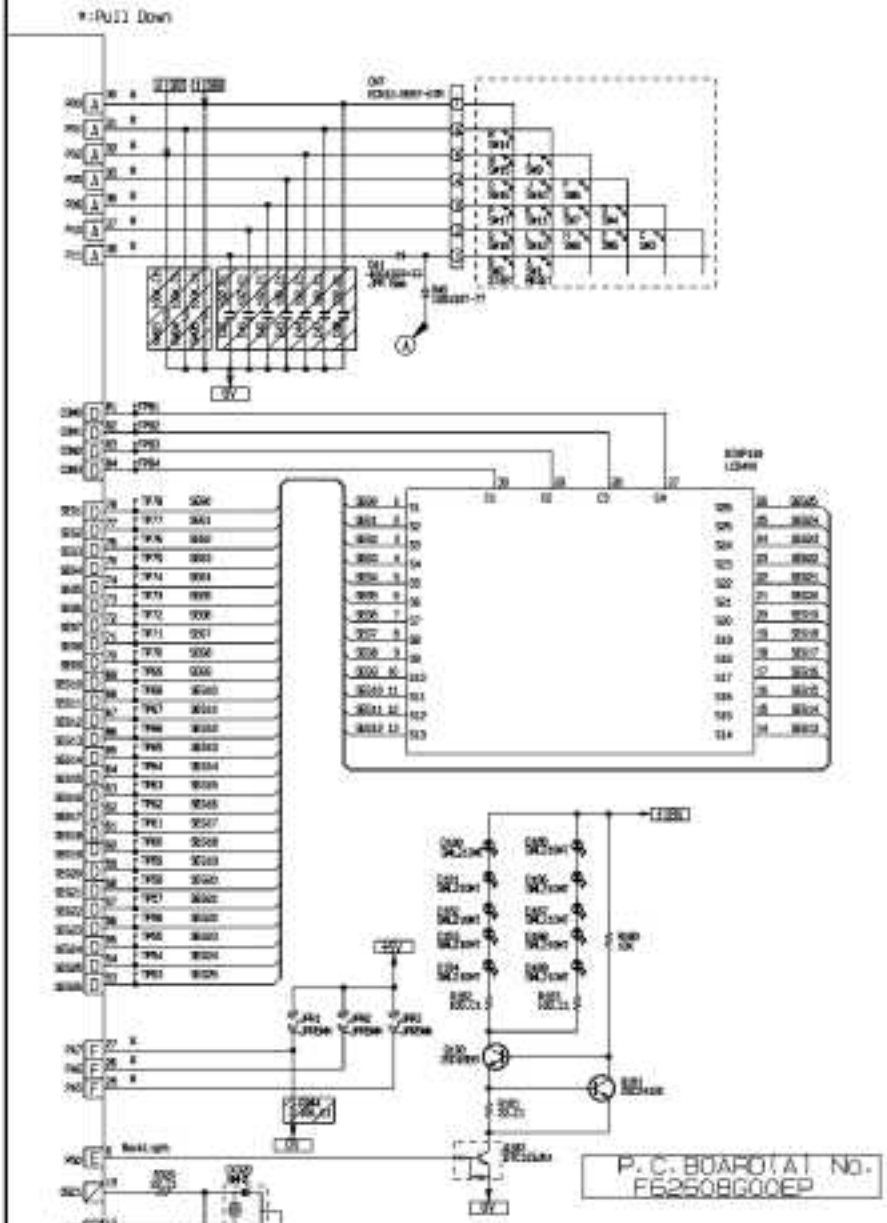

P.C.B.AU No.	JPR3	JPR2	JPR1	P.C.B.DU No.	RY3 CIRCUIT
F603LBG00EP	OPEN	OPEN	OPEN	F603YBG00EP	USE
F603LBG10SP	OPEN	OPEN	SHORT		
F603LBG40EP	SHORT	OPEN	OPEN	F603YBG40EP	—
F603LBG40BP	OPEN	OPEN	OPEN		
F603LBG50BP	OPEN	OPEN	SHORT		
F603LBG00BP	OPEN	SHORT	OPEN	F603YBG00EP	USE
F603LBG20BP	SHORT	OPEN	OPEN		

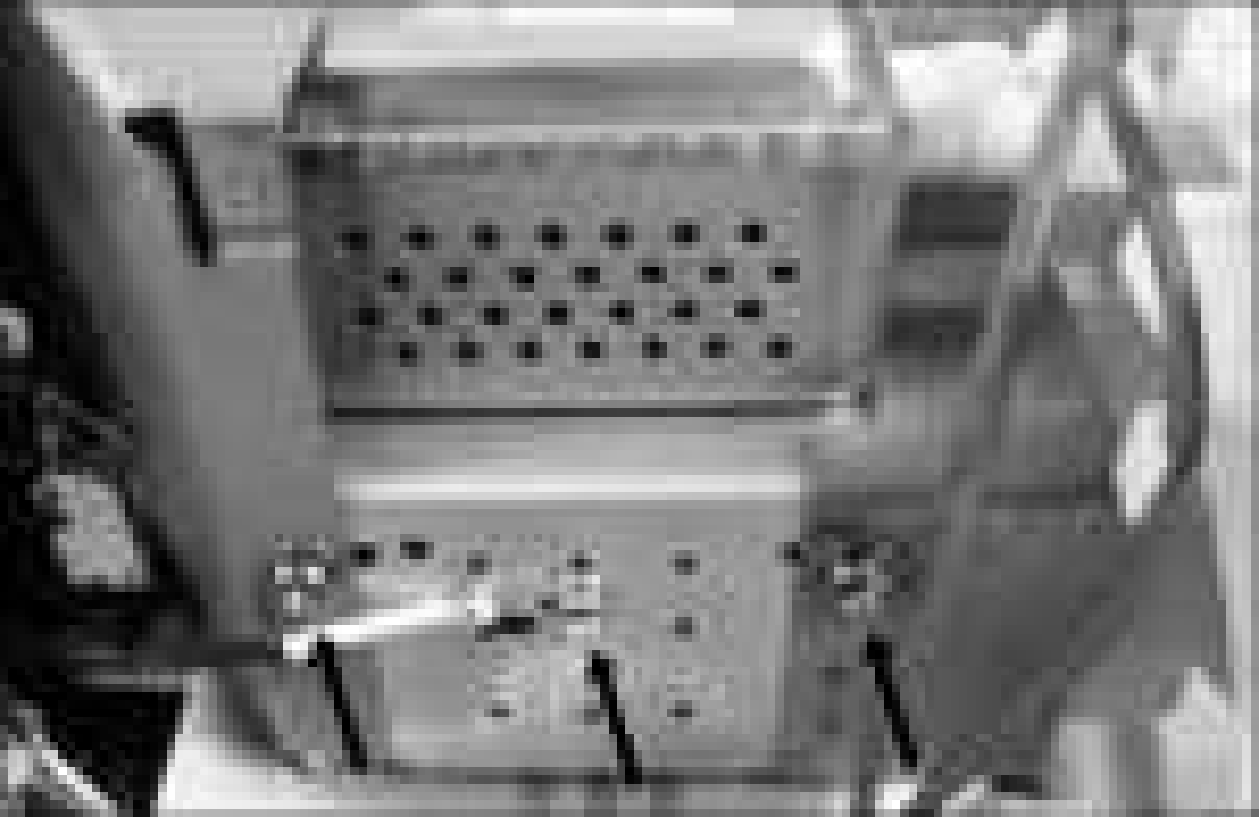

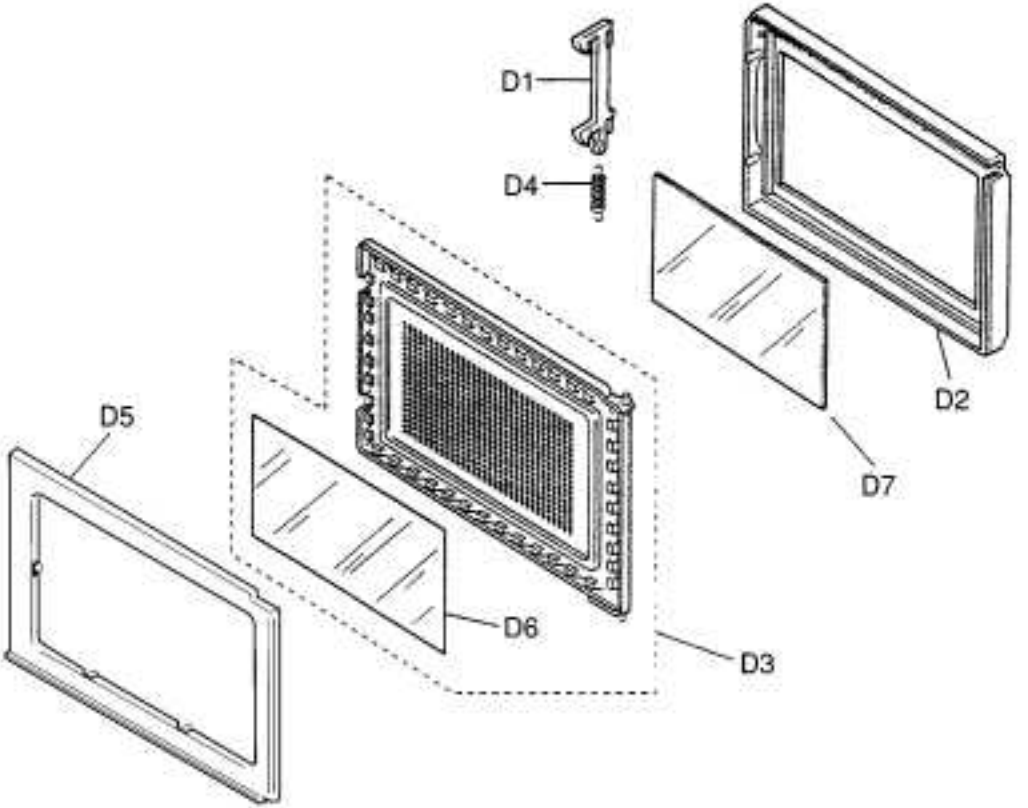
D1
D4
D2
D7
D5
D6
D3

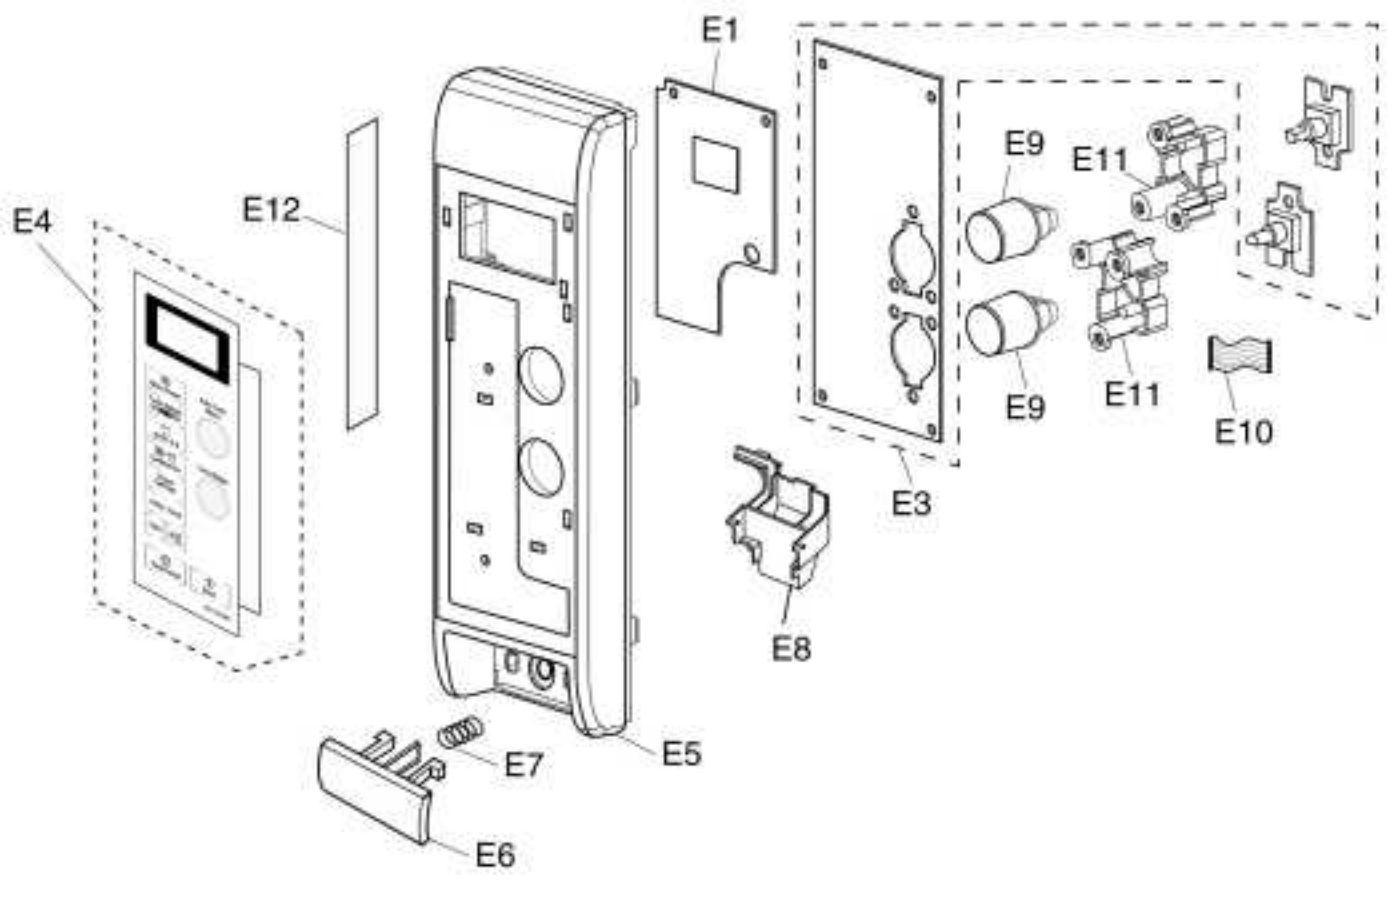
E1
E12
E4
E9
E11
E9
E11
E10
E3
E8
E7
E5
E6

EXPLODED VIEW

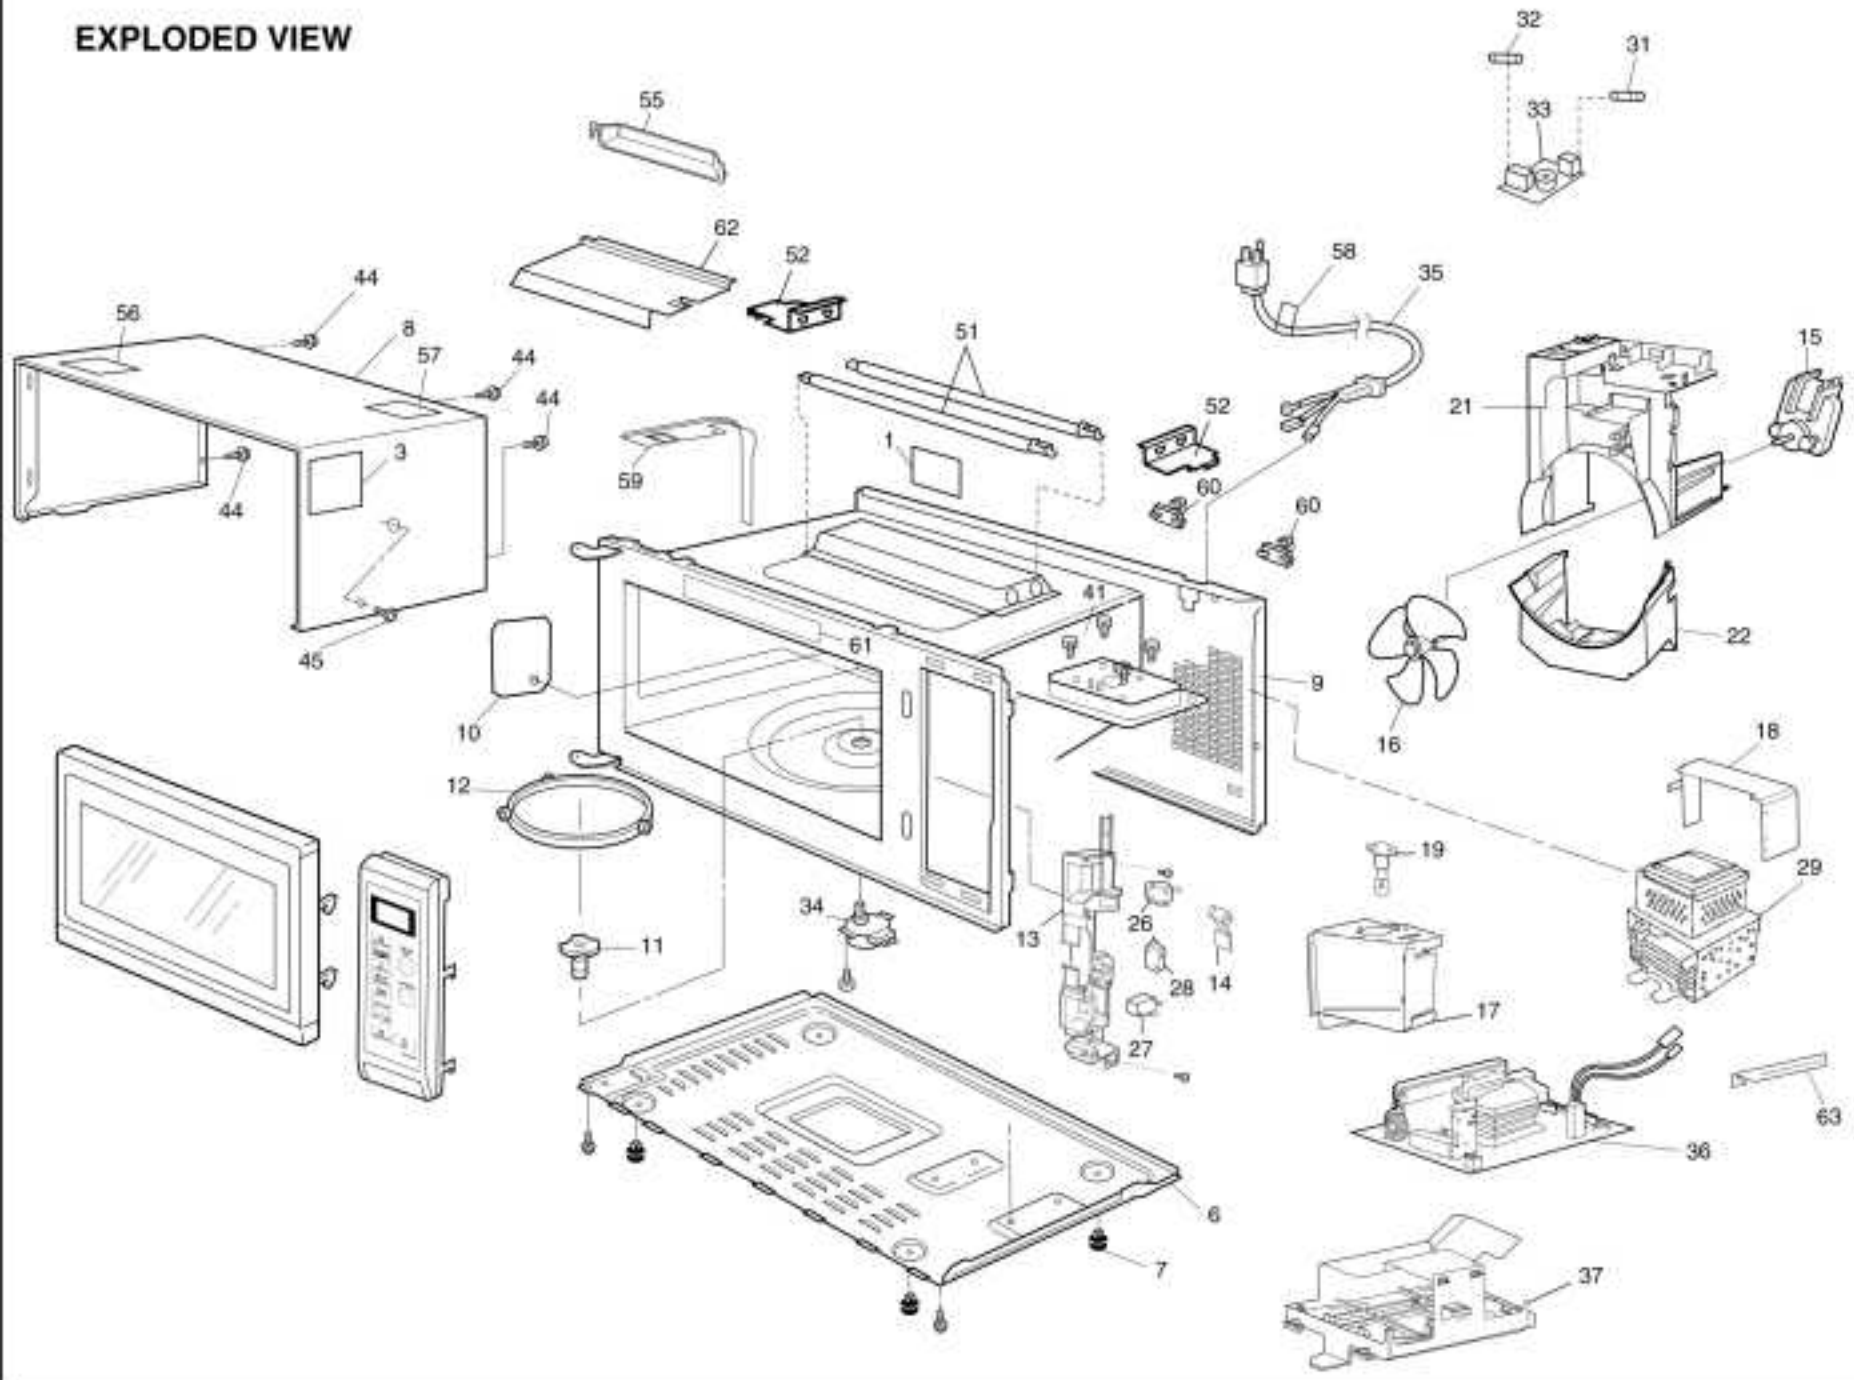

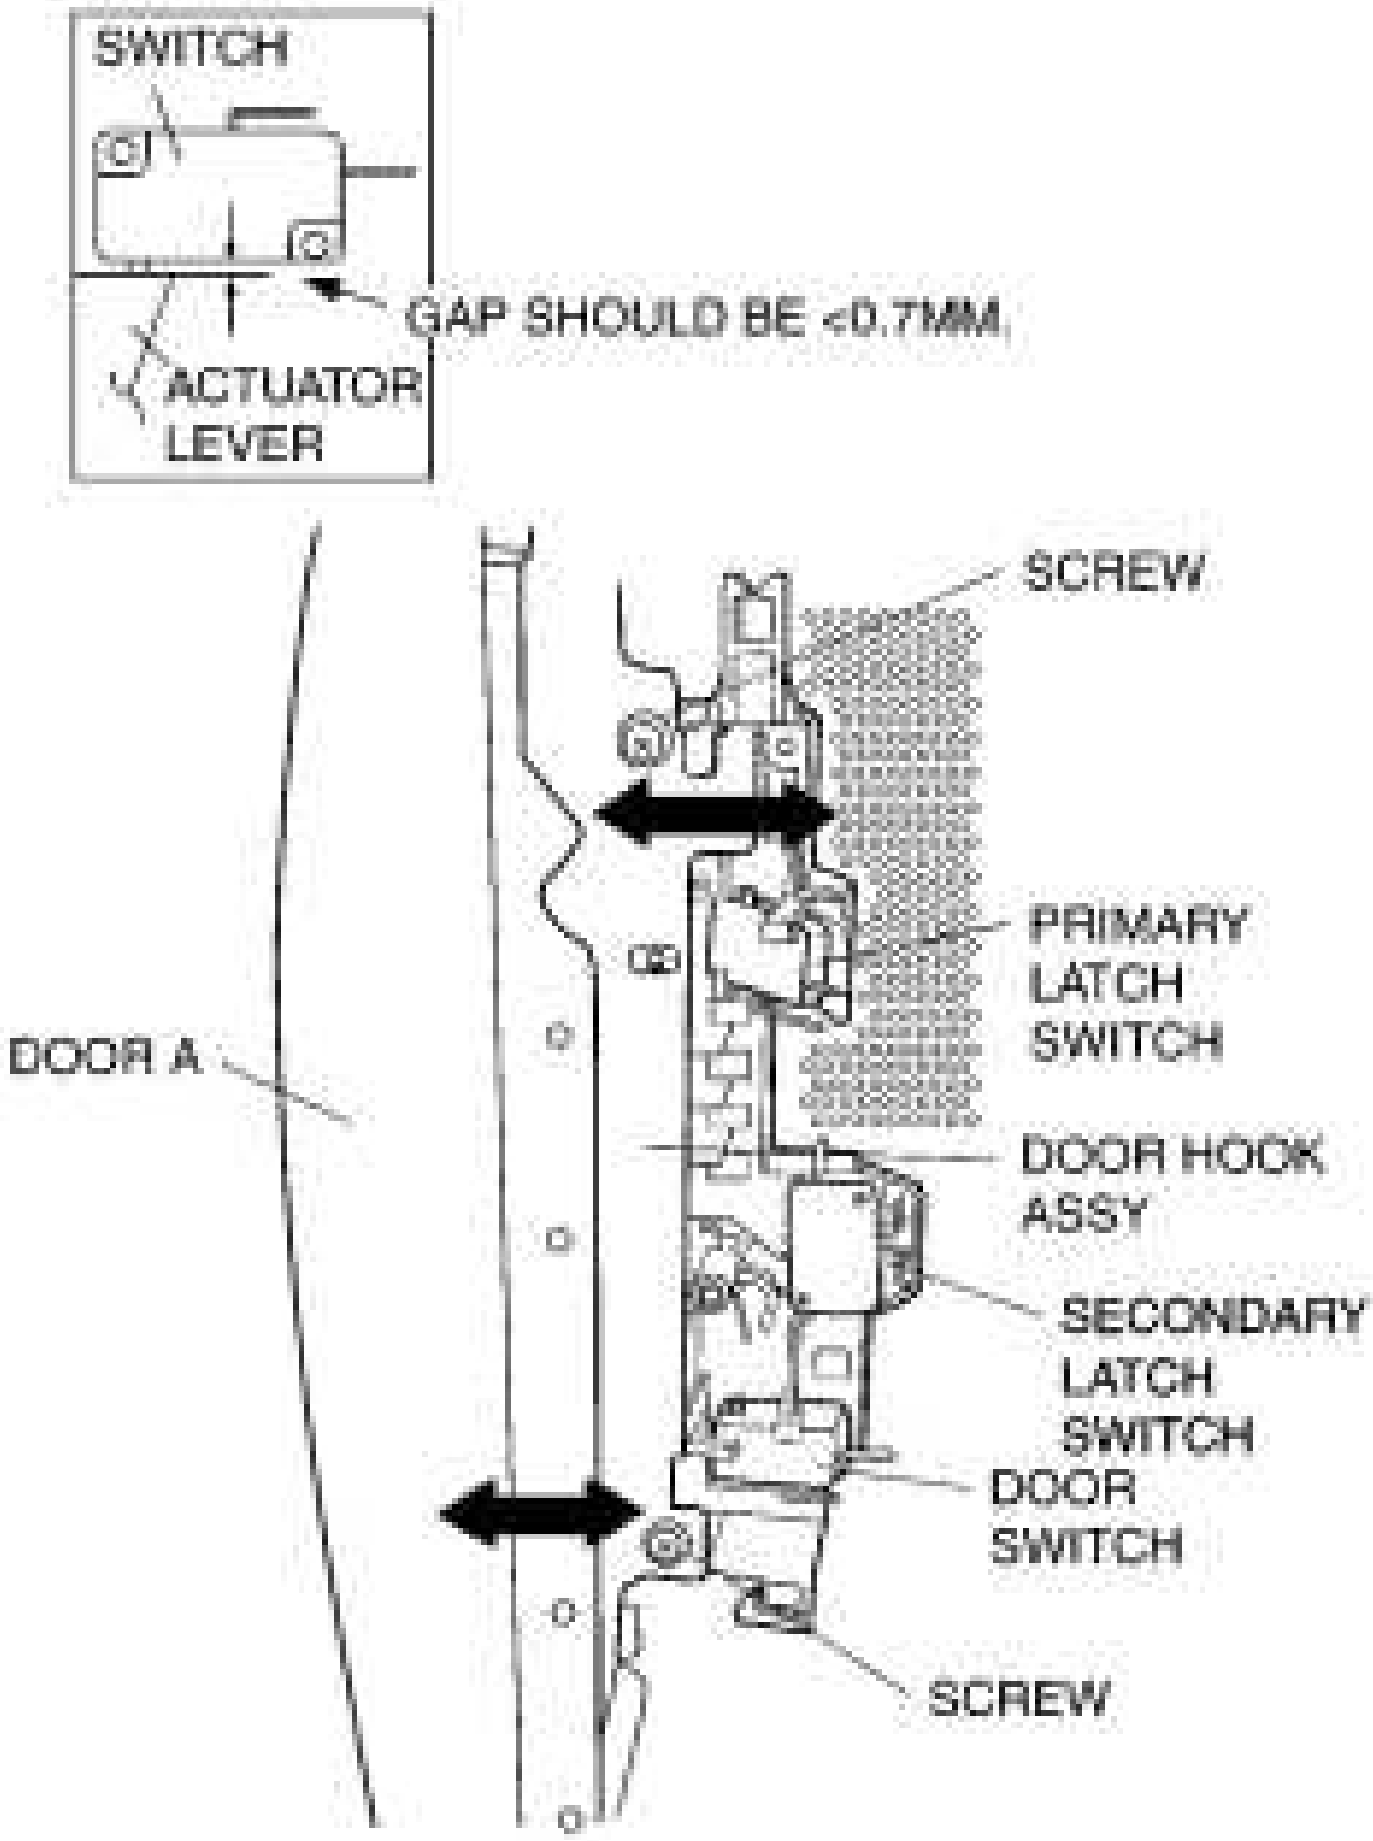
SWITCH
GAP SHOULD BE <0.7MM.
ACTUATOR LEVER
SCREW
PRIMARY LATCH SWITCH
DOOR A
DOOR HOOK ASSY
SECONDARY LATCH SWITCH
DOOR SWITCH
SCREW

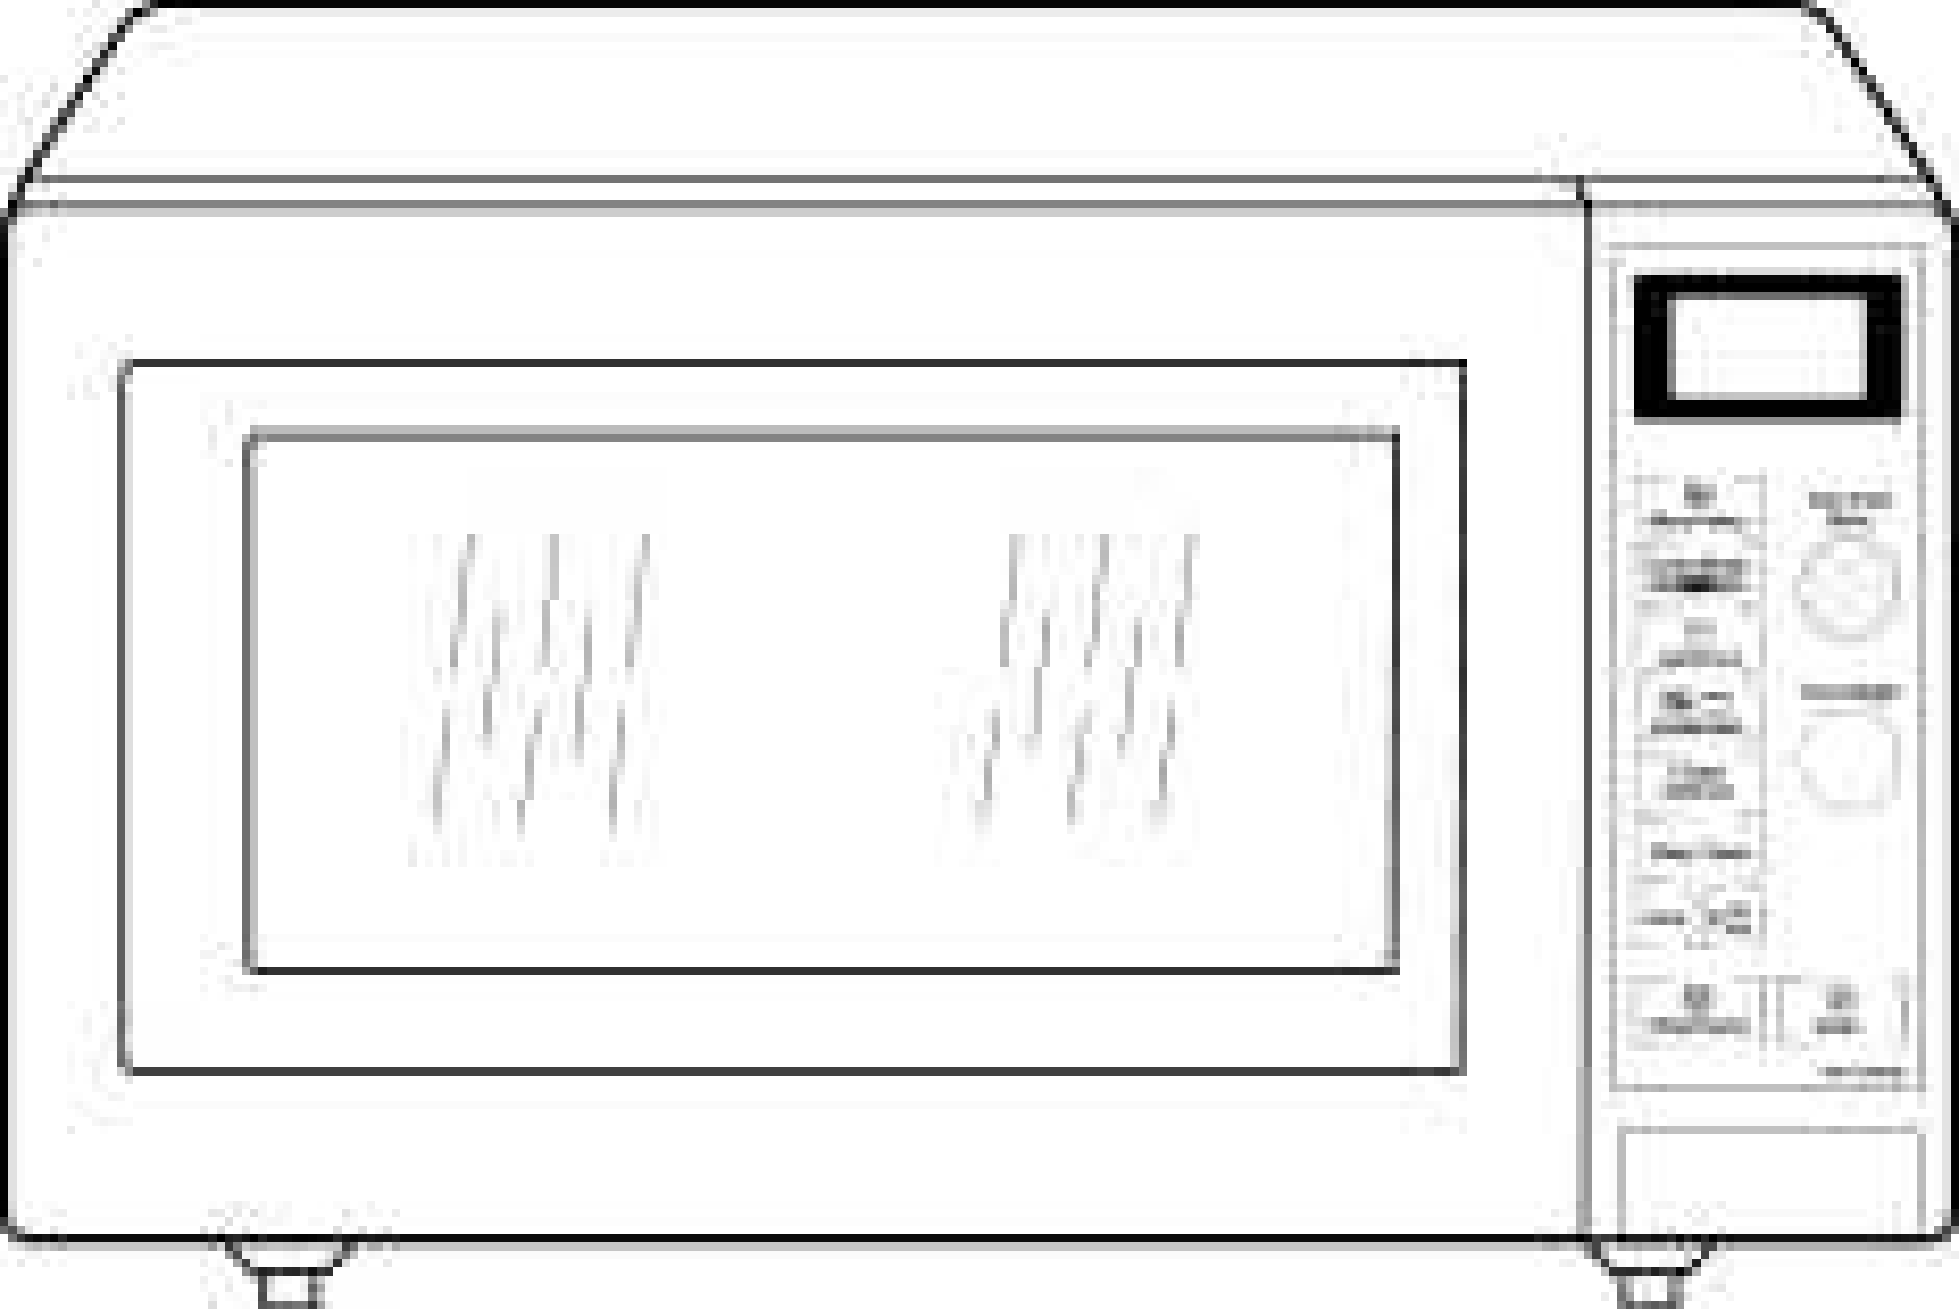

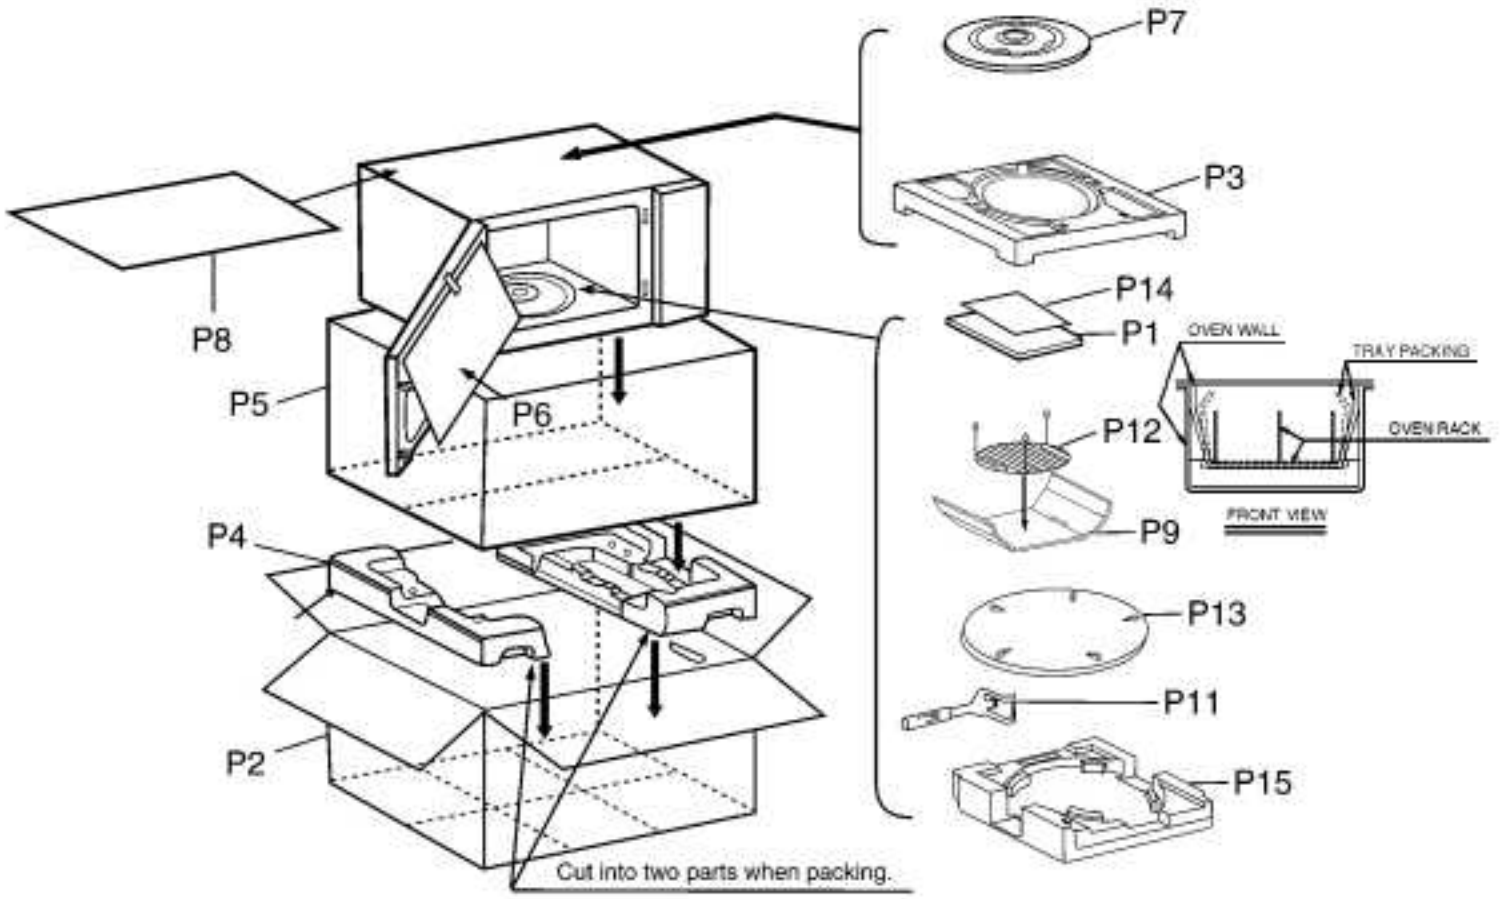
P7
P3
P14
P1
P8
P5
P6
P12
P4
P9
P13
P11
P2
P15
OVEN WALL
TRAY PACKING
OVEN RACK
FRONT VIEW
Cut into two parts when packing.

NOTE: Door is closed.
Unit is not operating.
⏚ Ground
⏚ Chassis

CAUTION:
HIGH VOLTAGE AREA

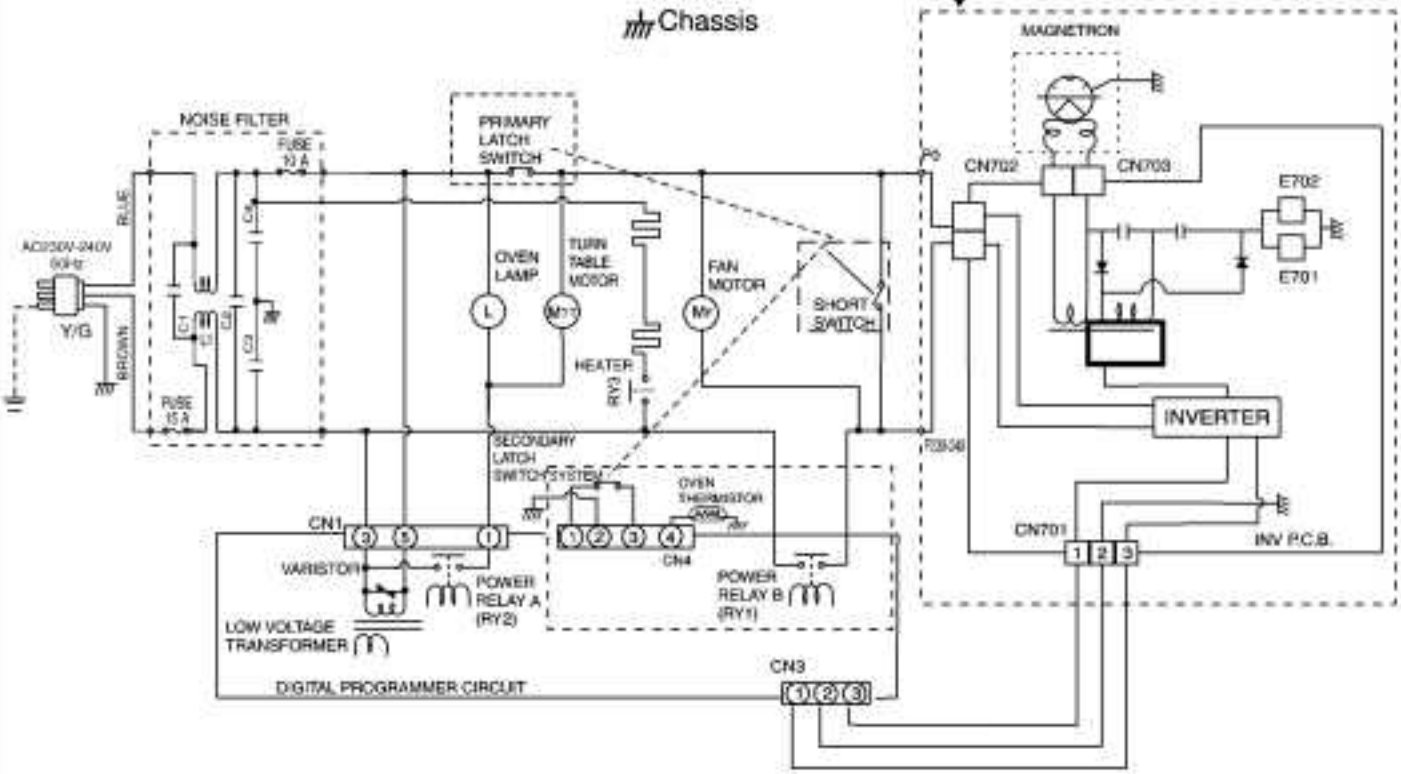

WIRING DIAGRAM

NOTE: * When replacing, check the lead wire color as shown.
***Colors shown by ( ) indicate colors of lead wire connector housing.**

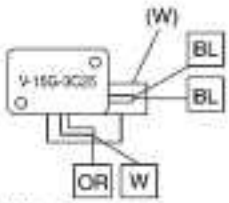

PRIMARY LATCH SWITCH TOP

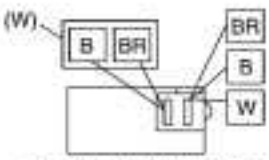

POWER RELAY B(RY1)

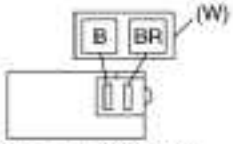

POWER RELAY (RY3)

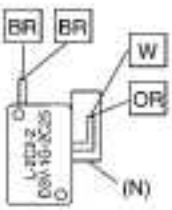

SHORT SWITCH MIDDLE

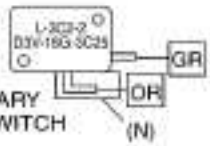

SECONDARY LATCH SWITCH BOTTOM

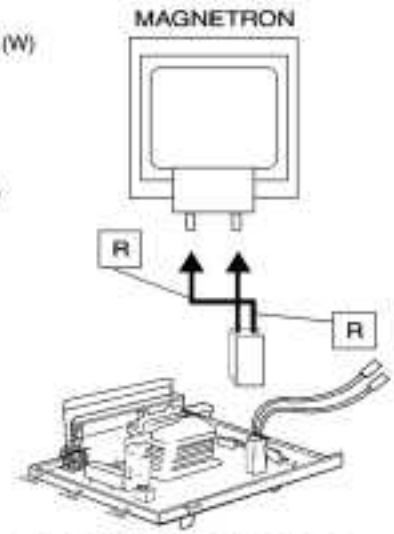

HIGH VOLTAGE INVERTER

SYMBOL	COLOR
OR	ORANGE
BL	BLUE
BR	BROWN
W	WHITE
Y	YELLOW
R	RED
GR	GRAY
B	BLACK
N	NATURAL
G	GREEN

(S-8G0)
(S-8G1)
(S-8G2)

ORDER NO.SIMMC0303012C2

Service Manual

Microwave Oven

NN-V653WF NN-V653CF / NN-V623MF NN-F663WF / NN-F653WF NN-F623MF / NN-V453WF NN-V423MF / NN-T553WF NN-T523MF / NN-T543WF NN-Q553WF / NN-Q523MF NN-Q543WF

BPQ(U.K.)

GPG(Germany)

EPG(France, Italy, Finland, Spain, Portugal, Greece, Poland, Holland)

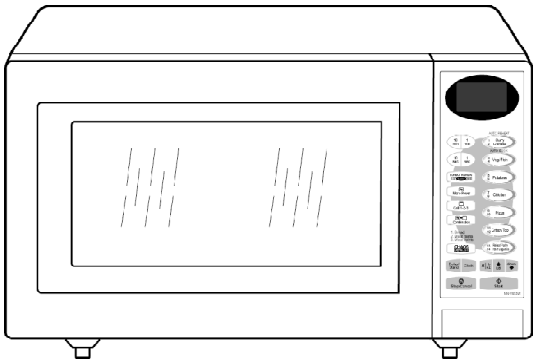

SPECIFICATIONS

Specifications: (For Grill Models)

Specifications \ Models		V653WF/CF BPQ V623MF BPQ	V653WF/CF GPG V623MF GPG	V453WF BPQ	V453WF GPG V423MF GPG	F663WF EPG F623MF EPG	F653WF EPG
Power Source:		230V AC Single Phase,50Hz---------- For GPG,EPG Models. 230V-240V AC Single Phase,50Hz---------- For BPQ Models.					
Power Requirement:	Microwave	1260W	1260W	1160W	1160W	1260W	1260W
	Heater	1350W	1350W	1150W	1150W	1350W	1350W
Output:	Microwave(IEC60705)	1000W	1000W	1000W	1000W	1000W	1000W
	Heater	1300W	1300W	1100W	1100W	1300W	1300W
Microwave Frequency:		2450MHz					
Timer:		99min.99sec				30min.(HIGH POWER)/99min.	
Outside Dimensions:		510mm(D) x 380mm(W) x 304mm(H)					
Oven Cavity Dimensions:		359mm(D) x 352mm(W) x 217mm(H)					
Weight:		12.5kg					
PbF		This product with PbF					
Output power: IEC60705 Test Procedure							
Specifications subject to change without notice.							

Specification: (For Solo Models)

	T553WF BPQ	T523MF BPQ	T543WF BPQ	Q553WF EPG	Q523MF EPG	Q543WF EPG
Power Source:	230V AC Single Phase,50Hz---------- For GPG,EPG Models. 230V-240V AC Single Phase,50Hz---------- For BPQ Models.					
Power Requirement:	1260W	1260W	1160W	1260W	1260W	1160W
Output(IEC60705)	1000W	1000W	1000W	1000W	1000W	1000W
Microwave Frequency:	2450MHz					
Timer:	99min.99sec				30min.(HIGH POWER)/99min.	
Outside Dimensions:	510mm(D) x 380mm(W) x 304mm(H)					
Oven Cavity Dimensions:	359mm(D) x 352mm(W) x 217mm(H)					
Weight:	11.5kg					
PbF	This product with PbF					
Output power: IEC60705 Test Procedure						
Specifications subject to change without notice.						

© 2003 Shanghai Matsushita Microwave Oven Co., Ltd. / All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

WARNING

1. This product should be serviced only by trained, qualified personnel.
2. Check for radiation leakage before and after every servicing according to the "procedure for measuring radiation leakage."
3. If the unit cannot be repaired on site, advise the customer not to use until unit is repaired.
4. There are special components used in the microwave oven which are important for safety. These parts are marked with a ⚠ on the replacement parts list. It is essential that these critical parts be replaced only with the manufacture's specified parts to prevent microwave leakage, shock, fire, or other hazards. Do not modify the orginal design.

This service manual covers products for following markets.
When troubleshooting or replacing parts, please refer to the country identifications shown below for your applicable product specification.

BPQ ..... For U.K.

GPG ..... For Germany

EPG ..... For France, Italy, Finland, Spain
Portugal, Greece, Poland, Holland

CAUTION

About lead free solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

Caution:
- Pb free solder has a higher melting point than standard solder; Typically the melting point is 30 - 40˚C higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 370 ± 10˚C.
- Pb free solder will tend to splash when heated too high (about 600˚C).

Panasonic®

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY **(U)**

INVERTER WARNING

This Inverter board looks like a regular PCB. However, this PCB drives the magnetron tube with extremely high voltage and high current. NEW H.V.

IT HAS:

1. **Very high voltage and high current circuits.**
   It functions the same as the high voltage transformer and high voltage capacitor in ordinary microwave ovens.
2. **Aluminum heat sink is energized with very high voltages and high heat energy.**
3. **Very high voltage may remain in circuitry even when oven is off. High voltage charge may remain in the capacitors on the board.**

DO NOT:

* 1. **Do not touch circuitry because it has very hot (high voltage) circuitry. Even when replacing board, extreme care should be taken to avoid possible electric shock hazards. High voltage charge may remain in circuit.**

* 2. **Do not touch aluminum heat sink because it is energized with very high voltage and also is very hot in high heat energy.**

* 3. **Do not try to adjust or tamper with preset control on the Inverter board because it is very dangerous to adjust without proper test equipment.**

* 4. **Do not test oven while Inverter grounding plate or screws are loose. It is very dangerous to operate H.V. Inverter Circuit (U) with loose mounting screws or if improperly grounded.**

* 5. **Do not try to repair Inverter PCB because it is very dangerous to repair. Replace as a complete High Voltage Inverter Circuit unit.**

INVERTER POWER SUPPLY

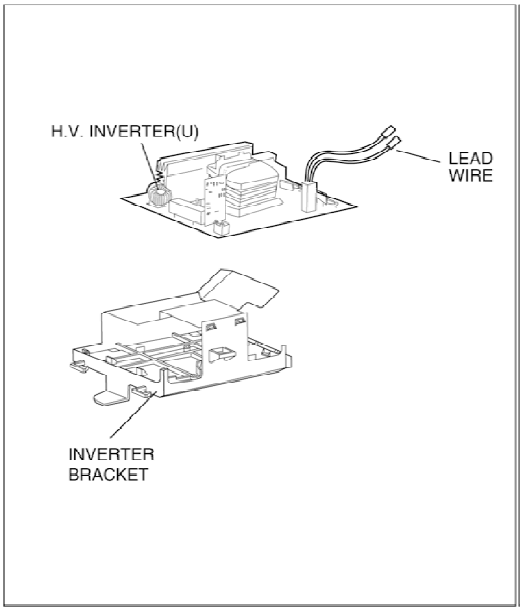

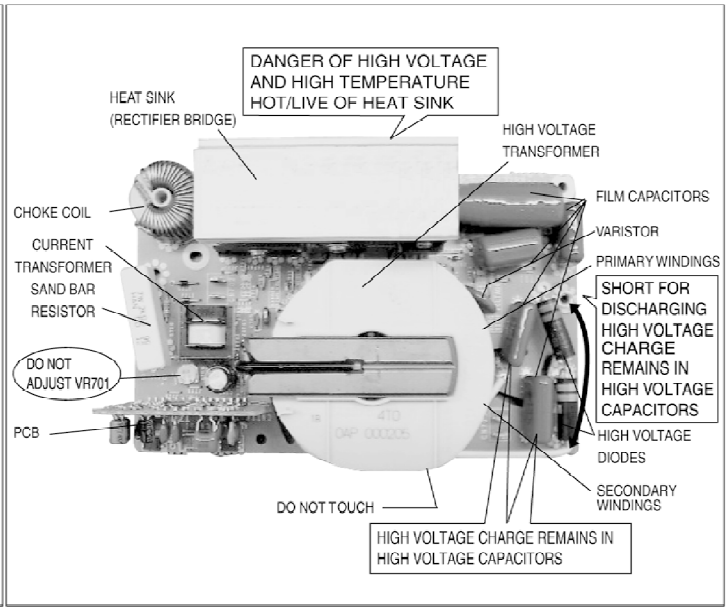

1. SCHEMATIC DIAGRAM (FOR GRILL MODELS)

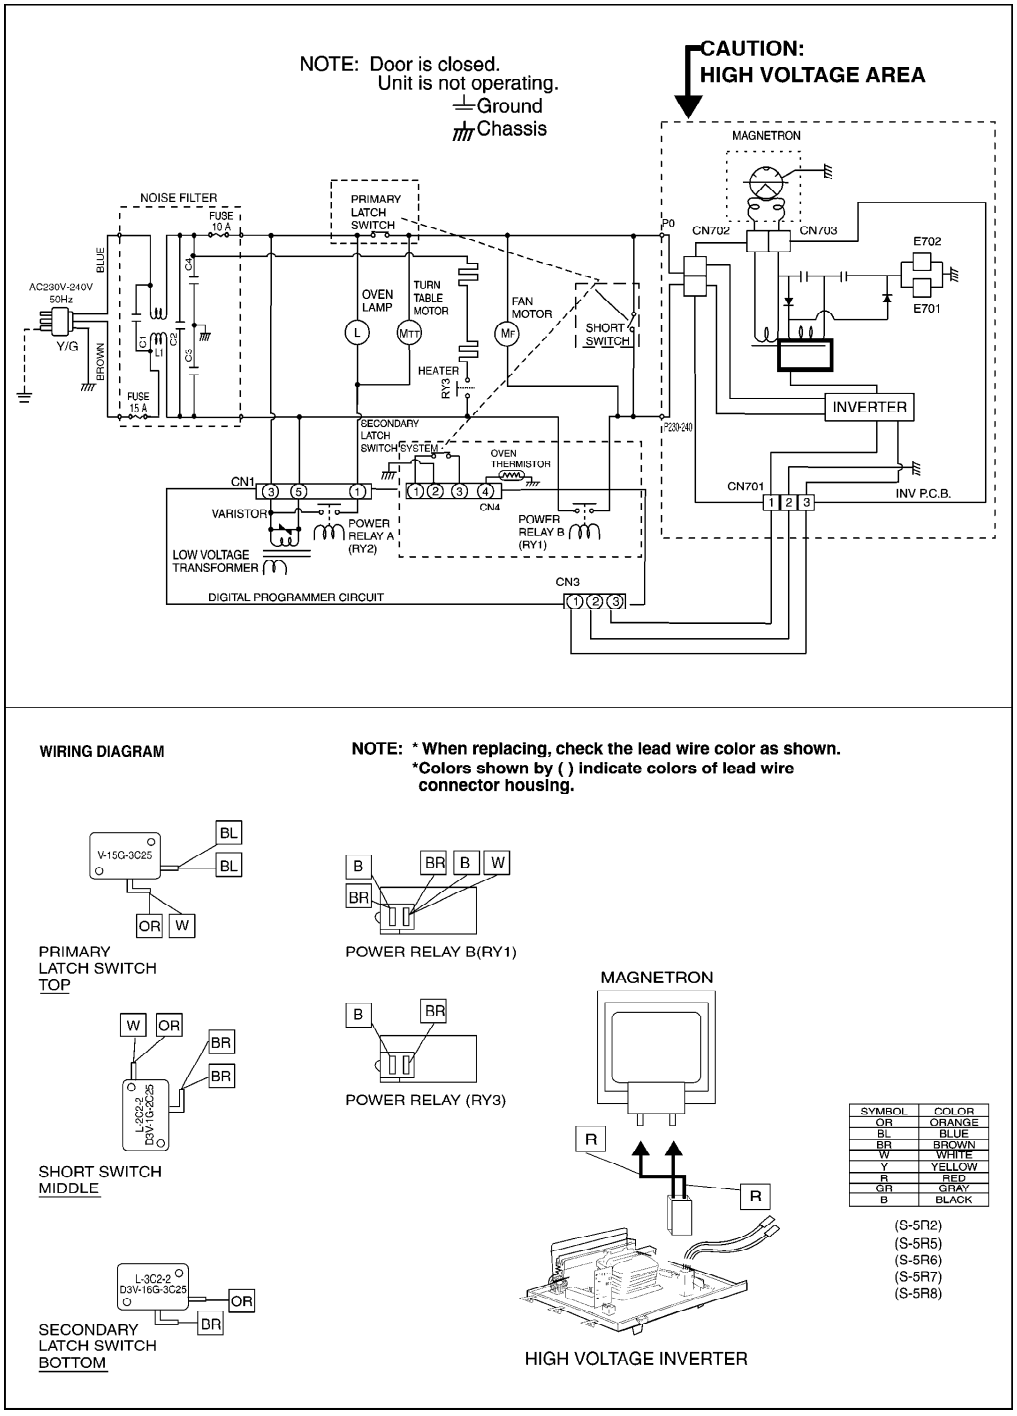

2. SCHEMATIC DIAGRAM (FOR SOLO MODELS)

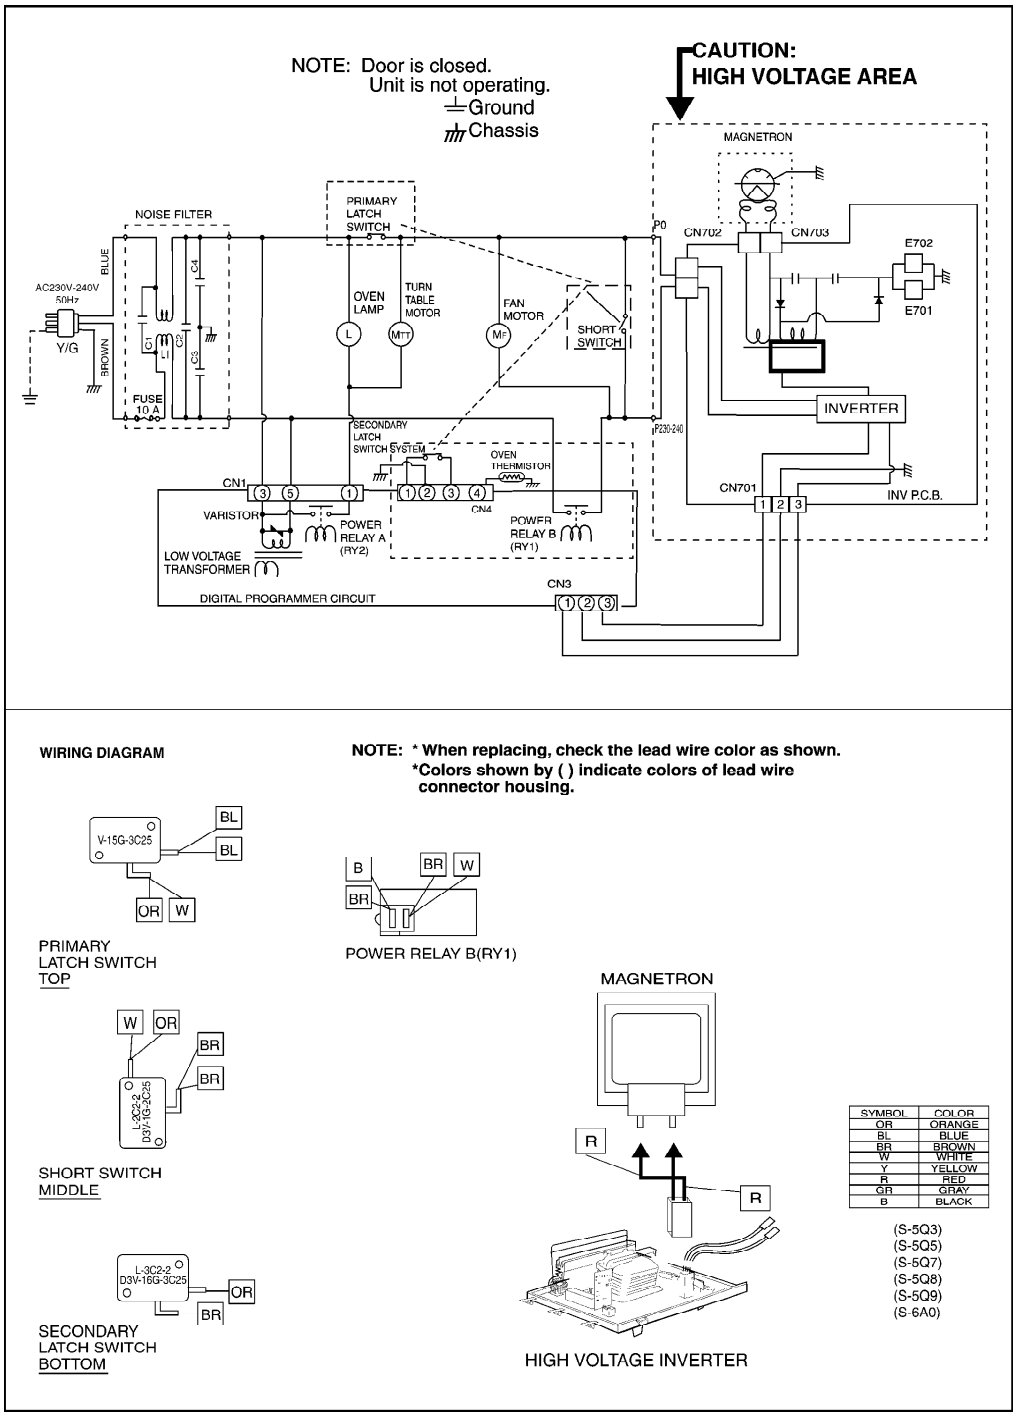

3. DESCRIPTION OF OPERATING SEQUENCE

3.1. Variable power cooking control

High Voltage Inverter Power supply (U) controls output power by the signal from Digital Programmer Circuit (DPC). Power relay stays ON for P4 to P10 and For P1 to P3, both inverter drive signal and power relay to control output power.

NOTE:

The ON/OFF time ratio does not correspond with the percentage of

microwave power since approximately 2 seconds are required for heating of magnetron filament.

Variable Power Cooking

POWER SETTING		OUTPUT POWER(%) APPROX.	ON-OFF TIME OF POWER RELAY (RY1)	
			ON(SEC)	OFF(SEC)
HIGH	P10	100%	22	0
	P9	90%	22	0
	P8	80%	22	0
MEDIUM-HIGH	P7	70%	22	0
MEDIUM	P6	60%	22	0
	P5	50%	22	0
	P4	40%	22	0
MEDIUM-LOW	P3	30%	22	0
	P2	20%	15	7
	P1	10%	8	14
DEFROST	P3	30%	22	0

3.2. Inverter power supply circuit [NEW H.V.]

This Inverter Power Supply Circuit supplies 4,000V DC to the magnetron tube from the line voltage, 230-240V 50Hz AC input. functions as the H.V. transformer, the H.V.capacitor and H.V.Diode.

1. **The AC input voltage 230-240V 50Hz is rectified to DC voltage immediately.**
2. **DC voltage will be supplied to the switching devices called IGBT. These devices will be switched ON-OFF by the 20 to 40 kHz PWM. (pulse width modulation) signal from the microcomputer in the DPC.**
3. **This drives the High voltage transformer to increase up to 2,000V AC and approximately 3V AC by means of transformer.**
4. **Then the half-wave doubler voltage rectifier circuit, consisting of the H.V. diodes and Capacitors, generates the necessary 4,000V DC needed for the magnetron.**
5. **Output power of the magnetron tube is always monitored by the signal output from the current transformer built into the inverter circuit.**
6. **Then this signal will be fed back to the microcomputer in the DPC**

to determine operating conditions and output necessary to control PWM signal to the inverter Power Supply to control output power.

3.3. Inverter turbo defrost

When this Auto Control feature is selected and the Start Pad is tapped:

1. The digital programer circuit determines the power level and cooking time to complete cooking and indicates the operating state in the display window. Table shows the corresponding cooking times for respective serving by categories.
2. When cooking time the display window has elapsed, the oven turns off automatically by a control signal from the digital programmer circuit.

4. CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING

Unlike many other appliances, the microwave oven is a high voltage, high current device. It is free from danger in ordinary use, though extreme care should be taken during repair.

Caution

Servicemen should remove their watches whenever working close to or replacing the magnetron.

4.1. Check the grounding

Do not operate on a two wire extension cord. The microwave oven is designed to be grounded when used. It is imperative, therefore, to ensure the appliance is properly grounded before beginning repair work.

4.2. Inverter warnings

DANGER, HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LINE) OF THE INVERTER POWER SUPPLY (U)

This high voltage inverter power supply handles very high voltage and current for the magnetron tube. Though it is free from danger in ordinary use, extreme care should be taken during repair.
The aluminum heat sink is also energized with high voltage (HOT), so do not touch when the AC input terminals are energized. The power devices Collector is directly connected to the aluminum heat sink.
The aluminum heat sink may be HOT due to heat energy, therefore, extreme care should be taken during servicing.

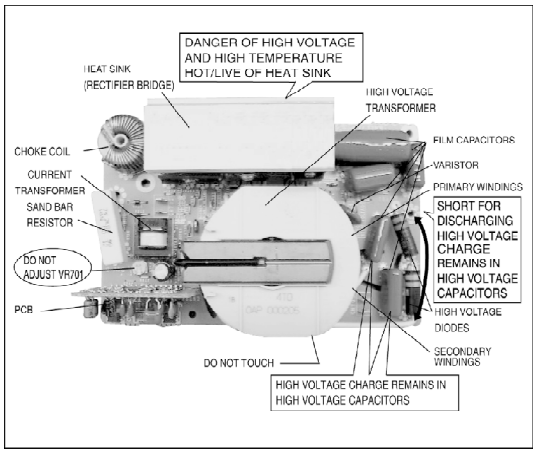

H.V. Inverter warning

WARNING FOR INVERTER POWER SUPPLY (U) GROUNDING

Check the high voltage inverter power supply circuit grounding. The high voltage inverter power supply circuit board must have a proper chassis ground, the inverter grounding bracket must be connected to the chassis. If the inverter board is not grounded it will expose the user to very high voltages and cause extreme DANGER! Be sure that the inverter circuit is properly grounded via the inverter earth bracket.

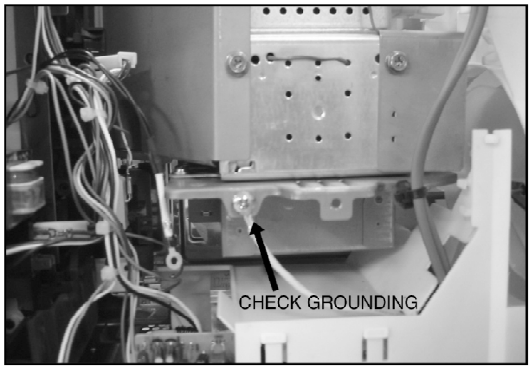

Grounding of the inverter circuit board

WARNING! DISCHARGE THE HIGH VOLATGE CAPACITORS

For about 30 seconds after the oven is turned off, an electric charge remains in the high voltage capacitors in the inverter power supply circuit board.

When replacing or checking parts, remove the power plug from the outlet and short the inverter output terminal of the magnetron filament terminals to the chassis ground with an insulated handle screwdriver to discharge. Please be sure to touch the chassis ground side first and then short to the output terminals.

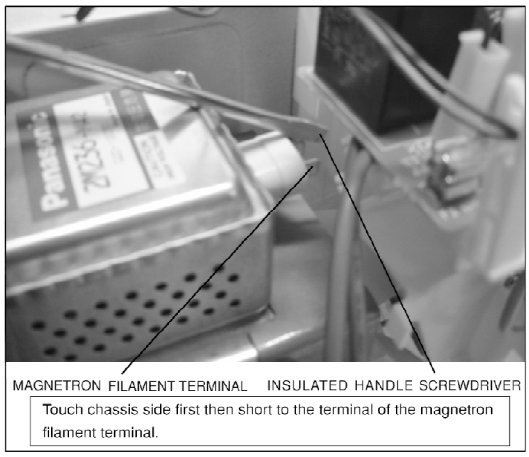
MAGNETRON FILAMENT TERMINAL
INSULATED HANDLE SCREWDRIVER
Touch chassis side first then short to the terminal of the magnetron filament terminal.

Discharging the high voltage capacitors

WARNING

There is high voltage present with high current capabilities in the circuits of the primary and secondary windings, choke coil and heat sink of the inverter. It is extremely dangerous to work on or near these circuits with the oven energized. DO NOT measure the voltage in the high voltage circuit including the filament voltage of the magnetron.

WARNING

Never touch any circuit wiring with your hand or with an insulated tool during operation.

4.3. Part replacement.

When any part or component is to be replaced, always ensure that the power cord is removed from the wall outlet.

4.4. When the 10A fuse is blown due to the operation of the short switch:

WARNING

When the 10A 250V fuse is blown due to the operation of the interlock monitor switch, replace all of the components (primary latch switch, secondary latch switch, short switch and power relay B (RY1)).

1. **This is mandatory. Refer to “adjustments and measurements” for the location of these switches.**
2. **When replacing the fuse, confirm that it has the appropriate rating for these models.**
3. **When replacing faulty switches, be sure the mounting tabs are**

not bent, broken or deficient in their ability to hold the switches.

4.5. Avoid inserting nails, wire etc. through any holes in the unit during operation.

Never insert a wire, nail or any other metal object through the lamp holes on the cavity or any holes or gaps, because such objects may work as an antenna and cause microwave leakage.

4.6. Confirm after repair

1. After repair or replacement of parts, make sure that the screws of the oven, etc. are neither loose nor missing. Microwaves might leak if screws are not properly tightened.
2. Make sure that all electrical connections are tight before inserting the plug into the wall outlet.
3. Check for microwave energy leakage. (Refer to procedure for measuring microwave energy leakage).

CAUTION MICROWAVE RADIATION

USE CAUTION NOT TO BECOME EXPOSED TO RADIATION FROM THE MICROWAVE MAGNETRON OR OTHER PARTS CONDUCTING MICROWAVE ENERGY

IMPORTANT NOTICE

The following components have potentials above 2000V while the appliance is operated.

- Magnetron
- High voltage transformer (Located on inverter (U))
- High voltage diodes (Located on inverter (U))
- High voltage capacitors (Located on inverter (U))

Pay special attention to these areas.

When the appliance is operated with the door hinges or magnetron fixed incorrectly, the microwave leakage can exceed more than 5mW/cm$_2$. After repair or exchange, it is very important to check if the magnetron and the door hinges are correctly installed.

4.7. Sharp edges

Caution

Please use caution when unpacking, installing or moving the unit, as some exposed edges may be sharp to the touch and cause injury if not handled with care.

5. DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE

5.1. Magnetron

1. Discharge high voltage charge.
2. Remove 1 screw holding air guide A.
3. Remove 1 screw holding air guide F.
4. Remove 4 screws holding themistor.
5. Disconnect 2 high voltage lead wires from magnetron filament terminals.
6. Remove 4 screws holding the magnetron.

NOTE:

After replacement of the magnetron, tighten mounting screws properly making sure there is no gap between the waveguide and the magnetron to prevent microwave leakage.

CAUTION
When replacing the magnetron, be sure the antenna gasket is in place.

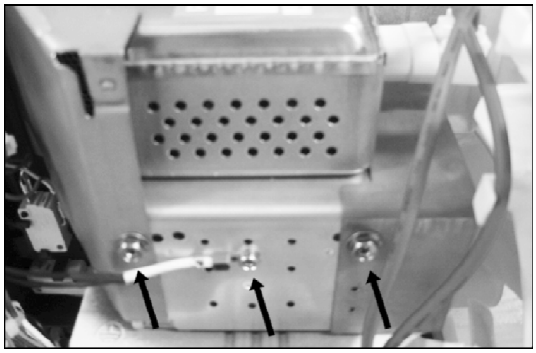

5.2. Digital programmer circuit (D.P.C) and membrane key board.

NOTE:

Before handing the D.P.C ensure that your body is connected to ground to discharge any electric charge.

1. Disconnect all connectors from D.P.C.
2. Remove 1 screw holding escutcheon base and slide the escutcheon base upward slightly.

3. Remove 1 screw holding D.P.C.
4. Release lock of connector CN6 by pushing both levels to inside and pull them upward, and remove flat cable of membrane keyboard.
5. Separate D.P.C board from tabs on the escutcheon base and remove D.P.C board.

To replace membrane key board

6. Push the upper part of key board (display window portion) from back of escutcheon base and peel off escutcheon sheet and membrane key board completely from escutcheon base.

NOTE:

1. The membrane key board is attached to the escutcheon base with double faced adhesive tape. Therefore, applying hot air such as using a hair dryer is recommended for smoother removal. / 2. When installing new membrane key board, make sure that the surface of escutcheon base is cleaned sufficiently so that any problems (shorted contacts or uneven surface) can be avoided. / 3. Alignment position of membrane key board is as follows; / Membrane key board: Right and upper edges / Escutcheon sheet: Right and upper edges

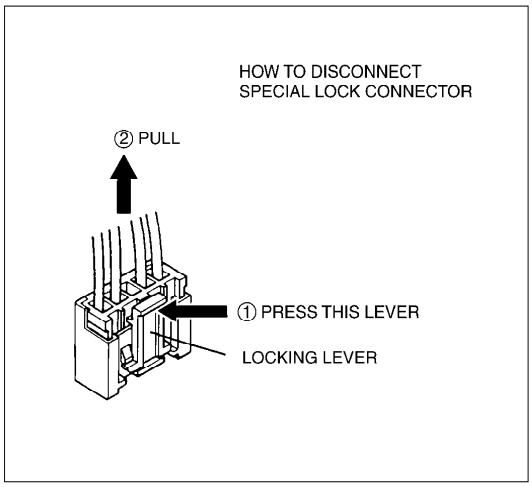

5.3. Low voltage transformer and/or power relays (RY1, RY2)

NOTE:

Be sure to ground any static electric charge built up on your body before handling the DPC.

(A) Using solder wick or a desoldering tool and 30W soldering iron, carefully remove all solder

from the terminal pins of the low voltage transformer and/or power relays.

NOTE:

Do not use a soldering iron or desoldering tool of more than 30 watts on DPC contacts.

(B) With all the terminal pins cleaned and separated from DPC contacts, remove the defective transformer/power relays making sure all terminal pins are inserted completely. Resolder all terminal contacts carefully.

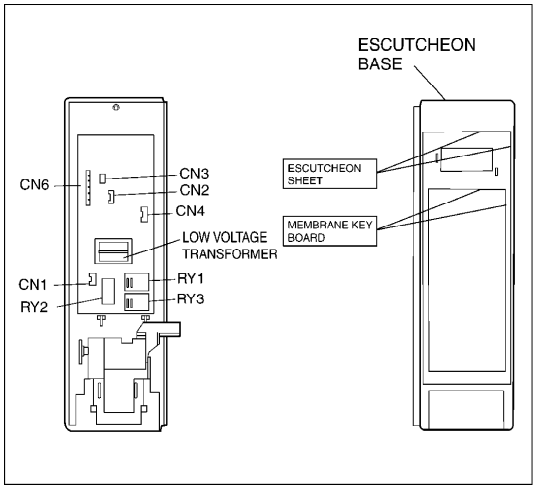

5.4. Fan motor

1. Disconnect 2 lead wires from fan motor terminals.
2. Remove 1 screw located on oven attaching orifice assembly.
3. Remove orifice from oven assembly.
4. Remove 2 screws holding fan motor to oven assembly.
5. Remove fan blade from the fan motor shaft by pulling it straight out.

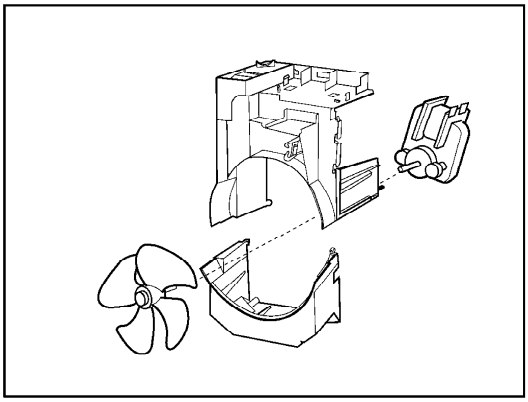

5.5. Door assembly

1. Remove door C from door E by carefully pulling outward starting

from upper right hand corner using a flat blade screwdriver.

2. Separate door E from tabs on door A and remove door A.
3. Open Door E at the opening angle of approximately 10°(Note: The door cannot be removed if the opening angle is greater than 10°).
4. Remove the door E from its hinges by pushing the door E upward and out.
5. Remove door screen B from door A.
6. Remove door key and door key spring.
7. Place the door's lower hinge pin into the bottom hinge hole.
8. Use your left index finger to support the door's lower hinge pin while guiding the door's upper hinge pin into the top hinge hole.
9. Lower your finger to seat the door onto the hinges.
10. Replace other components.

NOTE:

Door alignment is crucial. If door is misaligned, apply pressure until alignment is achieved.

NOTE:

After replacement of the defective component parts of the door, reassemble, install, and perform microwave leakage test.

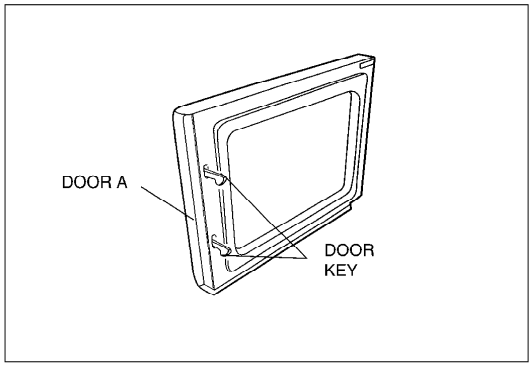

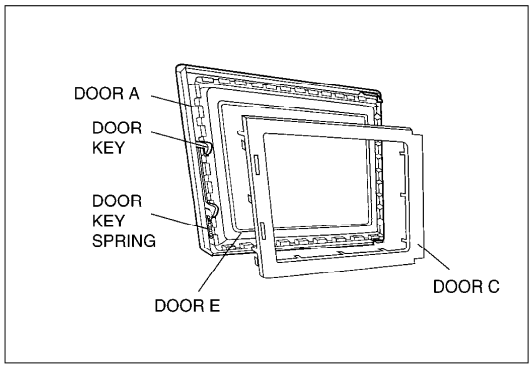

5.6. Turntable motor

1. **Remove the motor cover by cutting at the locations indicated by the arrows with a cutter.**
   NOTE:
   After removing the motor cover, be sure that cut portions are properly trimmed or bent to the inside so that no sharp edges will be exposed to outside.
2. **Disconnect 2 lead wires connected to the turntable motor.**
3. **Remove the turntable motor by removing screw.**
   NOTE:
   After replacing the new turntable motor and reconnecting the two lead wires, reinstall the motor cover by rotating it 180°, tucking the tabs into the base in the 2 provided slots, then screw the single tab to the base using a 4mm X 6mm screw (not provided). /

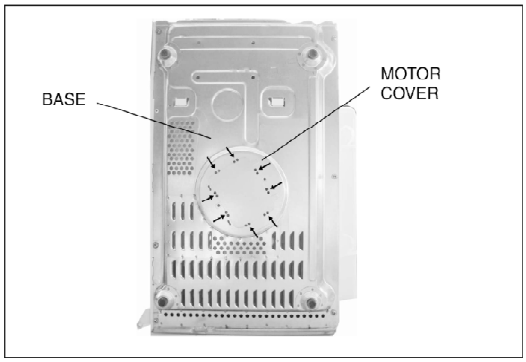

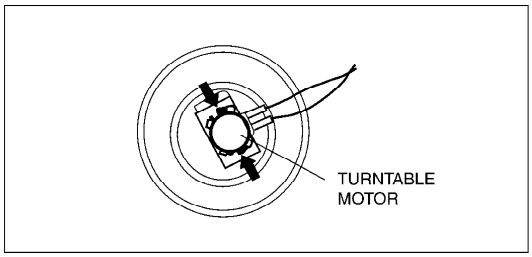

5.7. Steam sensor

1. Disconnect connector CN2 from digital programmer circuit board.

2. Disengage catch hooks on sensor cover c from orifice.

3. Remove steam sensor from orifice.

NOTE:

When installing the steam sensor, make sure that the direction of steam sensor is as shown in figure. /

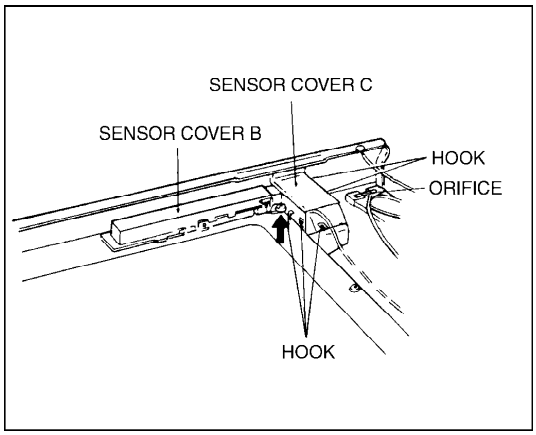

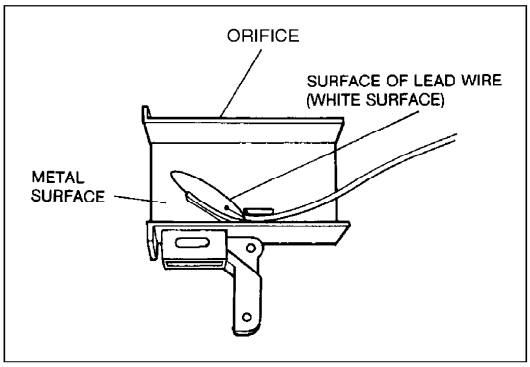

5.8. Quartz heater(For Brown Models)

1. Disconnect lead wires from heater terminals.

2. Remove 2 screws holding heater supports.

3. Remove the heater by pulling it out.

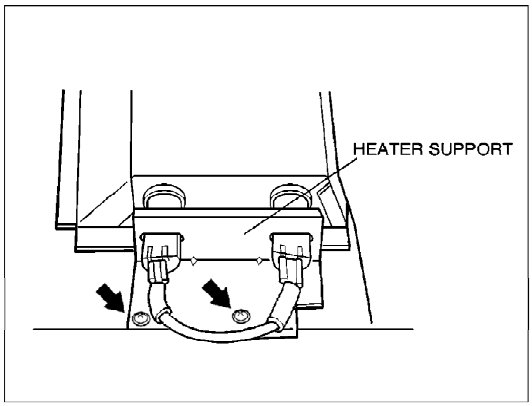

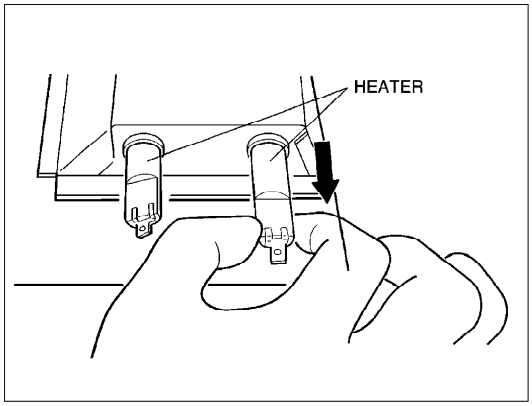

5.9. Inverter power supply

CAUTIONS

1.Always leave the grounding plate in place.

2.Always securely tighten the ground screw through the bottom of the chassis (base).

3.Securely connect 3 lead wire connectors.

4.Make sure the heat sink has enough space (gap) from the oven. Take special care not to touch any lead wire to the aluminum heat sink because it is hot.

1. Remove cabinet outer panel.

2. Remove the the H.V.lead wire from magnetron terminals.

3. Disconnect 2 connectors from CN701 & CN702 on H.V.Inverter(U).

4. Remove 1 screw holding grounding lead wire.

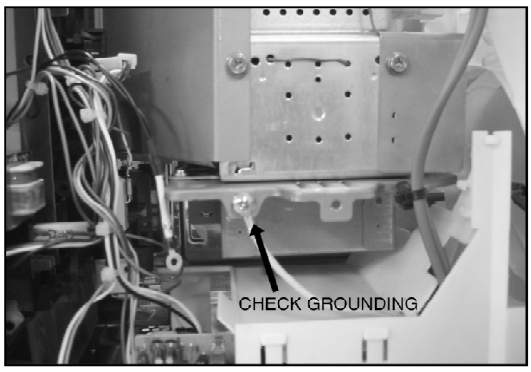

5. Remove 2 screws holding Inverter bracket to the base.

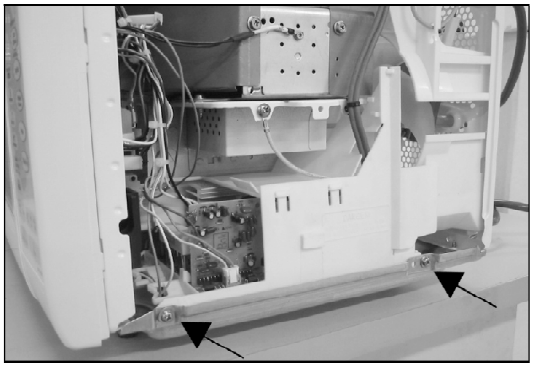

6. Slide 2 locking tabs of Inverter bracket at the bottom of the base in direction of arrows.

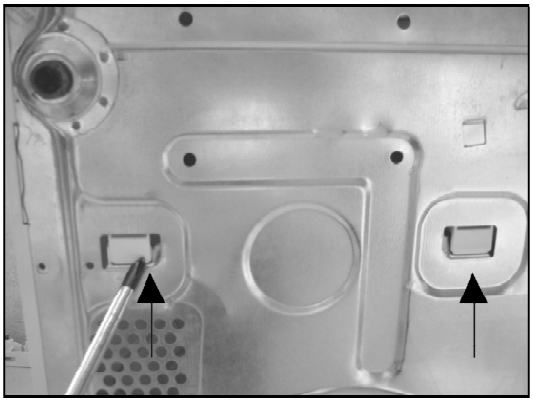

7. Remove 2 screws holding H.V.Inverter to Inverter bracket.

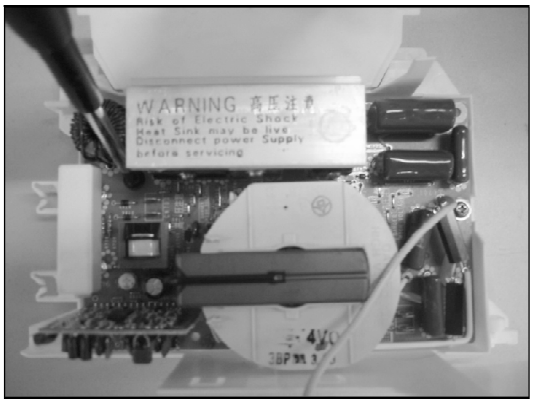

6. COMPONENT TEST PROCEDURE

CAUTION [NEW. H.V.]

1. High voltage is present at the high voltage terminal of the High Voltage Inverter (U) including aluminum heat sink during any cook cycle.

2. It is neither necessary nor advisable to attempt measurement of the high voltage.

3. Before touching any oven components, or wiring, always unplug the oven from its power source and discharge the high voltage capacitors.

6.1. Primary latch switch (Secondary latch switch and power relay B) interlocks.

1. **Unplug the lead connectors to Power Relay B and verify continuity of the power relay B 1-2 terminals.**
2. **Unplug lead connectors to Primary Latch Switch and Secondary Latch Switch.**
3. **Test the continuity of switches at door opened and closed positions with ohm meter (low scale). / Normal continuity readings should be as follows.**

	Door Closed	Door Opened
Primary Latch Switch	0 Ω (close)	∞ Ω (open)
Secondary Latch Switch	0 Ω (close)	∞ Ω (open)
Power Relay B	∞ Ω (open)	∞ Ω (open)

6.2. Short switch & monitor

1. Unplug lead wires from Inverter Power Supply (U) primary terminals.
2. Connect test probes of ohm meter to the disconnected leads which were connected to Inverter Power Supply (U).
3. Test the continuity of short switch with door opened and closed positions using lowest scale of the ohm meter. / Normal continuity readings should be as follows.

Door Opened	Door Closed
0 Ω	∞ Ω

6.3. Magnetron

Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose for an open filament or shorted magnetron.

1. Isolate magnetron from the circuit by disconnecting the leads.
2. A continuity check across magnetron filament terminals should indicate one ohm or less.
3. A continuity check between each filament terminal and magnetron case should read open.

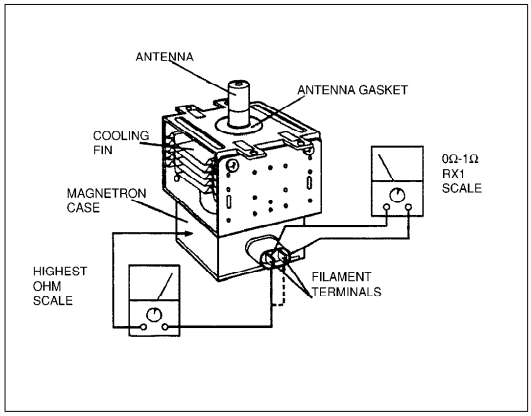

6.4. Membrane key board (Membrane switch assembly)

Check continuity between switch terminals, by tapping an appropriate pad on the key board. The contacts assignment of the respective pads on the key board is as shown in digital programmer circuit.

6.5. Inverter power supply (U)

DO NOT try to REPAIR H.V. Inverter power supply (U).Replace complete H.V. Inverter(U) Unit.

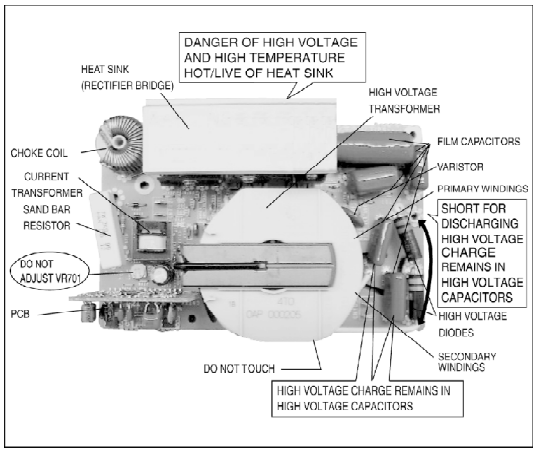

DANGER HIGH VOLTAGE

Test if failure codes of H97 or H98 appear by doing the following procedure. It is recommended to use an AC line input current Ampere meter for testing.

Test1

1. **Program DPC.**
   - **A. Tap Clock Keypad**
   - **B. Tap Timer Keypad**
   - **C. Tap Start Keypad**
   - **D. Tap Micro Power Keypad**
2. **Place 1 liter of water load into oven cavity.**
3. **Unplug 2 pin H.V. lead wire connector CN703 from magnetron tube.**
4. **Program oven at High power for 1 minute and press start.**
   - **A. After approximately 23 seconds, oven stops.**
   - **B. During oven operation, input current is approximately 0.5 to 1A.**

   If both a and b are OK, proceed to test 2.

	INPUT AMPERE	FAILURE CODE
Unplug CN703	0.5 to 1A	Oven stops in 23 seconds after started.

Test2

Continued from Test 1

1. Unplug 3 pin connector CN701. CN703 remains unplugged.
2. Program oven at High power for 1 minute and press start.
   A. After approximately 3 seconds, oven stops.
   B. During oven operation, input current is approximately 0.4A.

	INPUT AMPERE	FAILURE CODE
Unplug CN701	<0.4A	Oven stops in 3 seconds after started.

If both a and b check OK, the Inverter Power Supply (U) can be determined to be OK.

7. MEASUREMENTS AND ADJUSTMENTS

7.1. Adjustment of primary latch switch, secondary latch switch and short switch.

1. Mount the Primary latch switch, the Secondary latch switch and the short switch to the door hook assembly as shown in ILL.
   NOTE:
   No specific individual adjustment during installation of the Primary latch switch, Secondary latch switch or short switch to the door hook are required.
2. When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of the arrows in the illustration, so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.
3. Reconnect the short switch and check the continuity of the monitor circuit and all latch switches again by following the component test procedures on .

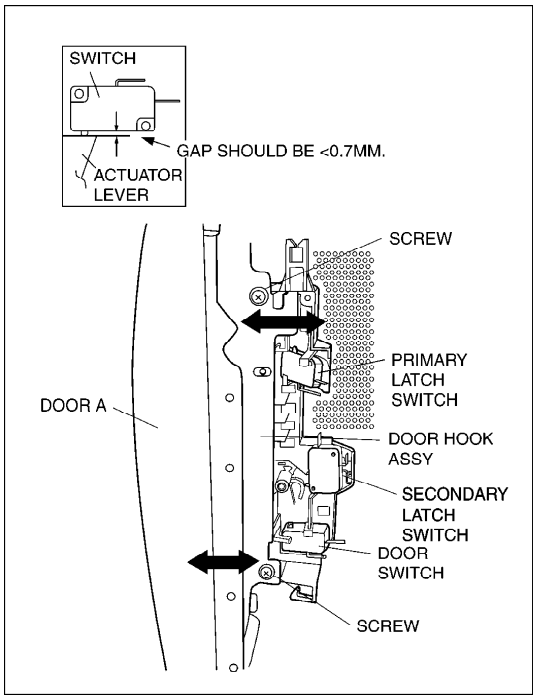

7.2. Measurement of microwave output

The output power of the magnetron can be determined by performing IEC standard test procedures. However,due to the complexity of IEC test procedures, it is recommended to test the magnetron using the simple method outlined below.

Necessary Equipment:

***1 liter beaker *Glass thermometer / *Wrist watch or stopwatch**

NOTE:

Check the line voltage under load.Low voltage will lower the magnetron output. Take the temperature readings and heating time as accurately as possible.

1. **Fill the beaker with exactly one liter of tap water.Stir the water using the thermometer and record the water's temperature. (recorded as T1).**
2. **Place the beaker on the center of glass tray. / Set the oven for High power and heat it for exactly one minute.**
3. **Stir the water again and read the temperature of the water. (recorded as T2).**
4. **The normal temperature rise at High power level for each model, is as shown in table.**

TABLE (1L-1min.test)

RATED OUTPUT	TEMPERATURE RISE
1000W(IEC705-88)	Min.8.6°C

8. PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE

WARNING

Check for radiation leakage after every servicing. Should the leakage be more than 2 mW/cm^2. After repairing or replacing any radiation safety device, keep a written record for future reference, the leakage reading must be recorded on the service repair ticket while in the customer's home.

8.1. Equipment

- Electromagnatic radiation monitor
- Glass thermometer 212 °F or 100 °C
- 600cc glass beaker

8.2. Procedure for measuring radiation leakage

Note before measuring.

- Do not exceed meter full scale deflection. Leakage monitor should initially be set to the highest scale.
- To prevent false readings the test probe should be held by the grip portion of the handle only and moved along the shaded area in Figure no faster than 1 inch/sec (2.5cm/sec).
- Leakage with the outer panel removed ..... less than 5mW/cm$_2$.
- Leakage for a fully assembled oven with door normally closed ..... less than 2mW/cm $_2$.
- Leakage for a fully assembled oven [Before the latch switch (primary) is interrupted] while pulling the door ..... less than 2mW/ cm $_2$.

1. Pour 275 ± 15cc (9ozs ± 1/2oz) of 20°C ± 5°C (68 ± 9°F) water in a beaker which is graduated to 600cc, and place in the center of the oven.
2. Set the radiation monitor to 2450MHz and use it following the manufacturer's recommended test procedure to assure correct results.
3. When measuring the leakage, always use the 2 inch (5cm) spacer supplied with the probe.
4. Tap the start pad or set the timer and with the magnetron oscillating, measure the leakage by holding the probe perpendicular to the surface being measured.

8.2.1. Measurement with the outer panel removed.

Whenever you replace the magnetron, measure for radiation leakage before the outer panel is installed and after all necessary components are replaced or adjusted. Special care should be taken in measuring around the magnetron.

WARNING
Avoid contacting any high voltage parts.

8.2.2. Measurements with a fully assembled oven.

After all components, including outer panel are fully assembled, measure for radiation leakage around the door periphery, the door viewing window, the exhaust opening and air inlet openings.

8.3. Record keeping and notification after measurement

1. **After any adjustment or repair to a microwave oven, a leakage reading must be taken. Record this leakage reading on the repair ticket even if it is zero.**
   A copy of this repair ticket and the microwave leakage reading should be kept by repair facility.

8.4. At least once a year, have the radiation monitor checked for calibration by its manufacturer.

WARNING
AVOID CONTACTING ANY HIGH VOLTAGE PARTS.

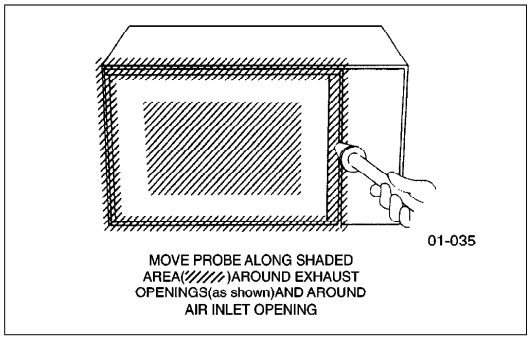

9. TROUBLESHOOTING GUIDE

DANGER HIGH VOLTAGES

1. **DO NOT RE-ADJUST PRESET CONTROL on the H.V.Inverter (U). It is very dangerous to repair o without sufficient test equipment because this circuit handles very large current and high voltag Operating a misaligned inverter circuit is dangerous.**
2. **Ensure proper grounding before checking for trouble.**
3. **Be careful of the high voltage circuitry, taking necessary precautions when troubleshooting.**
4. **Discharge high voltage remains in the H.V.Inverter (U).**
5. **When checking the continuity of the switches or the H.V.Inverter, disconnect one lead wire from parts and then check continuity with the AC plug removed. To do otherwise may result in a false or damage to your meter. When disconnecting a plastic connector from a terminal, you must ho plastic connector instead of the lead wire and then disconnect it, otherwise lead wire may be op connector cannot be removed.**
6. **Do not touch any parts of the circuitry on the digital programmer circuit, since static electric dis may damage this control panel. Always touch yourself to ground while working on this panel to any static charge in your body.**
7. **230-240V AC is present on the digital programmer circuit (Terminals of power relay's and primar of Digital Programmer Circuit). When troubleshooting, be cautious of possible electrical shock h**

Before troubleshooting, operate the microwave oven following the correct operating procedures in the instruction manual in order to find the exact cause of any trouble, since operator error may be mistaken for the oven's malfunction.

9.1. (Trouble) Oven stops operation during cooking

	SYMPTOM	CAUSE	CORRECTIONS
1.	Oven stops in 3 seconds after pressing start pad	No 230-240V AC is supplied to H.V.Inverter (U) CN702 terminals	1. Latch Switch 2. Power relay RY-1 3. Loose lead wire conne CN701, CN702
	Oven stops in 23 seconds after pressing start pad	H.V.Inverter (U) operates by the control signals from DPC but magnetron is not oscillating	1. Magnetron 2. Loose lead wire conne CN703
	Oven stops in 10 seconds after pressing start pad (Auto sensor cooking)	Steam sensor circuit does not function	1. Steam sensor 2. DPC 3. Loose wiring connecto
2.	No display and no operation at all. Fuse is blown.	Most probably loose connection of connectors or door latch mechanism is not adjusted properly	1. Allign door, Door Latch 2. Loose wiring connecto

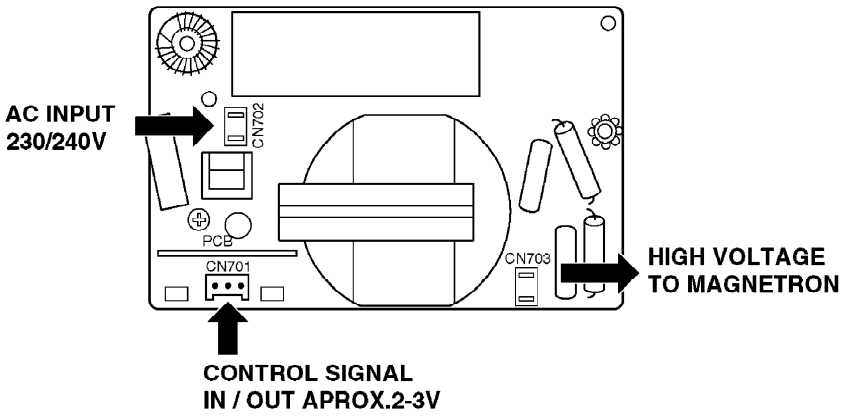

	SYMPTOM	CAUSE	CORRECTIONS
1.	Oven is dead. Fuse is OK. No display and no operation at all.	1. Open or loose lead wire harness Open thermal cutout 2. Open low voltage transformer Defective DPC 3. 4.	Check fan motor if therm is defective.
2.	No display and no operation at all. / Fuse is blown.	1. Shorted lead wire harness Defective primary latch switch 2. (NOTE 1) 3. Defective short switch (NOTE 1) 4. Defective Inverter Power Supply (U)	Check adjustment of pri secondary latch switch a switch including door.
		NOTE 1: All of these switches must be replaced at the same time. Check continuity of power relay B (RY-1)'s contacts (between and if it has continuity, replace power relay B (RY-1) also.	
3.	Oven does not accept key input(Program)	1. Key input is not in sequence Open or loose connection of 2. membrane key pad to DPC (Flat cable) 3. Shorted or open membrane key board 4. Defective DPC	Refer to operation proce Refer to DPC troublesho
4.	Fan motor turns on when oven is plugged in with door closed.	1. Misadjustment or loose wiring of secondary latch switch 2. Defective secondary latch switch	Adjust door and latch sv

	SYMPTOM	CAUSE	CORRECTIONS
5.	Timer starts count down but no microwave oscillation. (No heat while oven lamp and fan motor turn on)	1. Off-alignment of latch switches 2. Open or loose connection of high voltage circuit especially magnetron filament circuit NOTE: Large contact resistance will bring lower magnetron filament voltage and cause magnetron to have lower output and/or have intermittent. 3. Defective high voltage component H.V. Inverter Power Supply (u) Magnetron 4. Open or loose wiring of power relay B (RY-1) 5. Defective primary latch switch 6. Defective DPC or power relay B (RY-1)	Adjust door and latch sv Check high voltage com according to component procedure and replace if defective. Refer to DPC troublesho
6.	Oven can program but timer does not start countdown.	1. Open or loose wiring of secondary latch switch 2. Off-alignment of secondary latch switch 3. Defective secondary latch switch	
7.	Microwave output is low. Oven takes longer time to cook food.	1. Decrease in power source voltage 2. Open or loose wiring of magnetron filament circuit.(Intermittent oscillation) 3. Aging change of magnetron	Consult electrician
8.	Fan motor turns on and turntable rotates when door is opened.	1. Shorted primary latch switch	
9.	Oven does not operate and return to plugged in mode as soon as start pad is pressed.	1. Defective DPC	Check tighten screws or escutcheon base bracke board.
10.	Loud buzzing noise can be heard.	1. Loose fan and fan motor	
11.	Turntable motor does not rotate.	1. Open or loose wiring of turntable motor 2. Defective turntable motor	
12.	Oven stops operation during cooking.	1. Open or loose wiring of primary and secondary latch switch 2. Operation of thermal cutout	Adjust door and latch sv

	SYMPTOM	CAUSE	CORRECTIONS
13.	Oven returns to plugged in mode after 10 seconds elapses on the Auto sensor cooking mode.	1. Open or loose wiring of sensor terminal from DPC 2. Open steam sensor 3. Defective DPC	

9.2. Troubleshooting of inverter circuit (U) and magnetron [NEW H.V.]

This oven is programmed with a self diagnostics failure code system which will help for troubleshooting. H97, H98, and H99 are the provided failure codes to indicate magnetron and inverter circuit problem areas. This section explains failure codes of H97, H98, and H99. First, you must program the DPC by pressing [Clock] , [Timer] , [Start] , [Micro Power] . Program unit for operation. H97, H98, H99 appears in display window a short time after start key is pressed and there is no microwave oscillation.

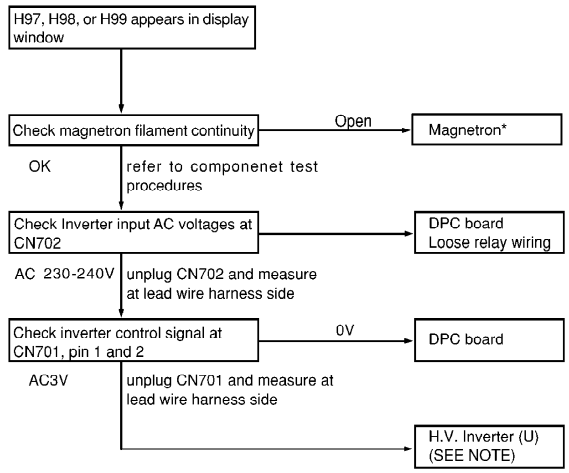
H97, H98, or H99 appears in display window
Check magnetron filament continuity
Open
Magnetron*
OK
refer to componenet test procedures
Check Inverter input AC voltages at CN702
DPC board
Loose relay wiring
AC 230-240V
unplug CN702 and measure at lead wire harness side
Check inverter control signal at CN701, pin 1 and 2
0V
DPC board
AC3V
unplug CN701 and measure at lead wire harness side
H.V. Inverter (U) (SEE NOTE)

NOTE: DO NOT try to repair this Inverter Power Supply (U) and also DO NOT RE-ADJUST PRESET CONTROL on the board. It is very dangerous to repair or adjust without sufficient test equipment because this circuit handles very high voltage and very large current. Off alignment of inverter board operation is dangerous. Operating a misaligned Inverter circuit is dangerous due to the very high voltage and current that is produced by this board. Defective boards must be replaced with a new one.

* Check magnetron filament for open or short to casing before proceeding to determine a good magnetron.

NOTE: After check, unplug unit to reset to normal operation mode.

Alternate way to troubleshoot oven with AC Ampere meter used
H97, H98, H99 appears in display window a short time after start key is pressed and no microwave oscillation with AC Ampere meter used for troubleshooting

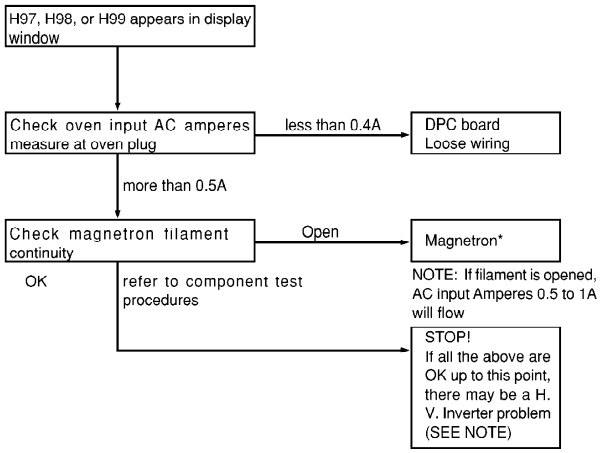
H97, H98, or H99 appears in display window
Check oven input AC amperes measure at oven plug
less than 0.4A
DPC board
Loose wiring
more than 0.5A
Check magnetron filament continuity
Open
Magnetron*
OK
refer to component test procedures
NOTE: If filament is opened, AC input Amperes 0.5 to 1A will flow
STOP!
If all the above are OK up to this point, there may be a H. V. Inverter problem (SEE NOTE)

NOTE: DO NOT try to repair this Inverter Power Supply (U) and also DO NOT RE-ADJUST PRESET CONTROL on the board. It is very dangerous to repair or adjust without sufficient test equipment because this circuit handles very high voltage and very large current. Off alignment of inverter board operation is dangerous. Operating a misaligned Inverter circuit is dangerous due to the very high voltage and current that is produced by this board. Defective boards must be replaced with a new one.

* Check magnetron filament for open or short to casing before proceeding to determine a good magnetron.

NOTE: After check, unplug unit to reset to normal operation mode.

9.3. Digital programmer circuit troubleshooting guide

SYMPTOM	STEP	CHECK	RESULT	CA CORRE
No display when oven is first plugged in. Oven is dead.	1	Fuse pattern of DPC	Normal	STEP 2
			Open (NOTE)	Shorted of ZNR, Oven La etc.Rep
	2	Low voltage transformer (LVT) secondary voltage	Abnormal 0V	LVT
			Normal	→ Step
	3	IC-1 pin 16 voltage (Emitter of Q11)	Abnormal	ZD11, Q
			Normal = 5V	Display

NOTE

Procedure of fuse pattern repairing is as follows:

1. When the fuse pattern (PF2) opens.

(1) Remove the jumper wire (PF1).

(2) Insert the removed jumper wire (PF1) to "(PF2)" position and solder it. If both "PF1" and "PF2 patterns are open, replace DPC.

2. When the fuse pattern (PF4) opens.

(1) Remove the jumper wire (PF3).

(2) Insert the removed jumper wire (PF3) to "(PF4)" position and solder it. If both "PF3" and "PF4 patterns are open, replace DPC.

NOTE:* At the time of these repairs, make visual inspection of the varistor for burning damage ar examine the transformer with tester for the presence of layer short-circuit (check primary coil res If any abnormal condition is detected, replace the defective parts.

No key input	1	Membrane switch continuity	Abnormal	Membra
			Normal	IC-1
No beep sound	1	IC-1 pin 29 voltage	Abnormal	IC-1
			Normal	BZ, Q22
Power relay A(RY-2) does not turn on even though the program has been set and the start pad is tapped	1	IC-1 pin 9 voltage while operation	Abnormal	IC-1
			Normal = 5V	→ Step
	2	Short circuit between collector and Emitter of Q223.	Still does not turn on	RY-2
			RY-2 turns on	Q223
No microwave oscillation at any power setting	1	IC-1 pin 7 and pin 34 voltages while operation at high power	Abnormal	IC-1
			Normal 7---5V	→ Step
	2	Q220 transistor	Abnormal	Q220
			Normal	RY-1
Dark or unclear display	1	Replace display and check operation	Normal	DISPLA
			Abnormal	IC-1

SYMPTOM	STEP	CHECK	RESULT	CA CORRE
Missing or lighting of incorrect segment	1	Replace IC-1 and check operation	Normal	IC-1
			Abnormal	DISPLA
H97/H98 appears in window and oven stops operation. Program High power for 1 minute and conduct following test quickly, unless H97/H98 appears and oven stops. [NEW H.V.]	1	Unplug CN702(2 pin) connector and measure voltage between terminals	0V	1. Latch 2. DPC/ Relay
			AC line voltage of 230-240V	→ Step
	2	Unplug CN701(3 pin) connector and measure pin 1 voltage	0V	DPC
			Approx. AC 3V	Magnet

CONTINUED FOR SENSOR MODELS				
Auto sensor cooking does not operate normally. (Steam Sensor cooking does not detect steam from foods.)	1	Steam sensor terminal voltage by using high impedance tester (20k Ω / V),while breathing on metal surface of sensor	Abnormal = 0V	Steam senso
			Normal>10-30mV	IC-1

9.4. How to check the semiconductors using an OHM meter

Diode



	FORWARD	REVERSE
A-K	SMALL	∞

Transistor

NPN Transistor
2SC·····
2SD·····



	FORWARD	REVERSE
B-E	SMALL	∞
B-C	SMALL	∞
C-E	∞	∞

PNP Transistor
2SA·····
2SB·····



	FORWARD	REVERSE
B-E	SMALL	∞
C-B	SMALL	∞
C-E	∞	∞

Digital Transistor
PNP Transistor



	FORWARD	REVERSE
E-B	10kΩ ~ 30kΩ	10kΩ ~ 30kΩ
C-B	50kΩ ~ 90kΩ	∞
C-E	40kΩ ~ 80kΩ	∞

IGBT
(INSULATED GATE BIPOLAR TRANSISTOR)

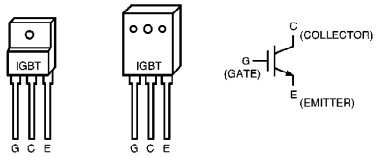

	FORWARD	REVERSE
E-C	SMALL	∞
E-G	∞	∞
C-G	∞	∞

10. EXPLODED VIEW AND PARTS LIST

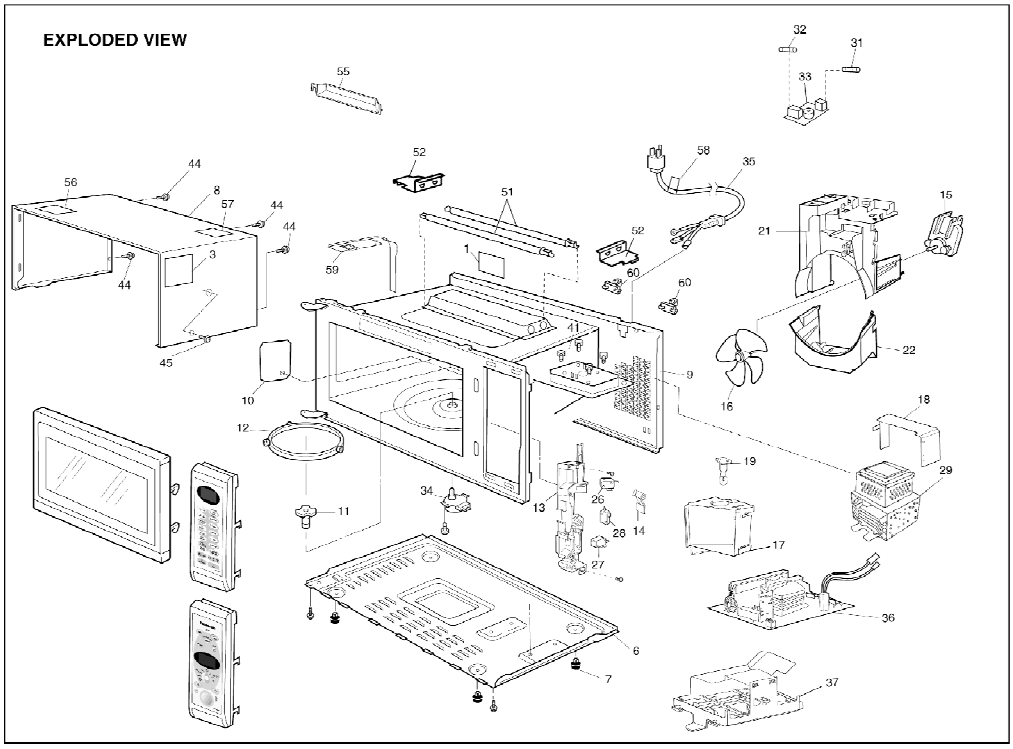

11. PARTS LIST

NOTE:

1. **When ordering replacement part(s), please use part number(s) shown in this part list.**
   Do not use description of the part.
2. **Important safety notice:**
   Components identified by ⚠ mark have special characteristics important for safety.
   When replacing any of these components, use only manufacture's specified parts.

NOTE:

Please order all parts from MELUK in U.K.

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
1		F00064080BP	CAUTION LABEL	1	BPQ
1		F00069000EP	CAUTION LABEL	1	GPG, EPG
3		F04905R80HEP	ENERGY LABEL	1	F663WF EPG
3		F04905R80SEP	ENERGY LABEL	1	F623MF EPG
3		F04905R70HEP	ENERGY LABEL	1	F653WF EPG
3		F04906A00HEP	ENERGY LABEL	1	Q553WF EPG
3		F04905Q90SEP	ENERGY LABEL	1	Q523MF EPG
3		F04905Q50HEP	ENERGY LABEL	1	Q543WF EPG
6		F10015Q00AP	BASE	1	
7		F10084T00AP	RUBBER FOOT	4	
8		F110D5R00HAP	CABINET BODY	1	V***WF, F***WF
8		F110D5R00SAP	CABINET BODY	1	V***MF, F***MF
8		F110D5R00CBP	CABINET BODY	1	V***CF
8		F110D5Q00SAP	CABINET BODY	1	T***MF, Q***MF
8		F110D5Q00HAP	CABINET BODY	1	T***WF, Q***WF
9	⚠	F200A5R60BP	OVEN	1	V653 BPQ/GPG, V623 BPQ/GPG, F663 EPG, / F653 EPG, F623 EPG
9	⚠	F200A5R20BP	OVEN	1	V453WF, V423MF
9	⚠	F200A5Q70BP	OVEN	1	T553WF BPQ, T523MF BPQ, Q553WF EPG, Q523MF EPG
9	⚠	F200A5Q30BP	OVEN	1	T543WF BPQ, Q543WF EPG
10		F20555Q00BP	COVER	1	
11		F21314Y00XN	PULLY SHAFT	1	
12		F290D5Q00AP	ROLLER RING (U)	1	
13	⚠	F30205Q00AP	DOOR HOOK	1	
14		F31365Q00AP	HOOK LEVER A	1	
15		F400A5U00XN	FAN MOTOR	1	
16		F40085G10XN	FAN BLADE	1	
17		F40255Q00AP	AIR GUIDE A	1	
18		F40425Q00AP	AIR GUIDE F	1	
19		F612E5G10XN	INCANDESCENT LAMP (U)	1	(20W/240V)
21		F41445Q00AP	UPPER ORIFICE	1	
22		F42095Q00AP	LOWER ORIFICE	1	
26	⚠	J61415G10XN	MICRO SWITCH	1	V-15G-3C25 (PRIMARY LATCH SWITCH)
27	⚠	F61415U30XN	MICRO SWITCH	1	KW3-0D-A(474) (SECONDARY LATCH SWITCH)
28	⚠	F61785U30XN	MICRO SWITCH	1	KW3-0T-A(375) (SHORT SWITCH)
29	⚠	2M236-M42G	MAGNETRON	1	
31	⚠	A62304210BP	FUSE	1	(10A)
32	⚠	B62304000AP	FUSE	1	V*** BPQ, V*** GPG, F***EPG (15A)
33		J607X4L00BP	NOISE FILTER (U)	1	T*** BPQ, Q*** EPG
33		J607X5R60BP	NOISE FILTER (U)	1	V*** BPQ, V*** GPG, F*** EPG
34		F63265U30XN	TURNTABLE MOTOR	1	
35	⚠	F900C5G50BP	AC CORD W/PLUG	1	T*** BPQ
35	⚠	F900C5G10TN	AC CORD W/PLUG	1	Q*** EPG
35	⚠	F900C5R00BP	AC CORD W/PLUG	1	V*** BPQ
35	⚠	F900C5R00EP	AC CORD W/PLUG	1	V*** GPG, F*** EPG

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
36		F606Y4V00BP	H.V.INVERTER (U)	1	
37		F65855R00BP	INVERTER BRACKET	1	
41		XTWFA4+12T	SCREW	4	FOR MAGNETRON
44		XTWFA4+12D	SCREW	4	FOR CABINET BODY
45		XTCAFA4+ 12AFS	SCREW	1	V***MF, F***MF, T***MF, Q***MF / (FOR CABINET BODY SIDE)
45		XTCAFA4+ 12AFW	SCREW	1	V***WF, F***WF, T***WF, Q***WF / (FOR CABINET BODY SIDE)
45		XTCAFA4+ 12AFC	SCREW	1	V***CF (FOR CABINET BODY SIDE)
51		F630G5R20BP	HEATER (AU)	2	V653WF/CF BPQ, V623MF BPQ (650W, 120V)
51		F630G5R20GP	HEATER (AU)	2	V653WF/CF GPG, V623MF GPG, F*** EPG (650W, 120V)
51		F630G5R00BP	HEATER (AU)	2	V453WF BPQ (550W, 120V)
51		F630G5U00XN	HEATER (AU)	2	V453WF GPG, V423MF GPG (550W, 120V)
52		F64605R00BP	HEATER MOUNTING PLATE	2	V*** BPQ, V*** GPG, F*** EPG
55		F40245R00BP	EXHAUST GUIDE A	1	V*** BPQ, V*** GPG, F*** EPG
56		F01505R00BP	NO TOUCHING LABEL	1	V***MF/WF BPQ
56		F01505R20BP	NO TOUCHING LABEL	1	V***CF BPQ
57		F01505R00GP	NO TOUCHING LABEL	1	V***WF/MF GPG
57		F01505R20GP	NO TOUCHING LABEL	1	V***CF GPG
57		F01505R00EP	NO TOUCHING LABEL	1	F***WF/MF EPG
58		F02395G50BP	AC CORD CAUTION LABEL	1	BPQ
59		F62865Q00BP	HEAT SHIELD	1	
60		F11404J60XN	STOPPER	2	

12. DOOR ASSEMBLY

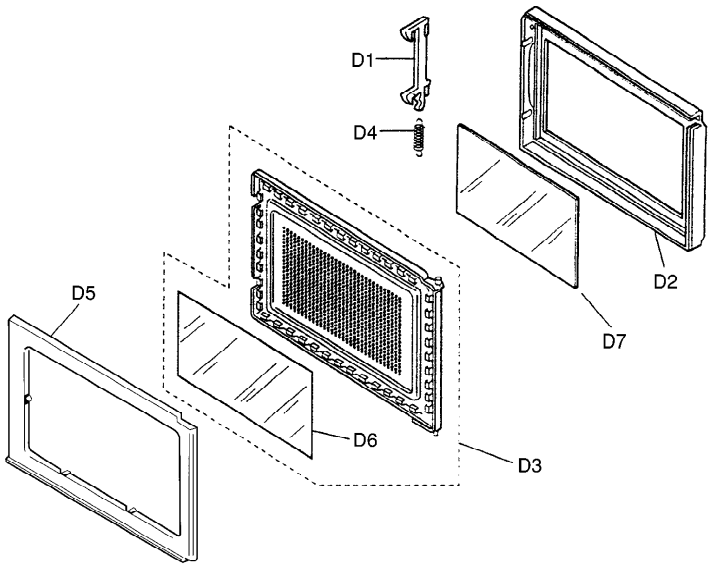

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
D1		F30185Q00AP	DOOR KEY A	1	
D2	⚠	F30015Q00HBP	DOOR A	1	T***WF, Q***WF, V***WF, F***WF
D2	⚠	F30015Q00SBP	DOOR A	1	T***MF, Q***MF, V***MF, F***MF
D2	⚠	F30015Q00CBP	DOOR A	1	V***CF
D3	⚠	F301P5R00AP	DOOR E (U)	1	V*** BPQ, V*** GPG, F*** EPG
D3	⚠	F302K5Q00AP	DOOR E (U)	1	T*** BPQ, Q*** EPG
D4		F30215G10XN	DOOR KEY SPRING	1	
D5	⚠	F30855Q00AP	DOOR C	1	
D6		F31454T00AP	DOOR SCREEN A	1	T*** BPQ, Q*** EPG
D7		F31465R00BP	DOOR SCREEN B	1	V*** BPQ
D7		F31465R00EP	DOOR SCREEN B	1	V*** GPG, F*** EPG
D7		F31465Q00BP	DOOR SCREEN B	1	T*** BPQ
D7		F31465Q00EP	DOOR SCREEN B	1	Q*** EPG

13. WIRING MATERIALS

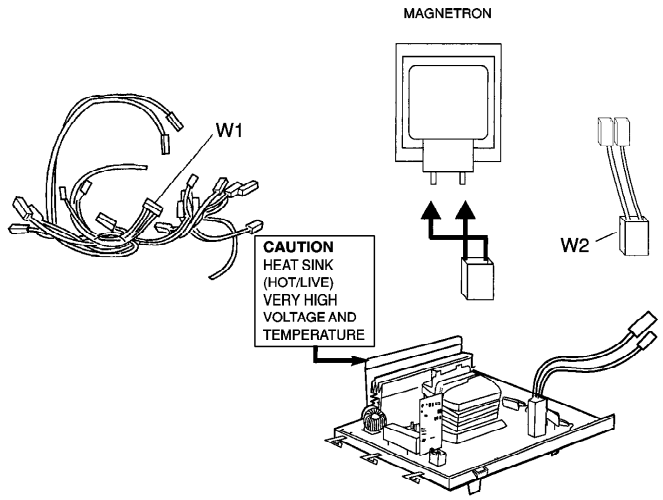

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
W1		F030A5R00BP	LEAD WIRE HARNESS	1	V*** BPQ, V*** GPG, F*** EPG
W1		F030A5Q00BP	LEAD WIRE HARNESS	1	T*** BPQ, Q*** EPG
W2		F030E5Q00AP	H.V.LEAD WIRE	1	

14. ESCUTCHEON BASE ASSEMBLY

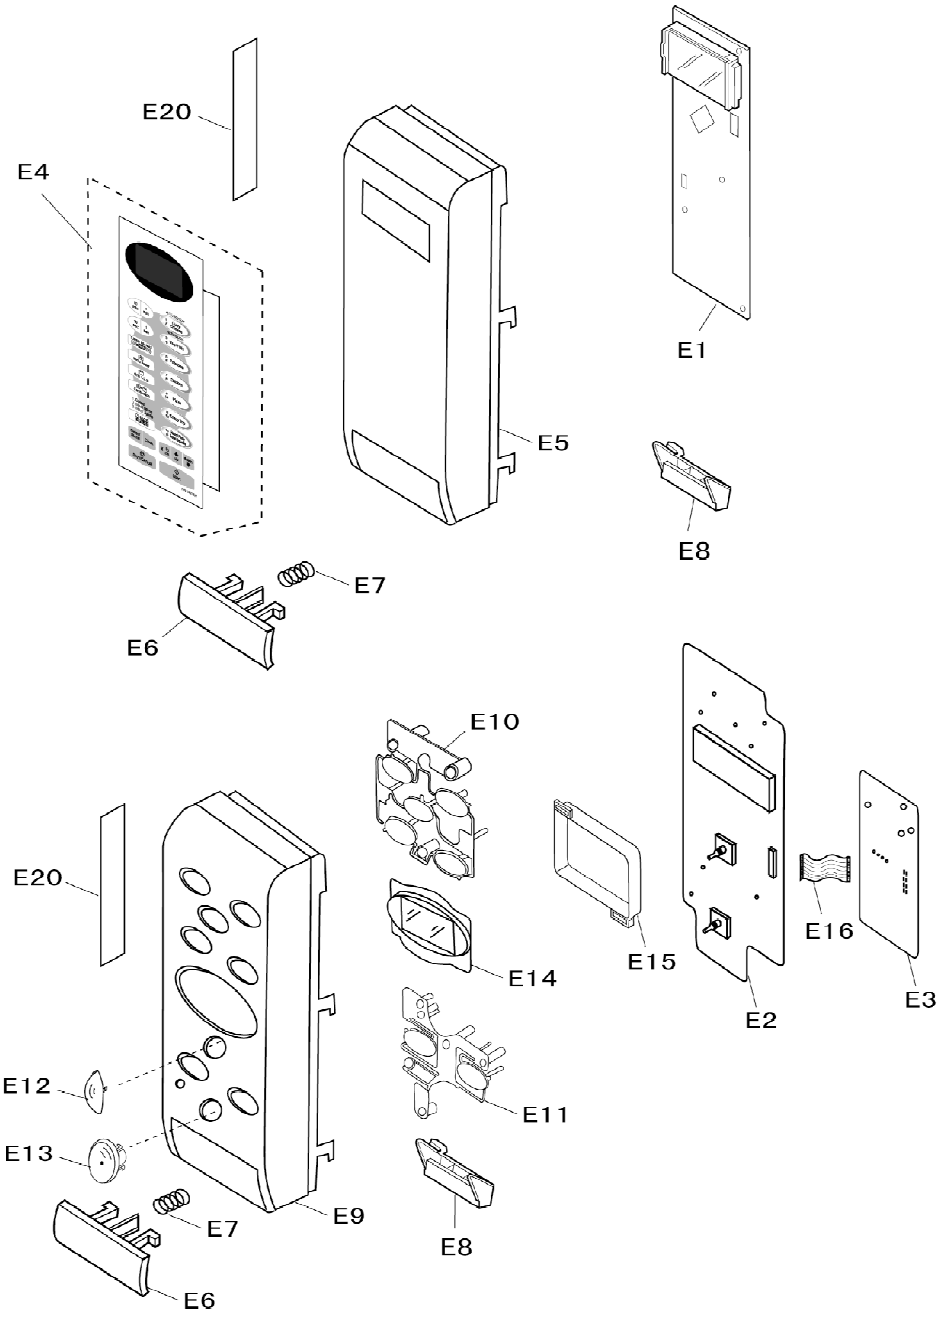
E20
E4
E5
E1
E8
E7
E6
E10
E20
E14
E15
E16
E3
E2
E12
E11
E13
E9
E7
E8
E6

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E1		F603L5R60BP	D.P.CIRCUIT (AU)	1	V653WF/CF BPQ, V623MF BPQ
E1		F603L5R60GP	D.P.CIRCUIT (AU)	1	V653WF/CF GPG, V623MF GPG
E1		F603L5R20BP	D.P.CIRCUIT (AU)	1	V453WF BPQ
E1		F603L5R20GP	D.P.CIRCUIT (AU)	1	V453WF GPG, V423MF GPG
E1		F603L5Q70BP	D.P.CIRCUIT (AU)	1	T553WF BPQ, T523MF BPQ
E1		F603L5Q30BP	D.P.CIRCUIT (AU)	1	T543WF BPQ
E2		F608E5R80EP	D.P.CIRCUIT (ABU)	1	F663WF EPG, F623MF EPG
E2		F608E5R70EP	D.P.CIRCUIT (ABU)	1	F653WF EPG
E2		F608E5Q90EP	D.P.CIRCUIT (ABU)	1	Q553WF EPG, Q523MF EPG
E2		F608E5Q50EP	D.P.CIRCUIT (ABU)	1	Q543WF EPG
E3		F603Y5R80EP	D.P.CIRCUIT (DU)	1	F663WF EPG, F653WF EPG, F623MF EPG
E3		F603Y5Q90EP	D.P.CIRCUIT (DU)	1	Q553WF EPG, Q523MF EPG, Q543WF EPG
E4		F630Y5R60HBP	MEMBRANE SWITCH (U)	1	V653WF BPQ
E4		F630Y5R60CBP	MEMBRANE SWITCH (U)	1	V653CF BPQ
E4		F630Y5R60SBP	MEMBRANE SWITCH (U)	1	V623MF BPQ
E4		F630Y5R60HGP	MEMBRANE SWITCH (U)	1	V653WF GPG
E4		F630Y5R60CGP	MEMBRANE SWITCH (U)	1	V653CF GPG
E4		F630Y5R60SGP	MEMBRANE SWITCH (U)	1	V623MF GPG
E4		F630Y5R20HBP	MEMBRANE SWITCH (U)	1	V453WF BPQ
E4		F630Y5R20HGP	MEMBRANE SWITCH (U)	1	V453WF GPG
E4		F630Y5R20SGP	MEMBRANE SWITCH (U)	1	V423MF GPG
E4		F630Y5Q80HBP	MEMBRANE SWITCH (U)	1	T553WF BPQ
E4		F630Y5Q70SBP	MEMBRANE SWITCH (U)	1	T523MF BPQ
E4		F630Y5Q30HBP	MEMBRANE SWITCH (U)	1	T543WF BPQ
E5		F80345Q00HBP	ESCUTCHEON BASE	1	V653WF BPQ, V653WF GPG, V453WF BPQ, V453WF GPG, T553WF BPQ, T543WF BPQ
E5		F80345Q00SBP	ESCUTCHEON BASE	1	V623MF BPQ, V623MF GPG, V423MF GPG, T523MF BPQ
E5		F80345Q00CBP	ESCUTCHEON BASE	1	V653CF BPQ, V653CF GPG
E6		F80725Q00HAP	DOOR OPENING BUTTON	1	V***WF, F***WF, T***WF, Q***WF
E6		F80725Q00SAP	DOOR OPENING BUTTON	1	V***MF, F***MF, T***MF, Q***MF
E6		F80725Q00CBP	DOOR OPENING BUTTON	1	V***CF
E7		F80375K00AP	COOK BUTTON SPRING	1	
E8		F82565Q00AP	DOOR OPENING LEVEL	1	
E9		F80345R80HEP	ESCUTCHEON BASE	1	F663WF EPG
E9		F80345R70HEP	ESCUTCHEON BASE	1	F653WF EPG
E9		F80345R80SEP	ESCUTCHEON BASE	1	F623MF EPG
E9		F80346A00HEP	ESCUTCHEON BASE	1	Q553WF EPG
E9		F80345Q90SEP	ESCUTCHEON BASE	1	Q523MF EPG
E9		F80345Q50HEP	ESCUTCHEON BASE	1	Q543WF EPG
E10		F80245R80HEP	BUTTON A	1	F663WF EPG, F653WF EPG
E10		F80245R80SEP	BUTTON A	1	F623MF EPG
E10		F80245Q50HEP	BUTTON A	1	Q553WF EPG, Q543WF EPG
E10		F80245Q50BEP	BUTTON A	1	Q523MF EPG
E11		F83875Q50HEP	BUTTON B	1	F663WF EPG, F653WF EPG, Q553WF EPG, Q543WF EPG
E11		F83875Q50BEP	BUTTON B	1	F623MF EPG, Q523MF EPG
E12		F80205Q50HEP	KNOB A	1	F663WF EPG, F653WF EPG, Q553WF EPG, Q543WF EPG
E12		F80205Q50SEP	KNOB A	1	F623MF EPG, Q523MF EPG
E13		F83925Q50HEP	KNOB B	1	F663WF EPG, F653WF EPG, Q553WF EPG, Q543WF EPG
E13		F83925R80SEP	KNOB B	1	F623MF EPG, Q523MF EPG
E14		F81895Q50HEP	DISPLAY WINDOW	1	F663WF EPG, F653WF EPG, F623MF EPG, Q553WF EPG, Q543WF EPG, Q523MF EPG

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
E15		F80165Q50EP	DISPLAY FRAME	1	F663WF EPG, F653WF EPG, F623MF EPG, Q553WF EPG, Q543WF EPG, Q523MF EPG
E16		F66165Q00EP	FLAT CABLE	1	F663WF EPG, F653WF EPG, F623MF EPG, Q553WF EPG, Q543WF EPG, Q523MF EPG
E20		F00075R70HBP	NAME PLATE	1	V653WF BPQ
E20		F00075R70CBP	NAME PLATE	1	V653CF BPQ
E20		F00075R60SBP	NAME PLATE	1	V623MF BPQ
E20		F00075R60HGP	NAME PLATE	1	V653WF GPG
E20		F00075R60CGP	NAME PLATE	1	V653CF GPG
E20		F00075R60SGP	NAME PLATE	1	V623MF GPG
E20		F00075R80HEP	NAME PLATE	1	F663WF EPG
E20		F00075R70HEP	NAME PLATE	1	F653WF EPG
E20		F00075R80SEP	NAME PLATE	1	F623MF EPG
E20		F00075R20HBP	NAME PLATE	1	V453WF BPQ
E20		F00075R20HGP	NAME PLATE	1	V453WF GPG
E20		F00075R20SGP	NAME PLATE	1	V423MF GPG
E20		F00075Q80HBP	NAME PLATE	1	T553WF BPQ
E20		F00075Q70SBP	NAME PLATE	1	T523MF BPQ
E20		F00076A00HEP	NAME PLATE	1	Q553WF EPG
E20		F00075Q90SEP	NAME PLATE	1	Q523MF EPG
E20		F00075Q30HBP	NAME PLATE	1	T543WF BPQ
E20		F00075Q50HEP	NAME PLATE	1	Q543WF EPG

15. PACKING AND ACCESORIES

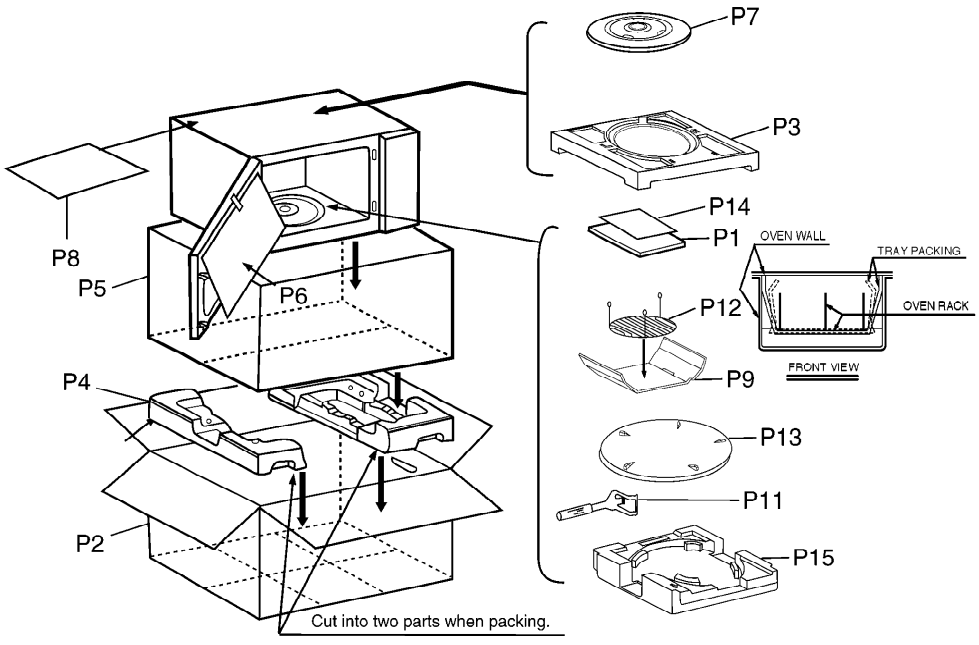

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
P1		F00035R20BP	INSTRUCTION MANUAL	1	V*** BPQ
P1		F00035R20GP	INSTRUCTION MANUAL	1	V*** GPG
P1		F00035Q50EP	INSTRUCTION MANUAL	1	F*** EPG, Q*** EPG
P1		F00035Q30BP	INSTRUCTION MANUAL	1	T*** BPQ
P2		F01025R70HBP	PACKING CASE, PAPER	1	V653WF BPQ
P2		F01025R70CBP	PACKING CASE, PAPER	1	V653CF BPQ
P2		F01025R60SBP	PACKING CASE, PAPER	1	V623MF BPQ
P2		F01025R60HGP	PACKING CASE, PAPER	1	V653WF GPG
P2		F01025R60CGP	PACKING CASE, PAPER	1	V653CF GPG
P2		F01025R60SGP	PACKING CASE, PAPER	1	V623MF GPG
P2		F01025R80HEP	PACKING CASE, PAPER	1	F663WF EPG
P2		F01025R70HEP	PACKING CASE, PAPER	1	F653WF EPG
P2		F01025R80SEP	PACKING CASE, PAPER	1	F623MF EPG
P2		F01025R20HBP	PACKING CASE, PAPER	1	V453WF BPQ
P2		F01025R20HGP	PACKING CASE, PAPER	1	V453WF GPG
P2		F01025R20SGP	PACKING CASE, PAPER	1	V423MF GPG
P2		F01025Q80HBP	PACKING CASE, PAPER	1	T553WF BPQ
P2		F01025Q70SBP	PACKING CASE, PAPER	1	T523MF BPQ
P2		F01026A00HEP	PACKING CASE, PAPER	1	Q553WF EPG
P2		F01025Q90SEP	PACKING CASE, PAPER	1	Q523MF EPG
P2		F01025Q30HBP	PACKING CASE, PAPER	1	T543WF BPQ
P2		F01025Q50HEP	PACKING CASE, PAPER	1	Q543WF EPG
P3		F01045Q00AP	UPPER FILLER	1	
P4		F01055Q00AP	LOWER FILLER	1	
P5		F01068100XN	P.E.BAG	1	
P6		F01078100XN	DOOR SHEET	1	
P7		F06015Q00AP	COOKING TRAY	1	
P8		F01924T00AP	SHEET	1	V***MF, V***CF, F***MF, T***MF, Q***MF
P9		F01085R00AP	RACK PACKING	1	V*** BPQ, V*** GPG, F653WF EPG
P9		F01085R00BP	RACK PACKING	1	F663WF EPG, F623MF EPG
P11		F10855R00BP	PIZZA PAN HANDLE	1	F663WF EPG, F623MF EPG
P12		F060V5R00BP	OVEN RACK	1	V*** BPQ
P12		F060V5U00XN	OVEN RACK	1	V*** GPG, F*** EPG
P13		F46065R00BP	PIZZA PAN	1	F663WF EPG, F623MF EPG
P14		F01695M70BP	SERVICE CENTER LIST	1	
P15		F01135R00AP	PIZZA PAN FOAM	1	F663WF EPG, F623MF EPG

16. DIGITAL PROGRAMMER CIRCUIT (BPQ & GPG MODELS)

SCHEMATIC DIAGRAM

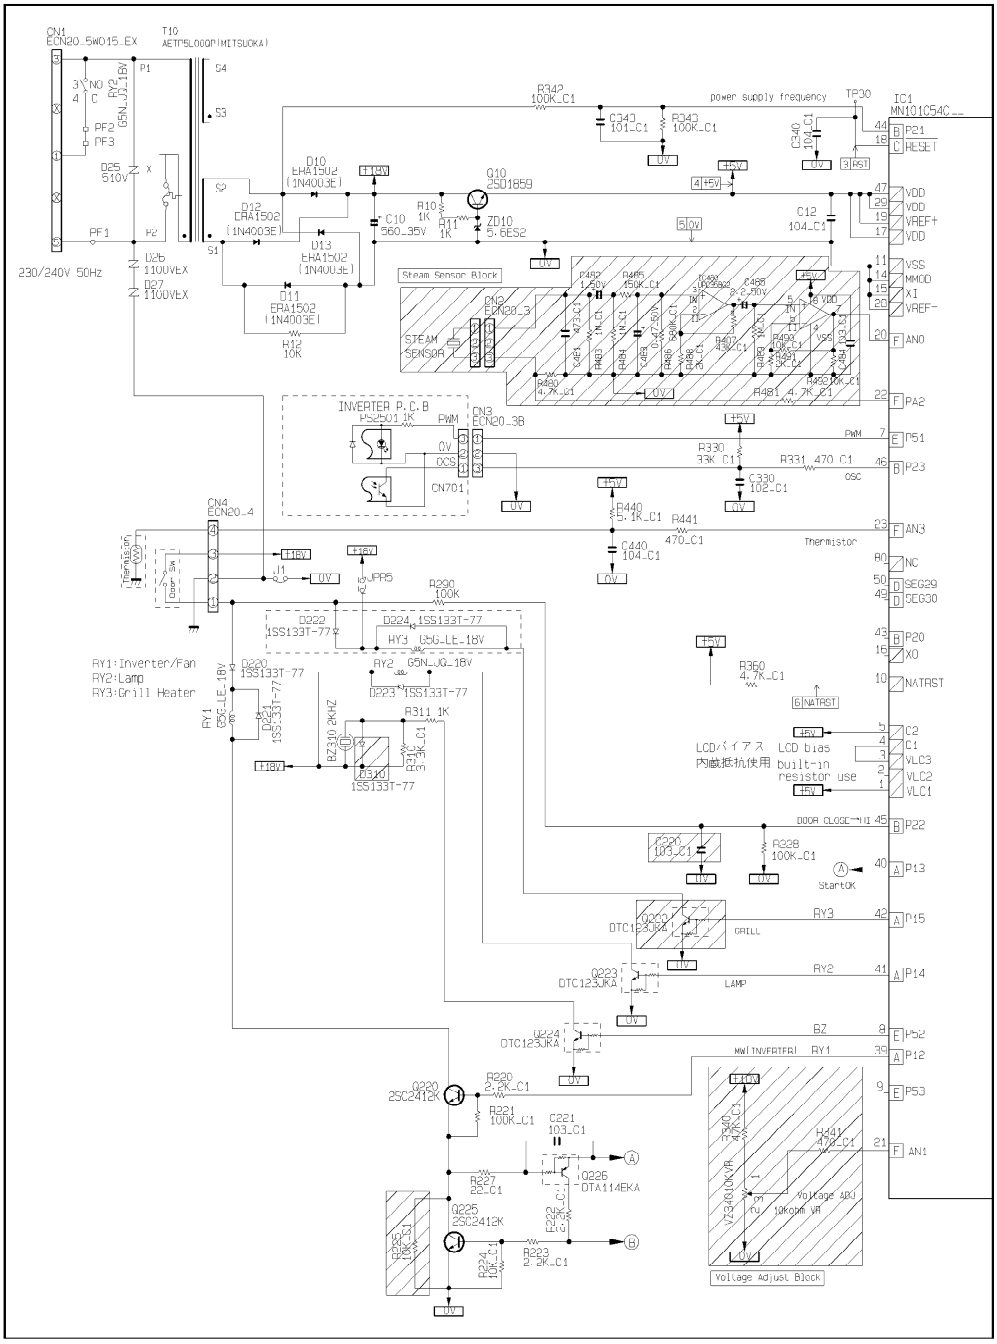
CN1
ECN20_5W015_EX
T10
AETMSL000M(MITSUOKA)
230/240V 50Hz
power supply frequency
TP30
IC1
MN101C54C__
Steam Sensor Block
STEAM SENSOR
CN2
ECN20_3
INVERTER P.C.B
CN3
ECN20_3B
CN701
CN4
ECN20_4
Thermistor
Door SW
RY1:Inverter/Fan
RY2:Lamp
RY3:Grill Heater
LCDバイアス
内蔵抵抗使用
LCD bias
built-in
resistor use
DOOR CLOSE
StartOK
GRILL
LAMP
MW(INVERTER)
Voltage ADJ
10kohm VR
Voltage Adjust Block
Thermistor
OSC
PWM
NATRST
VDD
VSS
MMOD
XI
XO
VREF+
VREF-
AN0
AN1
AN3
PA2
P51
P23
P20
P21
RESET
SEG29
SEG30
C2
C1
VLC3
VLC2
VLC1
P22
P13
P15
P14
P52
P12
P53

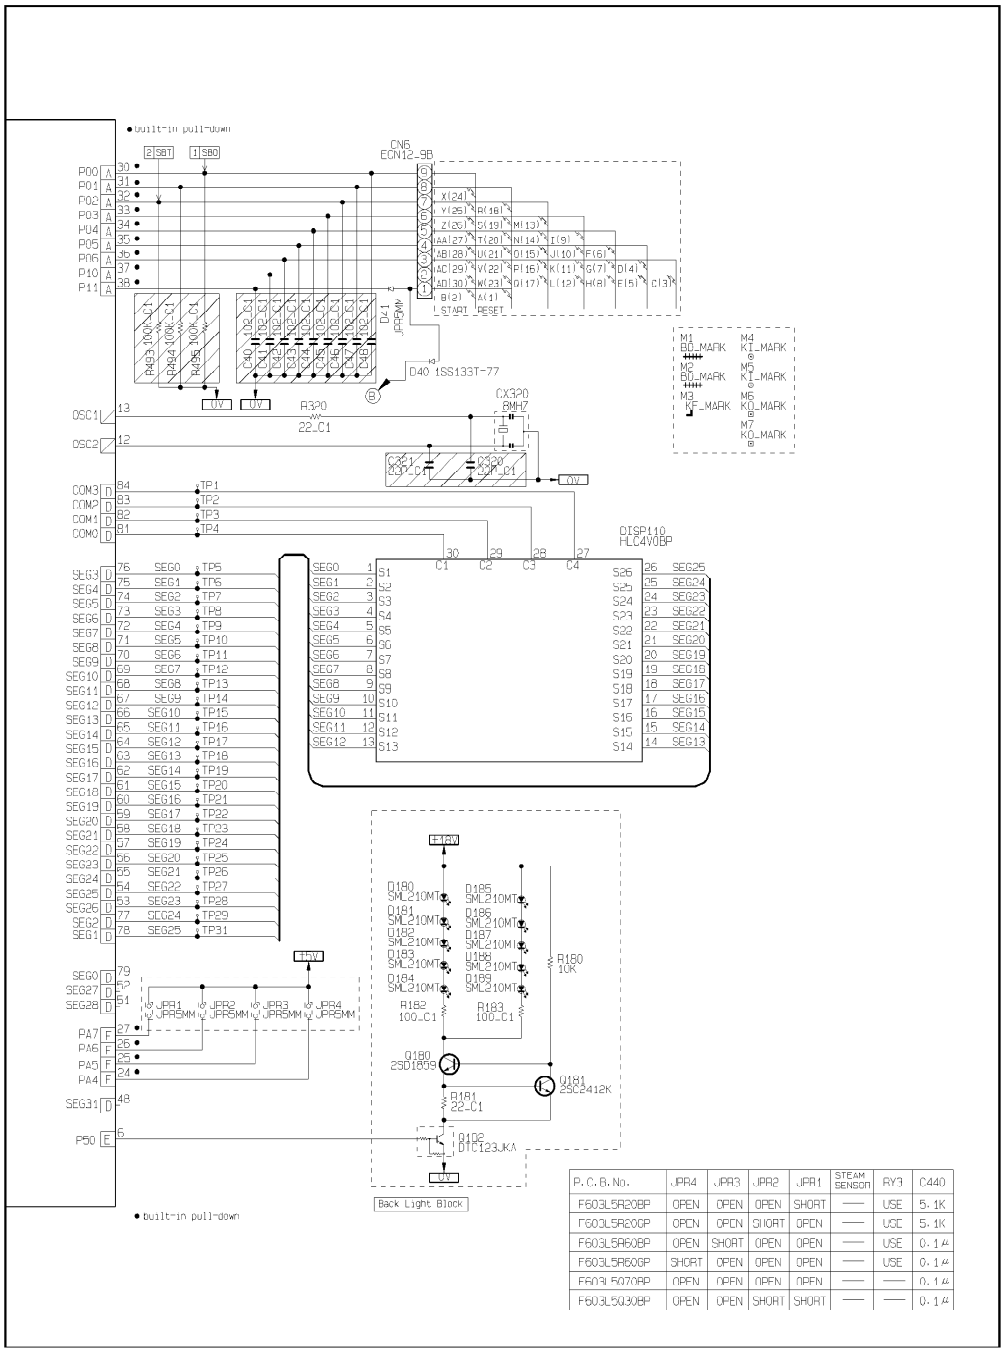

P.C.B.No.	JPR4	JPR3	JPR2	JPR1	STEAM SENSOR	RY1	C440
F603L5R20BP	OPEN	OPEN	OPEN	SHORT	——	USE	5.1K
F603L5R20CP	OPEN	OPEN	SHORT	OPEN	——	USE	5.1K
F603L5R60BP	OPEN	SHORT	OPEN	OPEN	——	USE	0.1μ
F603L5R60CP	SHORT	OPEN	OPEN	OPEN	——	USE	0.1μ
F603L5Q70BP	OPEN	OPEN	OPEN	OPEN	——	——	0.1μ
F603L5Q90BP	OPEN	OPEN	SHORT	SHORT	——	——	0.1μ

17. DIGITAL PROGRAMMER CIRCUIT (EPG MODELS)

SCHEMATIC DIAGRAM

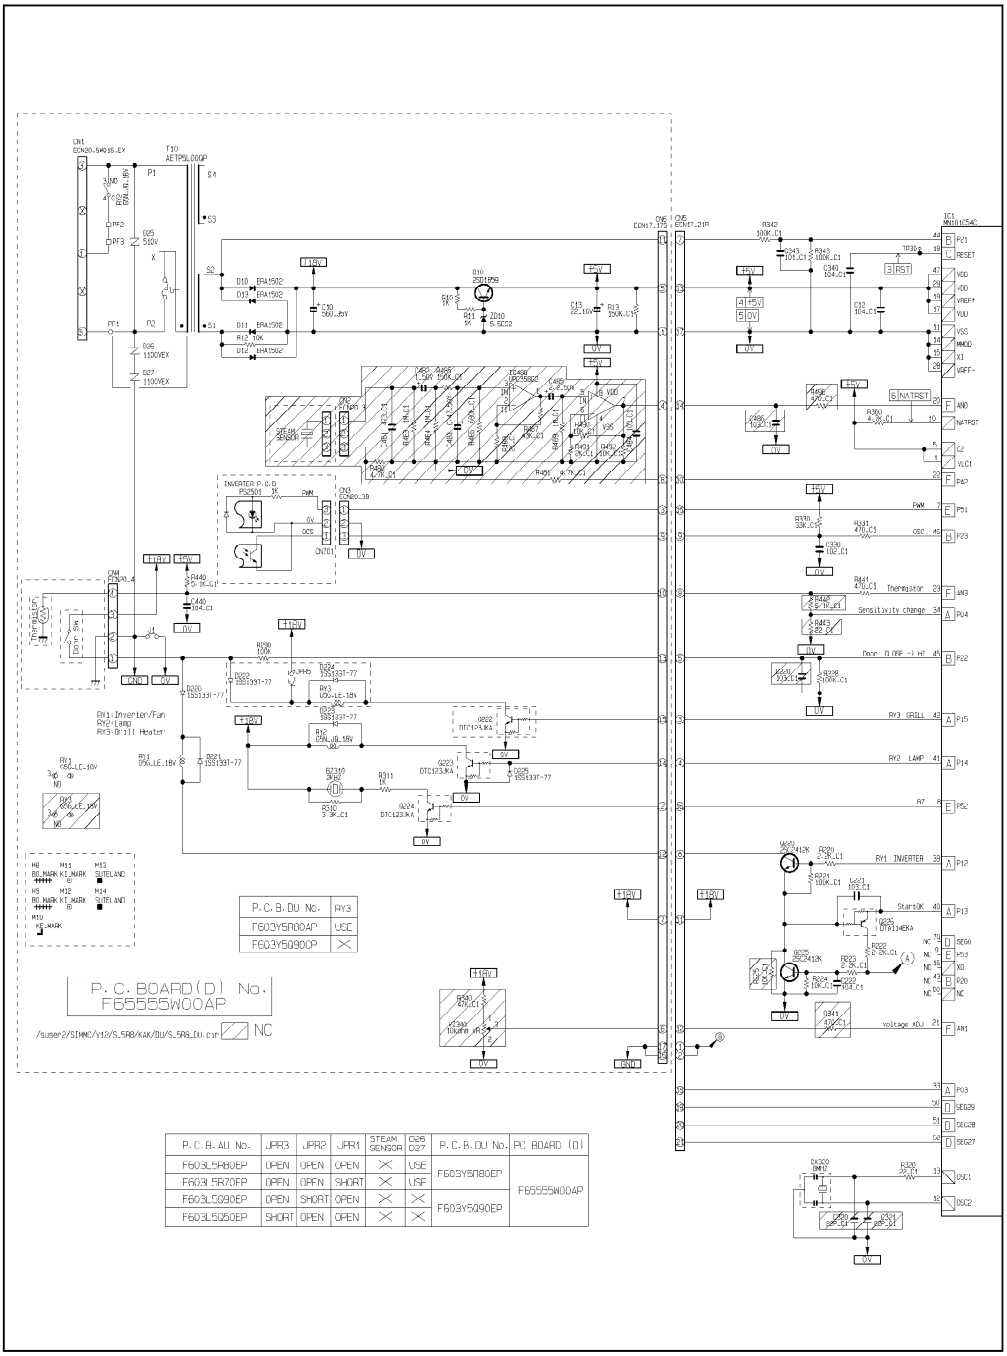

P.C.B.DU No.	RY3
F603Y5080AP	USE
F603Y5090EP	✕

P. C. BOARD(D) No.
F65555W00AP

/suser2/SIMMC/Y12/S_5AB/KAK/DU/S_5AB_DU.cir ✕ NC

P.C.B.AU No.	JPR3	JPR2	JPR1	STEAM SENSOR	D26 D27	P.C.B.DU No.	PC BOARD (D)
F603L5AB0EP	OPEN	OPEN	OPEN	✕	USE	F603Y5080EP	F65555W00AP
F603L5A70FP	OPEN	OPEN	SHORT	✕	USE		
F603L5090EP	OPEN	SHORT	OPEN	✕	✕	F603Y5090EP	
F603L5050EP	SHORT	OPEN	OPEN	✕	✕		

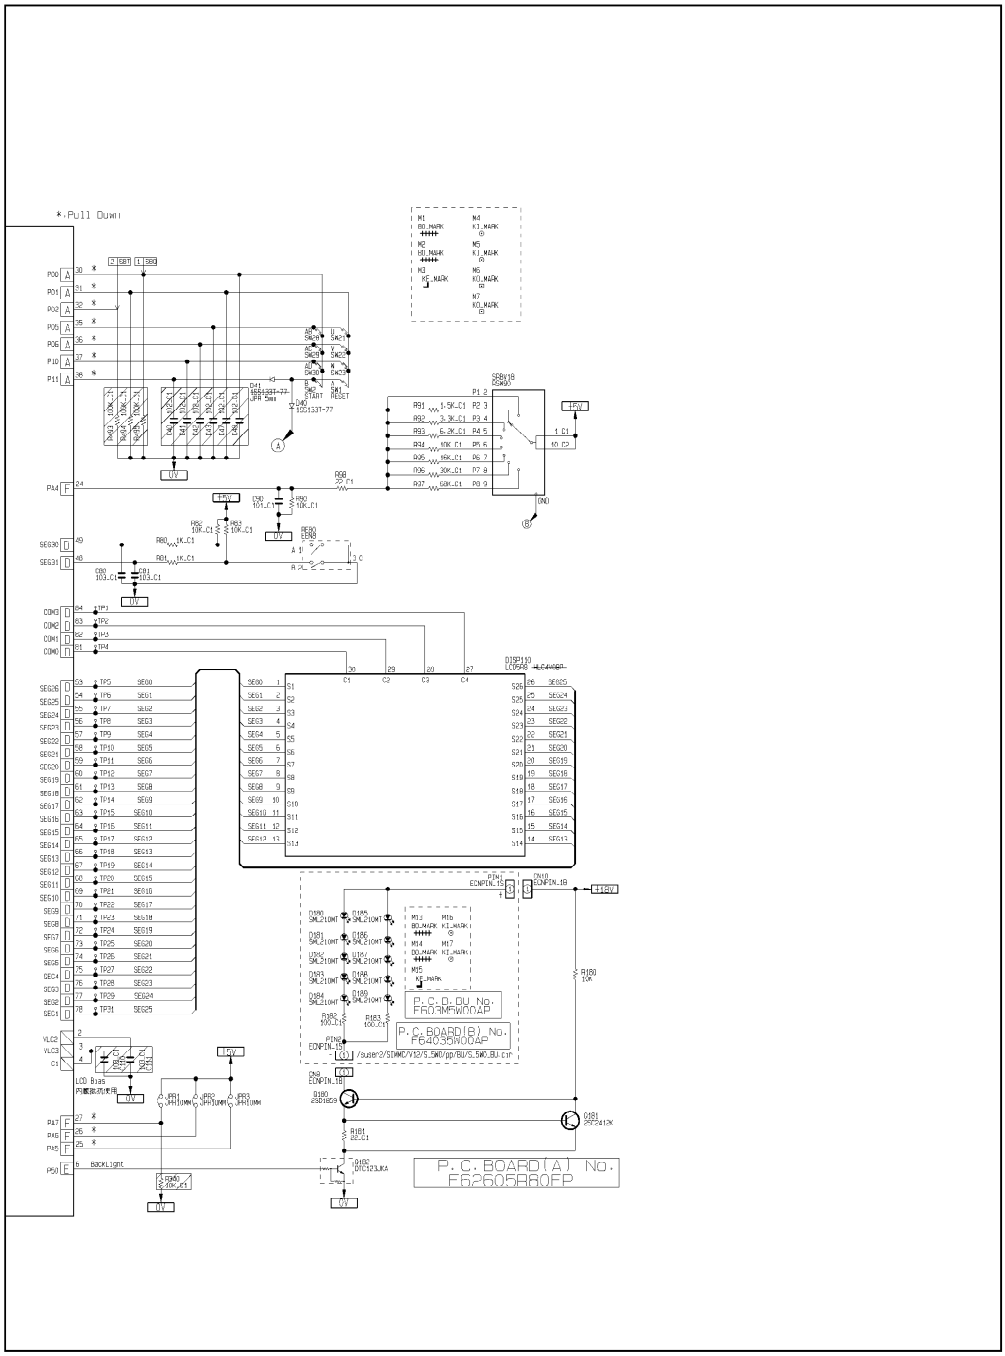

18. DIGITAL PROGRAMMER CIRCUIT (BPQ & GPG MODELS)

PARTS LIST

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
BZ310		AEFBAT2001	BUZZER	1	2.0KHz
C221		AECUU06F103Z	CHIP CAPACITOR	1	0.01 μ F/50V
C343		AECUU06C101J	CHIP CAPACITOR	1	100PF/50V
C12, C340, C440		AECUT06F104Z	CHIP CAPACITOR	3	0.1 μ F/25V
C330		AECUU06R102K	CHIP CAPACITOR	1	1000PF/50V
C10		AECETK1V561B	AL CHEM CAPACITOR	1	560 μ F/35V
CN1		AEEMXH01505W	CONNECTOR	1	5 Pin
CN3		F03524U00AP	CONNECTOR	1	
CN4		AEEMXH00F04W	CONNECTOR	1	4 Pin
CN6		AEEM09FDZBTM	CONNECTOR	1	9 Pin
CX320		AEFOS800MG06	CERAMIC RESONATOR	1	8.0MHz
DISP110		AEDDHJ4V00BP	LCD	1	
DISP1 HOLDER		F66175E40XN	LCD HOLDER	1	
		F67525E40XN	DIFFUSION SHEET	1	
D10-D13		AESSRCT1A6-E	DIODE	4	
D40, D220-D224		AESS133T-77	DIODE	6	
D25		AERZ511NS10D	VARSITOR	1	
D26, D27		AERZ102KD10A	VARSITOR	2	
D180-D189		AESQPY1112H	CHIP-LED	10	
IC1		MN101C54CEJ	L.S.I	1	
Q226		AESA14EKE	CHIP DIGI-TRANSISTOR	1	
Q182, Q222, Q223, Q224		AESC23JKE	CHIP DIGI-TRANSISTOR	4	
Q10, Q180		2SD1859TV2Q	TRANSISTOR	2	
Q181, Q220, Q225		2SC2412KT146	CHIP TRANSISTOR	3	
R182, R183		AERJ06J101R	CHIP RESISTOR	2	100 Ω, 1/16W, 5%
R224		AERJ06J103R	CHIP RESISTOR	1	10K, 1/16W, 5%
R221, R228, R342, R343		AERJ06J104R	CHIP RESISTOR	4	100K, 1/16W, 5%
R181R320, R227		AERJ06J220R	CHIP RESISTOR	3	22 Ω, 1/16W, 5%
R220, R222, R223		AERJ06J222R	CHIP RESISTOR	3	2.2K, 1/16W, 5%
R310		AERJ06J332R	CHIP RESISTOR	1	3.3K, 1/16W, 5%
R330		AERJ06J333R	CHIP RESISTOR	1	33K, 1/16W, 5%
R331, R441		AERJ06J471R	CHIP RESISTOR	2	470 Ω, 1/16W, 5%
R360		AERJ06J472R	CHIP RESISTOR	1	4.7K, 1/16W, 5%
R440		AERJ06J512R	CHIP RESISTOR	1	5.1K, 1/16W, 5%
R10, R11, R311		AERDS2TJ102T	CARBON RESISTOR	3	1K, 1/4W, 5%
R12, R180		AERDS2TJ103T	CARBON RESISTOR	2	10K, 1/4W, 5%
R290		AERDS2TJ104T	CARBON RESISTOR	1	100K, 1/4W, 5%
RY1, RY3		AEGG5G1A18	POWER RELAY	2	
RY2		AEBJQ1A18	POWER RELAY	1	
T10		AETP5L00QP	LOW VOLTAGE TRANSFORMER	1	
ZD10		AESZMTZJ5R6B	ZENER DIODE	1	

19. DIGITAL PROGRAMMER CIRCUIT (EPG MODELS)

PARTS LIST

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
BZ310		AEFBAT2001	BUZZER	1	2.0KHz
C80, C81, C221		AECUU06F103Z	CHIP CAPACITOR	3	0.01 μ F/50V
C90, C343		AECUU06C101J	CHIP CAPACITOR	2	100PF/50V
C12, C222, C340, C440		AECUT06F104Z	CHIP CAPACITOR	4	0.1 μ F/25V
C330		AECUU06R102K	CHIP CAPACITOR	1	1000PF/50V
C10		AECETK1V561B	AL CHEM CAPACITOR	1	560 μ F/35V
C13		AECETS1C220B	AL CHEM CAPACITOR	1	22 μ F/16V
CN1		AEEMXH01505W	CONNECTOR	1	5 Pin
CN3		F03524U00AP	CONNECTOR	1	
CN4		AEEMXH00F04W	CONNECTOR	1	4 Pin
CN5		AEEM17F9604S	CONNECTOR	1	17 Pin
CN6		AEEM17F9604S	CONNECTOR	1	17 Pin
CX320		AEFOS800MG06	CERAMIC RESONATOR	1	8.0MHz
DISP110		AEDDHJ5R80EP	LCD	1	
DISP1 HOLDER		F66175W00AP	LCD HOLDER	1	
		F67525E40XN	DIFFUSION SHEET	1	
D10-D13		AESSRCT1A6-E	DIODE	4	
D40, D220-D225		AESS133T-77	DIODE	7	
D25		AERZ511NS10D	VARSITOR	1	
D26, D27		AERZ102KD10A	VARSITOR	2	
D180-D189		AESQPY1112H	CHIP-LED	10	
PIN1, PIN2		AEPINIPS-1E7		2	
IC1		MN101C54CEK	L.S.I	1	
Q226		AESA14EKE	CHIP DIGI-TRANSISTOR	1	
Q182, Q222, Q223, Q224		AESC23JKE	CHIP DIGI-TRANSISTOR	4	
Q10, Q180		2SD1859TV2Q	TRANSISTOR	2	
Q181, Q220, Q225		2SC2412KT146	CHIP TRANSISTOR	3	
SW1, SW2, SW21-SW23, SW28-SW30		EVQ11L05R	SLIGHT TOUCH SWITCH	8	
RSW90		AEVQSR172	REVOLVING SWITCH	1	
RE80		AEVQECR1611E	REVOLVING ENCODER	1	
R182, R183		AERJ06J101R	CHIP RESISTOR	2	100 Ω, 1/16W, 5%
R80, R81		AERJ06J102R	CHIP RESISTOR	2	1K, 1/16W, 5%
R82, R83, R90, R94, R224		AERJ06J103R	CHIP RESISTOR	5	10K, 1/16W, 5%
R221, R228, R342, R343		AERJ06J104R	CHIP RESISTOR	4	100K, 1/16W, 5%
R91		AERJ06J152R	CHIP RESISTOR	1	1.5K, 1/16W, 5%
R13		AERJ06J154R	CHIP RESISTOR	1	150K, 1/16W, 5%
R95		AERJ06J163R	CHIP RESISTOR	1	16K, 1/16W, 5%
R98, R181, R320		AERJ06J220R	CHIP RESISTOR	3	22 Ω, 1/16W, 5%
R220, R222, R223		AERJ06J222R	CHIP RESISTOR	3	2.2K, 1/16W, 5%
R96		AERJ06J303R	CHIP RESISTOR	1	30K, 1/16W, 5%
R92, R310		AERJ06J332R	CHIP RESISTOR	2	3.3K, 1/16W, 5%
R330		AERJ06J333R	CHIP RESISTOR	1	33K, 1/16W, 5%
R331, R441		AERJ06J471R	CHIP RESISTOR	2	470 Ω, 1/16W, 5%
R360		AERJ06J472R	CHIP RESISTOR	1	4.7K, 1/16W, 5%
R440		AERJ06J512R	CHIP RESISTOR	1	5.1K, 1/16W, 5%
R93		AERJ06J622R	CHIP RESISTOR	1	6.2K, 1/16W, 5%
R97		AERJ06J683R	CHIP RESISTOR	1	68K, 1/16W, 5%
R10, R11, R311		AERDS2TJ102T	CARBON RESISTOR	3	1K, 1/4W, 5%
R12, R180		AERDS2TJ103T	CARBON RESISTOR	2	10K, 1/4W, 5%
R290		AERDS2TJ104T	CARBON RESISTOR	1	100K, 1/4W, 5%
RY1, RY3		AEGG5G1A18	POWER RELAY	2	
RY2		AEBJQ1A18	POWER RELAY	1	

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
T10		AETP5L00QP	LOW VOLTAGE TRANSFORMER	1	
ZD10		AESZMTZJ5R6B	ZENER DIODE	1	

03/03 / S-5R2, S-5R5 / S-5R6, S-5R7 / S-5R8, S-5Q3 / S-5Q5, S-5Q7 / S-5Q8, S-5Q9 / S-6A0 / Printed in China